

Shimmy

User Manual

SHIMMY HOME DISPENSER



Less Waste, More Love





What's in the box?

- Shimmy Home dispenser
- Tray (removeable)
- Shimmy Home cartridge
- 4 AA batteries
- Custom mounting tape
- User Manual



GET STARTED

1. Load batteries into battery pack
2. Remove safety top from cartridge and load (directions on next page)
3. Press on / off button to turn on
4. **WITH NEW CARTRIDGE:**
Trigger the dispenser around 5 times to get gel to load
5. Show us your Shimmy!
by tagging @getshimmy



Getting to know your Shimmy Home



Loading & changing your cartridge



GET YOUR NEW CARTRIDGE READY

Remove safety top.
Do NOT remove the applicator.

REMOVE OLD CARTRIDGE

Take lid off of your Shimmy Home, pull up on cartridge, remove, and recycle in accordance with local regulations.



PUT IN NEW CARTRIDGE

Turn cartridge upside down, insert, rotate until you feel the two valves connect, replace top of dispenser.



* Your Shimmy Home should be used only with Shimmy Home hand sanitizer cartridges.

Understanding the lights

TURNING ON

Blue light flashes 3 times

LOW BATTERY

Red light remains on

TURNING OFF

Red light flashes 3 times

LOW LIQUID

Blue light remains on

If both the battery and liquid are low, the red light will remain on until the batteries have been replaced.

NOTE: Please do not remove your Shimmy Home cartridge until it is completely empty. Removing the Shimmy Home cartridge before it is empty will reset the counter connected to the low liquid light and may cause the low liquid light to fail to illuminate properly when the cartridge is actually empty.




Mounting your Shimmy

OPTION 1: TAPE

Clean and dry desired mounting location. Remove one tape liner and stick to etched mark on the back of your Shimmy Home or tray. Remove liner on the other side of tape. Press and hold in desired location for 30 seconds.

OPTION 2: SCREWS

Remove tray and hold up to your desired location. Mark mounting holes with a pencil. Install screws of the appropriate size and type on pencil marks and hang your Shimmy Home.

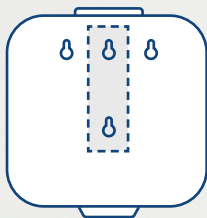


Removing the tray

Place your Shimmy Home on a flat surface.

Gently pull up on the dispenser while holding the tray down with your other hand.

Pull forward on the Shimmy Home to remove.

To re-install, place the two center holes on the back of your Shimmy Home on the corresponding pegs of the tray. Gently press down on the dispenser until it locks in place.

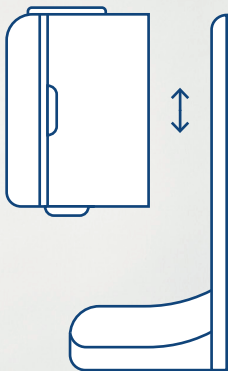

PLEASE READ THIS INFORMATION BEFORE USING YOUR SHIMMY HOME AND KEEP IT HANDY FOR REFERENCE

All information and any updates can be found at www.getshimmy.com

In order to ensure your personal safety, use the Shimmy Home only in the directed manner. Improper use can result in potential electrical shock or fire hazards.

1. Shimmy Home is not a toy. Any usage by children should be supervised by an adult.
2. It is important to use, mount and store your Shimmy Home in a safe, dry place:
 - Do NOT immerse in water or expose to rain.
 - Do NOT leave on an unstable surface that could cause your Shimmy Home to fall.
 - Do NOT expose your Shimmy Home to fire or extreme temperatures. Exposure to fire or temperature above 130°C/265°F may cause explosion.
 - Do NOT situate your Shimmy Home near heat sources such as radiators, heat registers, stoves, or other appliances (including electronic equipment) that produce heat.
 - Do NOT use in the vicinity of anything that might generate sparks. The sanitizer in your Shimmy Home is formulated with alcohol, which is flammable and could cause a fire if ignited by a spark.
 - Care should be taken to prevent liquids and foreign objects from entering the Shimmy Home dispenser, for example through any openings or vents.
3. Only use Shimmy Home hand sanitizer cartridges in your Shimmy Home. Follow instructions for inserting and changing the Shimmy Home cartridges to prevent spills and poor performance.
4. Use only a warm damp cloth to clean. Do not use solvents, abrasives, etc. with your Shimmy Home.
5. Do NOT modify or attempt to repair your Shimmy Home. Do NOT use any attachments with your Shimmy Home unless they are sold or recommended by Shimmy for use with the Shimmy Home.

Please contact Shimmy Customer Service at hello@getshimmy.com if your Shimmy Home is damaged or malfunctioning, for example if:

- Objects have fallen into or liquid has been spilled into the enclosure of your Shimmy Home
 - Your Shimmy Home has been exposed to excessive moisture
 - Your Shimmy Home has been dropped or its enclosure is damaged
 - Your Shimmy Home exhibits a marked change in performance or does not operate normally
6. If you do not plan to use your Shimmy Home for a month or longer, remove the batteries to prevent potential damage or corrosion.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Distributed By:

Shimmy Products, LLC
101 Federal Street, 19th Floor
Boston, Massachusetts 02110
www.getshimmy.com

Questions? Comments?
We'd love to hear from you!

Please email hello@getshimmy.com



To learn more about the organizations we have partnered with to offset carbon & plastic, please visit www.getshimmy.com

100% Shimmy Guarantee

If you're not satisfied with your purchase, please email us at hello@getshimmy.com

