

IR REMOTE CONTROL CODES					
Netptune™ Partial Sun & Full Sun Outdoor Smart TVs					
COMMAND	ENCODING	DATA	GROUP	CODE	Frequency
...	NEC T/3T-32	0x6996FB04	0x04FB	0x96	38.1KHz
-/List	NEC T/3T-32	0xB34CFB04	0x04FB	0x4C	
0	NEC T/3T-32	0xEF10FB04	0x04FB	0x10	
1	NEC T/3T-32	0xEE11FB04	0x04FB	0x11	
2	NEC T/3T-32	0xED12FB04	0x04FB	0x12	
3	NEC T/3T-32	0xEC13FB04	0x04FB	0x13	
4	NEC T/3T-32	0xEB14FB04	0x04FB	0x14	
5	NEC T/3T-32	0xEA15FB04	0x04FB	0x15	
6	NEC T/3T-32	0xE916FB04	0x04FB	0x16	
7	NEC T/3T-32	0xE817FB04	0x04FB	0x17	
8	NEC T/3T-32	0xE718FB04	0x04FB	0x18	
9	NEC T/3T-32	0xE619FB04	0x04FB	0x19	
Arrow Down	NEC T/3T-32	0xBE41FB04	0x04FB	0x41	
Arrow Left	NEC T/3T-32	0xF807FB04	0x04FB	0x07	
Arrow Right	NEC T/3T-32	0xF906FB04	0x04FB	0x06	
Arrow Up	NEC T/3T-32	0xBF40FB04	0x04FB	0x40	
AV Input	NEC T/3T-33	0XA55AFB04	0x04FB	0x5A	
Back	NEC T/3T-32	0xD728FB04	0x04FB	0x28	
Blue	NEC T/3T-32	0x9E61FB04	0x04FB	0x61	
CC/SUB	NEC T/3T-32	0xC639FB04	0x04FB	0x39	
Channel Down	NEC T/3T-32	0xFE01FB04	0x04FB	0x01	
Channel Up	NEC T/3T-32	0xFF00FB04	0x04FB	0x00	
Discrete Off	NEC T/3T-33	0x3AC5FB04	0x04FB	0xC5	
Discrete On	NEC T/3T-34	0x3BC4FB04	0x04FB	0xC4	
Exit	NEC T/3T-32	0XA45BFB04	0x04FB	0x5B	
Favorite	NEC T/3T-32	0xE11EFB04	0x04FB	0x1E	
Green	NEC T/3T-32	0x8E71FB04	0x04FB	0x71	
Guide	NEC T/3T-32	0x54ABFB04	0x04FB	0xAB	
HDMI 1	NEC T/3T-33	0x31CEFB04	0x04FB	0xCE	
HDMI 2	NEC T/3T-34	0x33CCFB04	0x04FB	0xCC	
HDMI 3	NEC T/3T-35	0x16E9FB04	0x04FB	0xE9	
Home	NEC T/3T-32	0x837CFB04	0x04FB	0x7C	
Info	NEC T/3T-32	0x55AAFB04	0x04FB	0xAA	
Inputs	NEC T/3T-32	0xF40BFB04	0x04FB	0x0B	
Movies	NEC T/3T-32	0x7E81FB04	0x04FB	0x81	
Mute	NEC T/3T-32	0xF609FB04	0x04FB	0x09	
Netflix	NEC T/3T-32	0xA956FB04	0x04FB	0x56	
Pause	NEC T/3T-32	0x45BAFB04	0x04FB	0xBA	
Play	NEC T/3T-32	0x4FB0FB04	0x04FB	0xB0	
Power	NEC T/3T-32	0xF708FB04	0x04FB	0x08	
Prime Video	NEC T/3T-32	0xA35CFB04	0x04FB	0x5C	
Record	NEC T/3T-32	0x42BDFB04	0x04FB	0xBD	
Red	NEC T/3T-32	0x8D72FB04	0x04FB	0x72	
SAP	NEC T/3T-32	0x6E91FB04	0x04FB	0x91	
Search	NEC T/3T-32	0x8778FB04	0x04FB	0x78	
Select/OK	NEC T/3T-32	0xBB44FB04	0x04FB	0x44	
Settings	NEC T/3T-32	0xBC43FB04	0x04FB	0x43	
Stop	NEC T/3T-32	0x4EB1FB04	0x04FB	0xb1	
TV	NEC T/3T-32	0xF00FFB04	0x04FB	0x0F	
Volume Down	NEC T/3T-32	0xFC03FB04	0x04FB	0x03	
Volume Up	NEC T/3T-32	0xFD02FB04	0x04FB	0x02	
Yellow	NEC T/3T-32	0x9C63FB04	0x04FB	0x63	