HARDWARE LIST

		0		
S x 16 30mm	L x 1	T x 2	R x 1	




VIDEO ASSEMBLY

WARNING

Adult assembly required. Product includes small parts with potentially hazardous sharp points and sharp edges in the unassembled state. Keep unassembled parts away from children.

G x 1

COMPONENT LIST

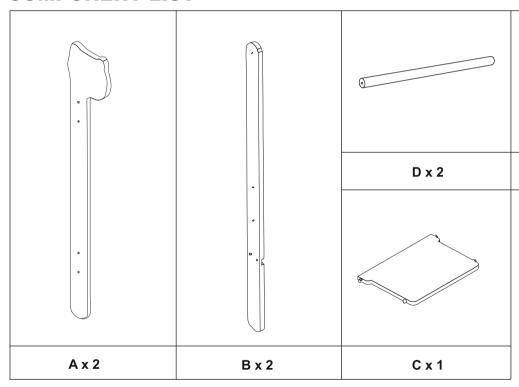



E x 2

- 1. Follow the assembly instructions carefully.
- 2. Check to ensure all parts, fasteners and hardware are present and in good order.


F x 2

- 3. To prevent product damage, assemble the furniture on the carton.
- 4. Clean surface of furniture with a duster or damp cloth only. Do not use abrasive cleaners. Scuff Marks may be removed with a soft damp cloth and small amount of Gumption (can be purchased from local supermarket)

Note: Using the wrong screw will cause damage.

Before beginning assembly, identify each type of screw. Carefully study the screw diagrams (ACTUAL SIZE).


ASSEMBLY INSTRUCTIONS

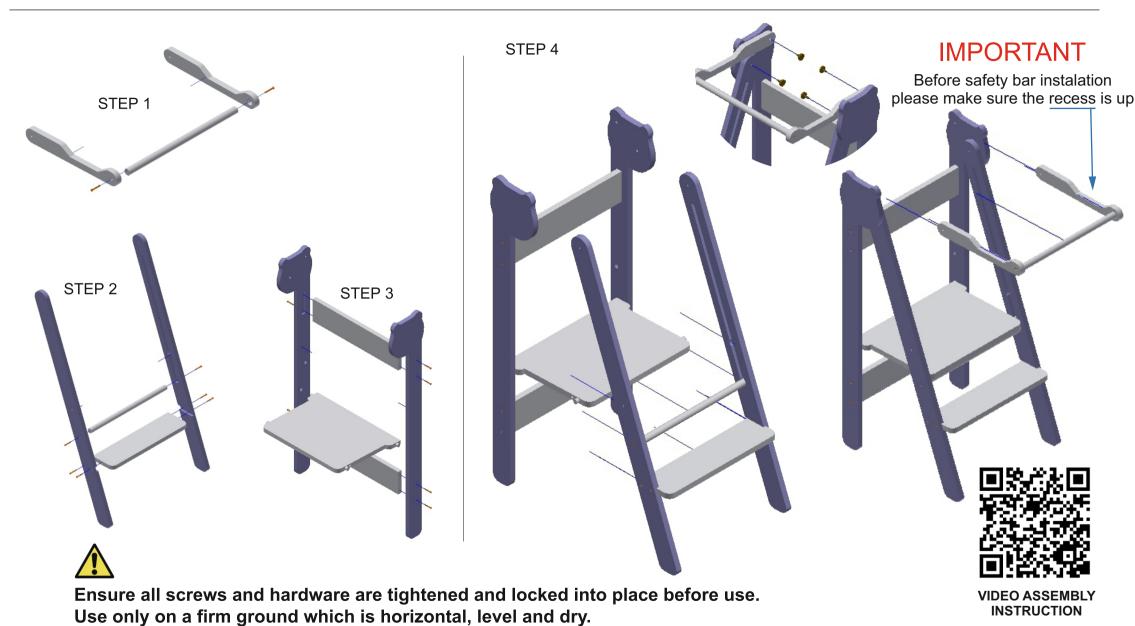


POSITION CHANGE INSTRUCTION


The highest position of the platform. 45 cm from the floor.



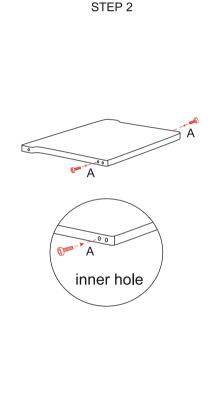

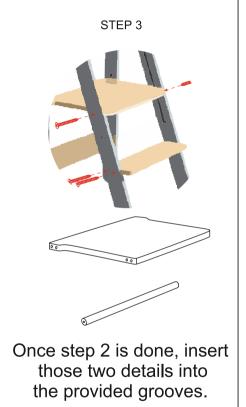

WARNING

 

Adult assembly required. Product includes small parts with potentially hazardous sharp points and sharp edges in the unassembled state. Keep unassembled parts away from children.

Helpful Advice

- 1. Follow the assembly instructions carefully.
- 2. Check to ensure all parts, fasteners and hardware are present and in good order.
- 3. To prevent product damage, assemble the furniture on the carton.
- 4. Clean surface of furniture with a duster or damp cloth only. Do not use abrasive cleaners. Scuff Marks may be removed with a soft damp cloth and small amount of Gumption (can be purchased from local supermarket)

Note: Using the wrong screw will cause damage.







Step stool in kitchen helper position must be used under the direct supervision of an adult Not suitable for children under 18 months.

POSITION CHANGE INSTRUCTION

The lowest position of the platform. **35 cm** from the floor.




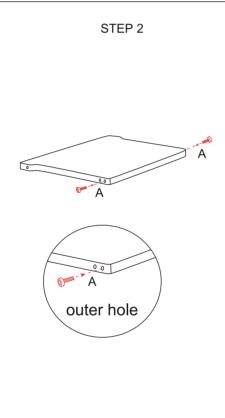

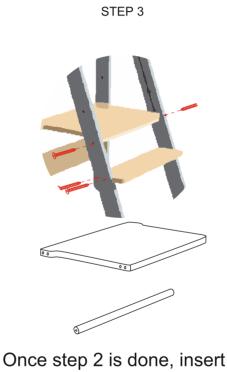

Once step 2 is done, insert those two details into the provided grooves.

 WARNING



Helpful Advice

- 1. Follow the assembly instructions carefully.
- 2. Check to ensure all parts, fasteners and hardware are present and in good order.
- 3. To prevent product damage, assemble the furniture on the carton.
- Clean surface of furniture with a duster or damp cloth only. Do not use abrasive cleaners. Scuff Marks may be removed with a soft damp cloth and small amount of Gumption (can be purchased from local supermarket)

Note: Using the wrong screw will cause damage.





Step stool in kitchen helper position must be used under the direct supervision of an adult. Not suitable for children under 18 months.