 


COMPACT REFRIGERATOR

Instruction Manual

SKU: RF-H/RF-S

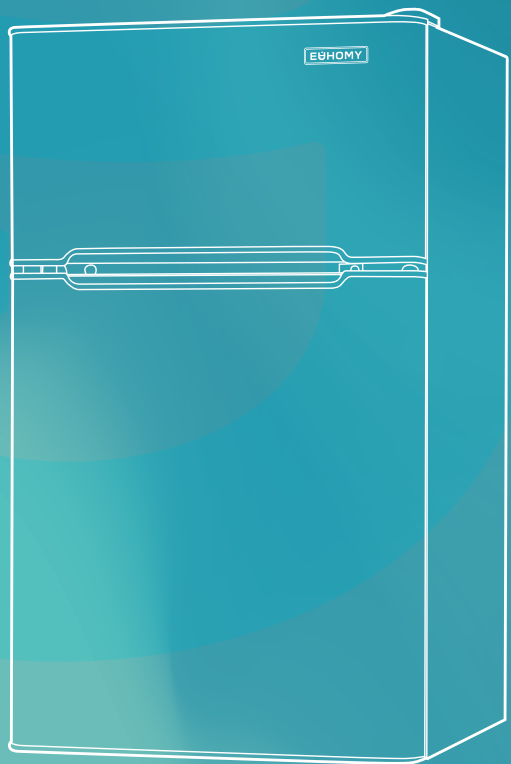

Congratulations

Dear Customer:

Welcome to the Euhomy family. Thank you for purchasing one of our products.

Our goal is to provide you with superior service. If there is anything missing from or wrong with your order, or if you have any questions about using our product, PLEASE contact us.

Email: support@euhomy.com

Facebook: [@Euhomy.Official](https://www.facebook.com/Euhomy.Official)

The Euhomy team is available 24/7 to address your questions, comments, and concerns. Your satisfaction is our ultimate goal. We want to make everything right so you'll share your positive experience with other shoppers on Amazon.

If you experience any problems, please send an email to support@euhomy.com.

Our mission:

* To be the most trusted appliance brand.

* To create practical, compact appliances that better your life.

Be sure to register at
www.euhomy.com/register
for updates, warranty, and other relevant information.

I Life tips

QUESTION	ANSWER
Does our refrigerator have automatic defrosting function?	Our freezer needs manual defrosting. Please unplug it, wait for it to melt and wipe it with towel or tilt it a little to drain the water.
The refrigerator cannot reach a temperature below 40°F.	The temperature of the refrigerator is related to many factors. For example: 1. Many things are stored in it 2. The high frequency of door opening will affect the temperature. We suggest that you reduce the frequency of opening the door and reduce the amount of food in the refrigerator. Then please observe for 24 hours to see if the refrigerator temperature will change.
Can I extend the warranty?	We currently only provide a one-year warranty for our freezers and it can't be extended.
What is the proper temperature?	The temperature of the freezer can reach below -0.04°F. And the temperature range of our fridge is from 32°F- 50°F. Please kindly note that the temperature will be a little higher when you measure the temperature with the door open.
What do the numbers 1-7 on the temperature adjustment stand for?	The refrigerator part has 7 levels of temperature adjustment. The numbers 1-7 are the highest temperature to the lowest temperature. In other words, if you think the temperature is too low and the food is frozen, you could try to adjust the temperature to 4 or below.

TABLE OF CONTENTS

Safety precautions	2-3
Parts And Features	4
Installing Your Refrigerator	5-6
Installation Requirements	7
Installation Instructions	8
Refrigerator Features and Use General Features	9
Defrosting Your Refrigerator	10
Food Storage Information	11-12
Proper Refrigerator Care and Cleaning	13
Troubleshooting	14
Warranty	15

I Safety Precautions



WARNING

READ ALL OF THE INSTRUCTIONS BEFORE USING THIS APPLIANCE. WHEN USING THIS APPLIANCE, ALWAYS EXERCISE BASIC SAFETY PRECAUTIONS, INCLUDING THE FOLLOWING:



NOTE

If the refrigerator/freezer has been placed in a horizontal or tilted position for any period of time, please wait 24 hours before plugging the unit in.

- Use this appliance only for its intended purpose as described in this use and care guide.
 - This refrigerator/freezer must be properly installed in accordance with the installation instructions before it is used. See grounding instructions in the installation section.
 - This refrigerator/freezer should not be recessed or built-in an enclosed cabinet. It is designed for freestanding installation only.
 - Never unplug your refrigerator/freezer by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
 - **DANGER** – Risk of Fire or Explosion. Flammable refrigerant used. Do not use mechanical devices to defrost refrigerator. Do not puncture the refrigerant tubing.
 - If your old refrigerator/freezer is not being used, we recommend that you remove the doors. This will reduce the possibility of danger to children.
 - **WARNING:** After your refrigerator/freezer is in operation, do not touch the cold surfaces in the freezer compartment, particularly when your hands are damp or wet. Skin may stick to these extremely cold surfaces.
 - Do not refreeze foods that have been thawed completely. The United States Department of Agriculture in Home and Garden Bulletin No. 69 reads: "...You may safely refreeze frozen foods that have thawed if they still contain ice crystals or if they are still cold-below 40°F".
"...Thawed ground meats, poultry, or fish that have any off-odor or off-color should not be refrozen and should not be consumed. Thawed ice cream should be discarded. If the odor or color of any food is poor or questionable, please discard it. The food may be dangerous to eat."
"...Even partial thawing and re-freezing reduce the eating quality of foods, particularly fruits, vegetables, and prepared foods. The eating quality of red meats is affected less than that of many other foods. Use refrozen foods as soon as possible, to save as much of their eating quality as you can."
 - Do not use any electrical device or sharp instruments when defrosting your refrigerator.
 - Unplug your refrigerator/freezer before cleaning or before making any repairs.
- Note:** If for any reason this product requires service, we strongly recommend that a certified technician perform service.
- Do not operate your refrigerator in the presence of explosive fumes.

I Safety Precautions

CAUTION – RISK OF FIRE OR EXPLOSION

Dispose of property in accordance with Federal or Local Regulations. Flammable refrigerant.

DANGER

Risk of child entrapment. Before you throw away your old refrigerator or freezer, remove the doors. Leave the shelves in place so that children cannot easily climb inside.

Thank you for purchasing our product. This easy-to-use manual will guide you in getting the best use of your appliance.

Remember to record the model and serial number that appears on a label in back of the appliances.

Model number

 
Serial number

Date of purchase

Staple your receipt to your manual.

You will need it to obtain warranty service.

I Parts And Features

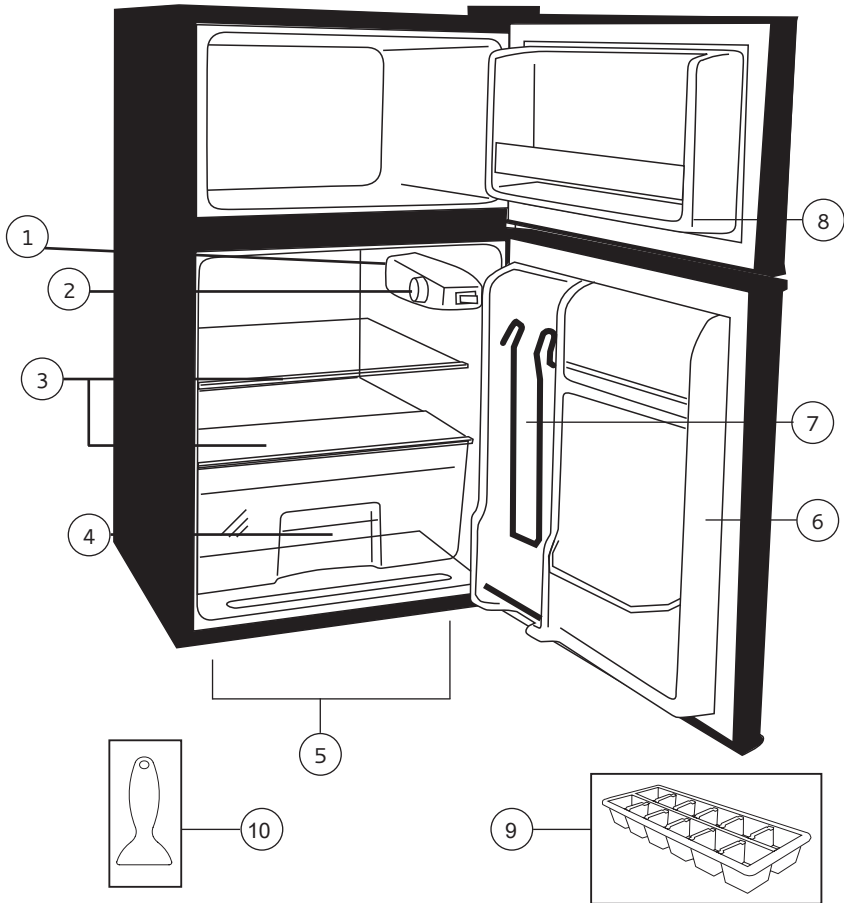

1. Interior Light
2. Temperature Control
3. Refrigerator Shelves
4. Crisper
5. Front Levelling Legs

6. Refrigerator Door Shelves
7. "Dispense-A-Can" Storage
8. Freezer Door Shelf
9. Ice Cube Tray
10. Ice Scraper

Installing Your Refrigerator

UNPACKING YOUR REFRIGERATOR

1. Remove all packaging material. This includes the foam base and the adhesive tape holding the refrigerator accessories inside and outside.
2. Inspect and remove all packing, tape or printed materials before powering on the refrigerator.

CAUTION

Risk of fire or explosion due to puncture of refrigerant tubing. Flammable refrigerant used. Handle with care when moving the refrigerator to avoid either damaging the refrigerant tubing or increasing the risk of a leak.

LEVELING YOUR REFRIGERATOR

- Your refrigerator has two levelling legs which are located in the front bottom corners of your refrigerator. After properly placing your refrigerator in its final position, you can level your refrigerator.
- Levelling legs can be adjusted by turning them counter clockwise to raise your refrigerator or by turning them clockwise to lower your refrigerator. The refrigerator door will close easier when the levelling legs are extended.

PROPER AIR CIRCULATION

- To ensure that your refrigerator works at the maximum efficiency it was designed for, you should install it in a location where there is proper air circulation, plumbing and electrical connections.
- The following are recommended clearances around the refrigerator:
 - Sides... 3/4" (19mm)
 - Top.....2" (50mm)
 - Back.....2" (50mm)

WARNING

ELECTRICAL REQUIREMENT – SHOCK HAZARD

ELECTRICAL REQUIREMENT

- Ensure that there is a suitable power outlet (120 volts, 15 amps outlet) with proper grounding to power the refrigerator.
- Avoid the use of three prong adapters or cutting off the third grounding prong in order to accommodate a two-prong outlet. This is a dangerous practice since it provides no effective grounding for the refrigerator and may result in shock hazard.

WARNING

USE OF EXTENSION CORDS– POTENTIAL SAFETY HAZARD

Installing Your Refrigerator



WARNING

USE OF EXTENSION CORDS- POTENTIAL SAFETY HAZARD

Use of Extension Cords

- Avoid the use of an extension cord because it can pose a potential safety hazard under certain conditions. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounding plug and a 3-slot outlet that will accept the plug. The marked rating of the extension cord must be equal to or greater than the electrical rating of the appliance.

DO NOT USE EXTENSION CORD LONGER THAN 12 FT.

Installation Limitations

 
- Do not install your refrigerator in any location not properly insulated or heated, e.g., garage, etc. Your refrigerator was not designed to operate in temperature settings below 55° Fahrenheit.
- Select a suitable location for the refrigerator on a hard, flat surface away from direct sunlight or heat source, e.g., radiators, baseboard heaters, cooking appliances, etc. Any floor unevenness should be corrected with the levelling legs located on the front bottom corners of the refrigerator.

Installation Requirements


Door Reversing (Optional)

WARNING

Follow all the steps when reversing the door swing. Failure to follow these instructions, leaving out parts, or overtightening screws, can lead to the door falling off and result in injury and property damage.

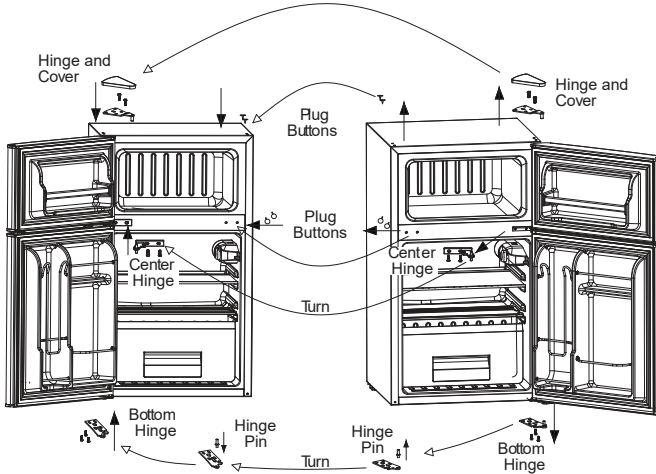

1. Ensure that the unit is unplugged before starting door reversal.
2. Remove the 2 plug buttons on the left side on the top of the cabinet.
3. Remove the plastic hinge cover by prying from the back and pulling forward.
4. Remove the 2 screws from the top hinge.
5. Lift the freezer door up and off the center hinge (right side). Set the freezer door on a non-scratching surface with the outside facing upwards.
6. Open the fresh food door and remove the center hinge by removing the 2 screws. Lift the hinge to remove.
7. Lift the fresh food door off of the bottom hinge. Set the fresh food door on a non-scratching surface with the outside facing upwards.
8. Lay the refrigerator on its back to get access to the bottom hinge.
9. Remove the bottom hinge by removing the 3 screws. Lift the hinge to remove.
10. Remove the hinge pin on the bottom hinge and reinstall on the opposite side of the hinge.

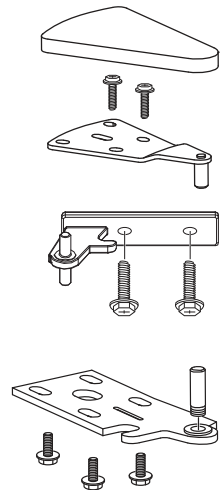 

Installation Instructions

 
REVERSE DOOR (Optional) (Cont .)

- 11.Remove the 2 screws from the left side and relocate to the right side and replace the plastic locker on the fresh food door and freezer door bottom in the spare bag.
- 12.Remove the two plug buttons on the left side at the center and install them on the right side.
- 13.Turn and relocate the center hinge to the left side and reinsert the screws. Do not tighten screws yet.
- 14.Align the fresh food door on the left center hinge. With the magnetic gasket holding the door in place, make sure that the door is aligned with the refrigerator, and secure the bottom hinge on the left side with 3 screws.
- 15.Ensure that the fresh food door is properly sealed and levelled before tightening the center hinge screws and the bottom hinge screws.
- 16.Lift the refrigerator to an upright position.
- 17.Place the freezer door on the center hinge over the pin. Ensure that the door is aligned horizontally and vertically, and that the gasket seals on all sides.
- 18.Turn and relocate the top hinge on the left side with screws.
- 19.Replace the hinge cover on top of the hinge by sliding it from front to back.
- 20.Put the 2 plug buttons on the right side on top of the cabinet.
- 21.Open and close both the freezer and fresh food doors several times to ensure that each door is positioned correctly and that the gasket is sealed tightly. If it isn't, please adjust the door again.
- 22.Wait at least 30 minutes before plugging in the refrigerator to allow the refrigerant to settle down. Then plug in the unit.

Door Alignment

Freezer Door: (see fig. #1)

- 1.Remove the top hinge cover.
- 2.Loosen the top hinge screws using a phillips head screwdriver.
- 3.Adjust the door or put a spacer in between and then tighten the screws.
- 4.Replace the top hinge cover.

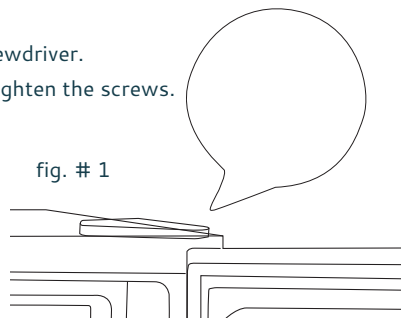

Refrigerator Features and Use General Features

ADJUSTABLE TEMPERATURE DIAL:

 
Your refrigerator will automatically maintain the temperature level you select. The temperature control dial has 7 settings plus 0. 1 is the warmest and 7 is the coldest. Turning the dial to 0 will stop cooling in both the refrigeration and freezer sections. Set the dial at 4 at first, and allow 24 hours to pass before adjusting the temperature to your needs.

NOTE

If the refrigerator/freezer has been placed in a horizontal or tilted position for any period of time, please wait 24 hours before plugging the unit in.

Refrigerator Interior Shelves To remove or replace a full-width slide-out shelf: (See fig. # 2)

1. Gently tilt the shelf upwards and slide it forward until the shelf has been completely removed.
2. To replace the shelf, gently slide the shelf back into position.

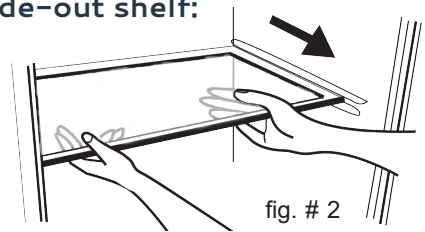


USING THE DISPENSE-A-CAN

Your refrigerator is equipped with the convenient "Dispense-A-Can" compartment. Each compartment can hold up to six cans. Simply load the cans from the top. To dispense a can, simply draw one out from the bottom. It is that easy.


CRISPER

 Your refrigerator has a clear crisper. Grasp the top of the crisper and gently slide ours. Push back to replace.

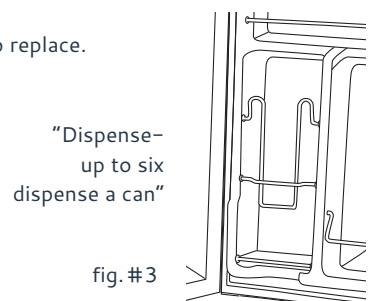

Defrosting Your Refrigerator

 - For maximum energy efficiency, defrost the freezer section as soon as frost starts to accumulate to a thickness of 1/4" or more on freezer walls. Note that frost tends to accumulate more during the summer months.

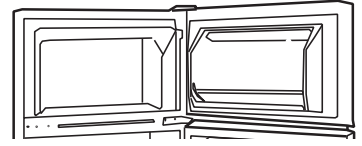

DANGER

Risk of fire or explosion due to puncture refrigerant tubing. Flammable refrigerant used. Do not use metal instruments to defrost refrigerator. Do not puncture refrigerant tubing.

- To defrost the freezer, remove food and ice cube tray from the freezer section. Turn temperature control dial to "0" position. Defrosting may take a few hours. To speed up defrost time, keep the door open and place a bowl of warm water inside the freezer.
- During the defrosting process, water will accumulate. Use a towel to wipe off excess dripping water. Do not leave unattended.
- After defrosting, empty and wipe down the interior of the freezer. You may now reset your refrigerator to the desired temperature and return the food back into the refrigerator.
- Your freezer is equipped with an ice scraper for your convenience.

Maintenance

Risk of fire or explosion. Flammable refrigerant used. Do not puncture of refrigerant tubing. To be repaired only by trained authorized service personnel. Consult Repair Manual before attempting to service this product. All Safety Precautions Must be followed. Component parts shall be replaced with like components to minimize the risk of possible ignition due to incorrect parts or improper service.

I Food Storage Information

FRESH FOOD:

- When storing fresh food that is not pre-packaged, be sure to wrap or store food in airtight and moisture proof material unless otherwise noted. This will ensure proper shelf life and prevent the transfer of odors and tastes.
- Wipe containers clean before storing to avoid needless spills.
- Eggs should be stored in an upright position in their original carton to maximize shelf life.
- Fruit should be washed and dried, and then stored in sealed plastic bags before storing in the refrigerator.
- Vegetables with skins should be stored in plastic bags or containers. Leafy vegetables should be washed and drained and then stored in plastic bags or containers.
- Warm food should be allowed to cool down first before storing in the refrigeration. This will prevent unnecessary energy use.
- Fresh seafood should be used the same day as purchased.
- When storing meats in the fresh food section, keep in the original packaging or rewrap as necessary.
- Follow the suggestions below for safe storage:
 - Chicken 1-2 Days
 - Ground Beef 1-2 Days
 - Cold Cuts 3-5 Days
 - Steaks/Roasts 3-5 Days
 - Smoked/Cured Meats 7-10 Days

I Food Storage Information

FROZEN FOOD:

- Wipe containers clean before storing to avoid needless spills.
- Warm food should be allowed to cool before storing in the freezer. This will prevent unnecessary energy use.
- When storing meats, keep in the original packaging or rewrap as necessary.
- Proper freezer storage requires correct packaging. All foods must be in packages that do not allow the flow of air or moisture in or out. Improper storage will result in odor and taste transfer and will result in the drying out of the improperly packaged food. Follow package or container instructions for proper storage.
- Packaging Recommendations:
 - Plastic containers with air-tight lids
 - Heavy duty aluminium foil
 - Plastic wrap made from saran film
 - Self-sealing plastic bags
- Do not refreeze defrosted/thawed foods.
- It is recommended that the freezing date be marked on the packaging.
 - These are some suggestions for safe storage:
 - TV Dinners 3 – 4 Months
 - Fresh Shrimp, scallops, crawfish 3 – 6 Months
 - Hamburger & stew meats 3 – 4 Months
 - Ground Turkey, veal, pork 3 – 4 Months
 - Chops 4 – 6 Months
 - Steaks 6 – 12 Months
 - Chicken or turkey 1 year

I Proper Refrigerator Care and Cleaning

CLEANING AND MAINTENANCE

WARNING

To avoid electric shock, always unplug your refrigerator first before cleaning. Ignoring this warning may result in death or injury.

CAUTION

Before using cleaning products, always read and follow the manufacturer's instructions and warnings to avoid personal injury or product damage.

GENERAL:

- Prepare a cleaning solution by mixing 3–4 tablespoons of baking soda with warm water. Use a sponge or soft cloth, dampened with the cleaning solution, to wipe down your refrigerator. Rinse
- with clean warm water and dry with a soft cloth.
- Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads. Some of these chemicals may dissolve, damage and/or discolor your refrigerator.

DOOR GASKETS:

- Clean door gaskets every three months according to general instructions. Gaskets must be kept clean and pliable to assure a proper seal
- Petroleum jelly applied lightly on the hinge side of gaskets will keep the gasket pliable and ensure a good seal.

LIGHT BULB REPLACEMENT

1. Switch off the power to the refrigerator.
2. Gently pull out the clear cover.
3. Replace with same type light bulb rated at 10 watts.
4. Push the clear cover back into place.

POWER INTERRUPTIONS

- Occasionally there may be power interruptions due to thunderstorms or other causes. Remove the power cord from AC outlet when a power outage occurs. When the power has been restored, plug the power cord back into AC outlet.

WARNING

IF OUTAGE IS FOR A PROLONGED PERIOD, INSPECT AND DISCARD SPOILED OR THAWED FOOD IN FREEZER AND REFRIGERATOR. CLEAN REFRIGERATOR BEFORE REUSING.

VACATION AND MOVING CARE

- When going away for a long time, please remove all food from refrigerator and freezer, move the temperature DIAL to the OFF position and clean the refrigerator and door gaskets according to "General cleaning" section. Prop doors open, so that air can circulate inside. When moving, always move the refrigerator in an upright position. Do not transport with the unit lying down. Possible damage to the sealed system could occur.

Trouble Shooting

You may try to solve the following simple problems by yourself. If them cannot be solved, please contact the after-sales department.

Refrigerator does not operate:	<ul style="list-style-type: none"> ·Check if thermostat control is not in the "0" position. ·Check if refrigerator is plugged in. ·Check if there is power at the AC outlet, by checking the circuit breaker.
Food temperature seems too warm:	<ul style="list-style-type: none"> ·Frequent door openings. ·Allow time for recently added warm food to reach fresh food temperature. ·Check gaskets for proper seal. ·Adjust temperature control to a colder setting.
Food temperature is too cold:	<ul style="list-style-type: none"> ·If temperature control setting is too cold, adjust to a warmer setting and allow several hours for temperature to adjust.
Refrigerator runs too frequently:	<ul style="list-style-type: none"> ·This may be normal to maintain constant temperature during high temperature and humid days. ·Doors may have been opened frequently or for an extended period of time. ·Check gasket for proper seal. ·Check to see if doors are completely closed.
Moisture build up on interior or exterior of the refrigerator:	<ul style="list-style-type: none"> ·This is normal during high humidity periods. ·Prolonged or frequent door openings. ·Check door gaskets for proper seal.
Refrigerator has an odor:	<ul style="list-style-type: none"> ·Interior needs cleaning. ·Foods improperly wrapped or sealed are giving off odors.
Refrigerator door does not shut properly:	<ul style="list-style-type: none"> ·Level the refrigerator. ·Re-align refrigerator door. ·Check for blockages, e.g. food containers, crisper cover,shelves, bins, etc.
Popping or cracking sound when the compressor turns on:	<ul style="list-style-type: none"> ·Check to ensure that the refrigerator is level. ·The floor may be uneven or weak. The refrigerator rocks on the floor when it is moved slightly. Ensure that the floor can adequately support the refrigerator. Level the refrigerator by putting wood or metal shims under part of the refrigerator. ·The refrigerator is touching the wall. Re-level the refrigerator and move it from the wall. See the "Installing Your Refrigerator" section.
Refrigerator light does not work:	<ul style="list-style-type: none"> ·Check power supply. ·Tighten bulb in socket. ·Replace burned out bulb.

Warranty

Euhomy offers a limited 1-year warranty ("warranty period") on all of our products purchased new and unused from Euhomy company, with an original proof of purchase and where a defect has arisen, wholly or substantially, as a result of faulty manufacture, parts or workmanship during the warranty period. The warranty does not apply where damage is caused by other factors, including without limitation:

- (a) normal wear and tear;
- (b) abuse, mishandling, accident, or failure to follow operating instructions;
- (c) exposure to liquid or infiltration of foreign particles;
- (d) servicing or modifications of the product other than by Euhomy;
- (e) commercial or non-household use.

The Euhomy warranty covers all costs related to restoring the proven defective product through repair or replacement of any defective part and necessary labor so that it conforms to its original specifications. A replacement product may be provided instead of repairing a defective product. Euhomy's exclusive obligation under this warranty is limited to such repair or replacement. A receipt indicating the purchase date is required for any claim, so please keep all receipts in a safe place. Although greatly appreciated, the product registration is not required to activate any warranty and product registration does not eliminate the need for the original proof of purchase. The warranty becomes void if attempts at repair are made by non-authorized third parties and/or if spare parts, other than those provided by Euhomy, are used.

You may also arrange for service after the warranty expires at an additional cost. These are our general terms for warranty service, but we always urge our customers to reach out to us with any issue, regardless of warranty terms. If you have an issue with a Euhomy product, please contact us (support@euhomy.com), and we will do our best to resolve it for you.

The logo for Euhomy, featuring the word "EÜHOMY" in a bold, white, sans-serif font. The letter "Ü" is stylized with a dot above it and a horizontal line through it. The background is a teal gradient with a large, faint, stylized "E" shape and two hexagons.

Refresh Every Moment!



Email: support@euhomy.com



Facebook: [@Euhomy.Official](https://www.facebook.com/Euhomy.Official)