

SOUNDPEATS Capsule3 Pro User Guide

First Start

Open the charging case lid and take out both earbuds, then remove the protective film and put the earbuds back into the case.

1. With the case open, press and hold the button on the charging case for 3s, the LED indicator on case flashes white and both earbuds enter the pairing mode.
2. Activate Bluetooth on the device, and choose "SOUNDPEATS Capsule3 Pro" on Bluetooth List to pair.

Reset

1. Place both earbuds back into the charging case and make sure the earbuds sit well in the charging case(the light on the charging case will flashes twice).
2. With the case lid open, press and hold the charging case button for 10s until the light flashes red and white alternately twice, the reset is complete.
3. Close the case lid and reopen to activate the earbuds.

Wearing

1. Identify the left and right.
2. Rotate the headset to find the most comfortable fit.

Touch Control

Power On	Auto: Open up the case lid Manually: Press and hold the MFB for 1.5s
Power Off	Auto: Place earbuds back into the case and close the case Manually: Press and hold the MFB for 10s
Play / Pause	Double tap the MFB
Volume-	Single tap the left MFB
Volume +	Single tap the right MFB
Next Track	Press and hold the right MFB for 1.5s
Answer / Hang Up Phone Call	Double tap the MFB

Reject Phone Call	Press and hold the MFB for 1.5s
Switch Between Two Calls	Press and hold the MFB for 2s
Manually Enter Pairing Mode	Press and hold the MFB on the case for 3s
Activate Voice Assistant	Triple tap the right MFB
Enter/Exit Game Mode	Triple tap the left MFB
Normal Mode / ANC Mode / Transparency Mode	Press and hold the left MFB for 1.5s

Q&A

Q1: What does the LED on the charging case indicate?

It shows the remaining power of the charging case.

Charging Case Indicator	Battery Left
Green	100%-50%
Yellow	49%-10%
Red	Less than 10%

While charging the charging case, the LED flashes slowly.

Charging Case Indicator	Battery Power
Red	Less than 20%
Yellow	20%-69%
Green	70%-99%
Solid Green	100%

Q2: How to charge the case?

1. Use a Type-C adapter to charge the case (current not over 1A).
2. Please charge the earbuds and case at least once every 3 months when not in use for a long time.

Q3: Why are the earbuds still connected to my phone after returning the earbuds to the case?

1. The charging case is out of battery. The case will not turn the earbuds off if the case battery is dead.
2. Please make sure the earbuds sit well in the charging case, and that the charging contacts on both the earbuds and charging case are clean. Please try something like a microfiber cloth to clean the contacts.

Q4: The battery life is not as advertised?

A single charge will not give you 52 hours of constant playtime. The earbuds work for around 8 hours per charge with normal mode and around 5.5 hours per charge with ANC mode. The charging case provides another 5.5 recharges.