 
 
Package Content



Specifications

Bluetooth Profile	Bluetooth 5.0
Bluetooth Chip	RTL8763VHC
Maximum Working Range	33 feet / 10m (no obstadle)
Play Time	4 hours (varies by valume and audio file)
Earbuds Charging Time	1.5 hour
Charging Case Charging Time	2 hours
Charging Case Recharge Earbuds	9 times (both earbuds)

Product Diagram



Button Control

Power On	Take out the earbuds from charging case
	Press and hold the MFB for 1s
Power Off	Place back the earbuds into charging case
	Press and hold the MFB for 3s
	In stereo mode, turn off either earbud will switch
	off both units
Play / Pause	Press the MFB once
Play Next / Previous	Double tap left MFB for previous track
	Double tap right MFB for next track

Answer Phone Call	Tap the MFB once
Hang Up	Tap the MFB once
Reject Phone Call	Press the MFB for 1s
Activate Voice	Press the MFB for 1s in play / standby mode
Assistant	
Call Switching	Double tap the MFB to switch between two
	phone calls

Wearing

Identify the left and right earbuds.
Put the earbuds into your ears and adjust to find best angle with microphone downwards.



Get Started

Pairing

- 1.Take out both earbuds from the charging case. The earbuds will pair to each other at first with left indicator going out, and right indicator flashes in red and white with voice prompt "Pairing".
- 2.Activate the Bluetooth in your device and hit "SOUNDPEATS TrueFree+" on the Bluetooth list.
- 3.SOUNDPEATS TrueFree+ can remember previously paired devices. They would automatically connect to the last device they have paired before after being taken out from the case. If they don't connect to each other automatically, please bit the pairing name on the Bluetooth list gaain.

Note:

- 1.The earbuds support working alone. If the earbuds don't pair to each other within 30s, they will enter pairing mode to search for device.
- 2.To force the earbuds enter pairing mode and connect to another device, please press and hold the MFB for 5s while the earbuds are turned off.

Factory Reset

(Try the following steps if you fall building connection between two earbuds, or between earbuds and device.)

1.Clear the pairing record between the earbuds and all your devices.

2.Place back the earbuds, and make sure the charging indicators light up. Press and hold both MFB for 10s until white indicators flash 3 times.

Charge

SOUNDPEATS TrueFree+ is equipped with a charging case for your easy carrying and charging. It can fully charge both earbuds for 9.10 times in total



Charge the earbuds

 Place back the earbuds into charging slot and make sure charging contactors connect.

2. Charging starts with red indicator turning on.

3. White indicator would turn on and stay for 1 minute after fully charged.

Charge the charging case

1. When the charging case battery is running out, the last indicator would flash, please charge the case then.

2.Please charge the case and earbuds at least once every 3 months when not in use for a long time.

To ensure charging safety, please do not use any USB charging adapter with current over 5V 1A. Please do not use quick charger to charge the earbuds and charging case.

Warranty

We warrant this device 12 MONTHS from date of the original purchase for manufacturer defects.

- support@soundpeatsaudio.com
- @ www.soundpeatsaudio.com

Please scan the QR code or search the link below for detailed PDF manual:



https://soundpeatsaudio.com/downloads/



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.