

5 YEAR WARRANTY

Olbertz Holdings Pty Ltd ACN 010 003 933 trading as The Crest Company of 165 South Pine Road, Brendale, Queensland, 4500, Ph: 1800 812 261, www.crest.com.au, warrants that if this Crest product purchased by you from The Crest Company or a retail outlet is found by The Crest Company to be defective in workmanship or materials within 5 years of the date of purchase, The Crest Company will (at its election) either repair that product, replace the product, supply an equivalent product or pay the costs of repairing or replacing the product or acquiring an equivalent product.

This limited warranty will not extend to or cover any expenses associated with removing, demounting the original product or installing the repaired, replaced or equivalent product or all or any of its components, you must bear these expenses. It also does not cover damage or loss resulting from intentional or unintentional misuse of, tampering with, alterations to or incorrect installation of this product or use of this product for purposes other than that for which it is designed or in a manner inconsistent with the product's instructions. This limited warranty also does not apply to damage or loss resulting from fair wear and tear or events beyond The Crest Company control including but not limited to natural disasters.

In order to claim under this warranty, you must contact The Crest Company and return to The Crest Company (via our nominated reply paid address) the product and its components and proof of purchase (including the date and location of purchase) so that The Crest Company can verify the defect and your purchase.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits given by this warranty are in addition to other rights and remedies which you may have under a law in relation to the goods or services to which the warranty relates.

Proudly brought to you by:



PO Box 5658 Brendale QLD Australia 4500

Customer Support 1800 812 261 www.crest.com.au AUSTRALIAN OWNED

BRBFMS FULL MOTION Articulated TV WALL MOUNT 23"-55" SMALL

200 x 200 MAX VESA COMPATIBILITY

75x75,100x100, 100x200, 200x100,200x200

30kg MAX TV WEIGHT

The maximum supported weight is up to 30kg







A SAFETY FIRST

- Installation of this TV Wall Mount will be easier with two people.
- 2. Some images in this guide may vary slightly from the actual components supplied.
- 3. Ensure this instruction manual is completely read and understood before attempting installation.
- This TV Wall Mount MUST NOT be installed solely in plasterboard, fibre cement and similar surfaces.
- This TV Wall Mount MUST be installed in sound supporting structures such as those made of timber, steel or masonry using appropriate fasteners.
- The supporting structure must be capable of sustaining the combined weight of the TV Wall Mount and the display otherwise the structure must be reinforced.
- The fasteners supplied in this hardware pack allow for fixing into timber and masonry only. If installing into a supporting structure made of steel, appropriate fasteners must be used and sourced from an appropriate supplier.
- 8. Use appropriate tools and safety equipment and ensure adequate ventilation during installation.
- 9. If uncertain about any aspect of installation, contact The Crest Company or an installation professional.
- 10. Please retain these instructions for future reference.

Hardware Kit Contents

ITEM	DESCRIPTION		QTY	ITEM	DESCRIPTION		QTY
M-A	M4 x 14mm Bolt		4	W-A	6.3 x 55mm Lag Bolt		3
М-В	M5 x 14mm Bolt		4	W-B	10 x 6 x 50mm Anchor		3
M-C	M6 x 14mm Bolt		4	W-C	6 x 16 x 1.5mm Washer		3
M-D	M8 x 20mm Bolt		4	А	Wall/Mounting Plate		1
M-E	D5 Washer	0	2	В	Wall Plate Cover		1
M-F	D8 Washer		2	С	6mm Allen Key		1
M-G	Small Spacer		8	D	Wrench	0	1
				Е	Spirit Level		1

Tools Required

DRYWALL INSTALLATION (TIMBER SUPPORTS):

- Adjustable spanner/socket set
- Philips head screwdriver
- Power drill
- High speed 4.5mm drill bit
- Stud finder
- Pencil

MASONRY INSTALLATION:

- Adjustable spanner/socket set
- Philips head screwdriver
- Power drill with hammer function
- 10mm Masonry drill bit
- Pencil
- Hammer

crest


Step 1: Attach Wall Plate to Wall

A. INSTALLING IN DRYWALL (TIMBER SUPPORTS)

WARNING: The Crest Company holds no responsibility for incorrectly installed TV Wall Mounts.

- 1. Locate the centre of the timber studs using a stud finder.

 (NOTE: You must use the centre of the stud to avoid cracking or splitting the timber during installation).
- 2. Mark a minimum of 3 fixing holes over stud centre using the wall plate as a guide. Ensure plate is level. Level must be placed on arm. See Figure 1a.
- 3. Pre-drill holes to a minimum depth of 55mm using a high speed 4.5mm drill bit. If installing in hardwood, larger diameter and deeper holes may be required.
- 4. Attach the wall plate using the lag bolts (W-A) through the washers (W-C). Do not over tighten.

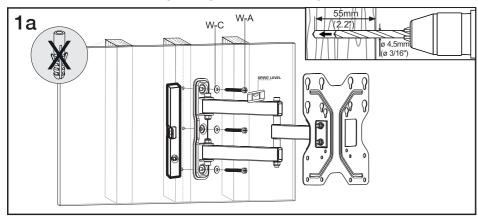


B. INSTALLING IN MASONRY

WARNING: Ensure you have a minimum of 35mm of actual concrete/brick thickness in the hole for the anchors. Do not drill into mortar joints. Installer must verify that the supporting surface will safely support the combined weight of the TV Wall Mount and TV.

The Crest Company holds no responsibility for incorrectly installed TV Wall Mounts.

- 1. Mark a minimum of 3 fixing holes over stud centres using the wall plate as a guide. Ensure plate is level. Level must be placed on arm. See Figure 1b.
- 2. Pre-drill holes to a minimum depth of 60mm using 10mm masonry drill bit. Clean out holes.
- 3. Fully insert concrete anchors (W-B). Tap in with hammer if required.
- 4. Attach wall plate by inserting the lag bolts (W-A) through the washers (W-C) into each concrete anchor (W-B). Do not over tighten.

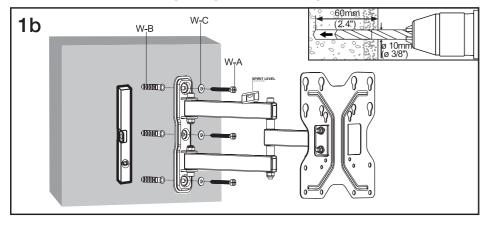

Step 2: Attach Mounting Plate to TV

- 1. Hang the cable clip (B) on the lower arm of the wall mount.
- 2. Using a second person for assistance, lay your TV face down on something soft so as not to scratch the TV screen. Check the back of your TV to find the appropriate mounting pattern.
- 3. Sort through the provided bolts (M-A to M-D) until you find the correct size that easily fits into the back of your TV and fits snugly (the bolt must turn at least 3 full turns) or use spacers. Insert the top two bolts and partially tighten leaving at least a 2mm gap from the back panel. If you feel resistance stop immediately and select a smaller bolt.
- Once you have selected the correct bolts, screw these into the top two points on the TV (fig 3). If the larger bolts are selected (M-D) then use the spacers to create a snugger fit. If no bolts fit you will need to go to your local hardware supplier to find the correct bolt and washer sizes.
- 4. Lift the TV and align the slots on the mounting plate with the two bolts and lower the TV into place. Remember that the bolt needs to turn at least 3 full turns.
- 5. Using the remaining correct mounting bolts, insert these through corresponding washers (M-E to M-F) to attach the bottom holes of the mounting Wall Plate to the rear of the TV. If the larger bolts are selected (M-D) then use the hole spacer

(M-G) to fill out the Wall Plate hole and reduce its size for a snugger fit. To avoid damaging TV, do not over tighten bolts.

The Crest Company is not responsible for any damage caused by screwing the bolt too far into the back of the TV.

