

Description: **Robinhood 60cm 10 Function Pyrolytic Oven**
Model Number: **OBP6010T56G, OBP6010T56SS**



IMPORTANT BEFORE USE: Heat empty oven on self cleaning function (Pyrolytic) for 45 minutes to remove unpleasant smell and smoke caused by working residues and thermal installation.










REMOVE OVEN RACKS, SIDE RACKS, BAKING TRAY AND GRILL DISH BEFORE SELF CLEANING!

Clean inside with soapy water and rinse.










**MUST BE
INSTALLED
BY A LICENSED
ELECTRICIAN**

Warning and safety information

-  This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
-  Do not leave the oven unattended or unsupervised whilst children or infirmed are present.
-  Do not touch the heating elements inside the oven while in use.
-  The installation of this oven must be carried out by a qualified and competent installer.
-  This oven must be installed in accordance with the local, national building, electrical and plumbing codes.
-  If the power supply cable is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person to avoid a hazard.
-  Do not use harsh abrasive cleaners or sharp metal objects to clean the oven door glass.
-  Before cleaning or maintenance disconnect from the mains and wait for it to cool down.
-  Any repairs or maintenance must be carried out by qualified personnel.

 
Connecting the power supply cable to the mains

-  **BEFORE CONNECTING TO THE MAINS ENSURE THE FOLLOWING RULES ARE ADHERED TO:**
-  This work must be carried out by an authorized electrician.
-  The household circuits must be able to support the appliance load (see rating plate).
-  The power supply system has an efficient earthing connection which complies with current regulations.
-  Never use reductions, shunts or adaptors that can cause overheating.
-  The power supply cable must be positioned so that it does not exceed 50°C more than room temperature at any point of its length.
-  The appliance must be directly connected to the mains using a circuit breaker with a minimum contact opening of 3mm installed between the appliance and the mains, suitable for the load indicated and complying with current directives (the earthing wire must not be interrupted by the circuit breaker).

Installation Instructions

Instruction for installation

- Open the door and fix the oven with the four screws to be screwed up through the holes in the side stanchions of the oven.
- The sides and area where the oven is to be installed should be milled as shown in to allow free air circulation around the oven to avoid damages to surrounding cabinets.
- Ensure the oven is safely secured and the electrical elements are positioned to avoid contact with metal parts. The bonding agent must be able to withstand temperatures no lower than 90°C to avoid damage or warping to cabinets.
- If a plane with an electrical plate is inserted, the electrical connection of the plane and that of the oven should be carried out separately, both for electrical reasons and to facilitate the frontal extract ability of the oven.

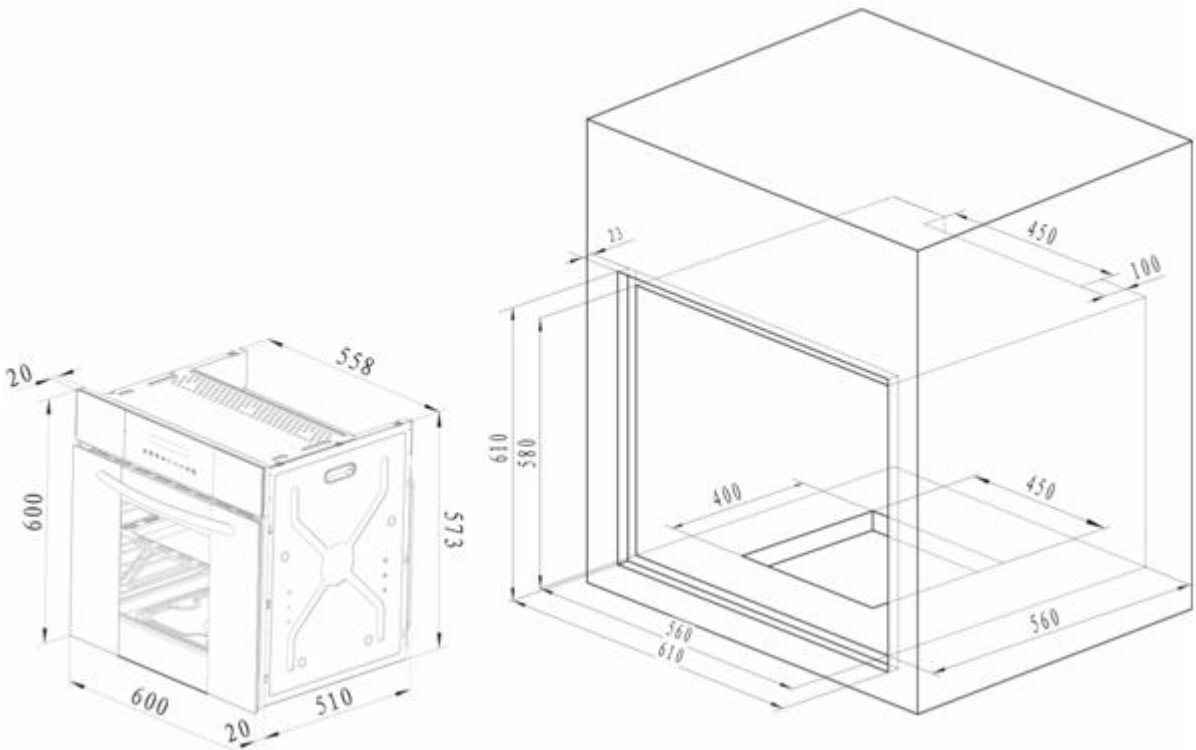


Operating instructions

Before using the oven

- Remove the protective film covering the oven door. (When Provided)

 
Heat empty oven on self cleaning function for 45 minutes to remove unpleasant smoke and smells caused by working residues and thermal installation. (see page 6 for instructions on self cleaning mode)

- Carefully clean the inside of oven with soapy water then wipe clean to remove soap residue.

 During Self Cleaning mode the front of the oven gets very hot, children should be supervised at all times.

 
 


Control Panel

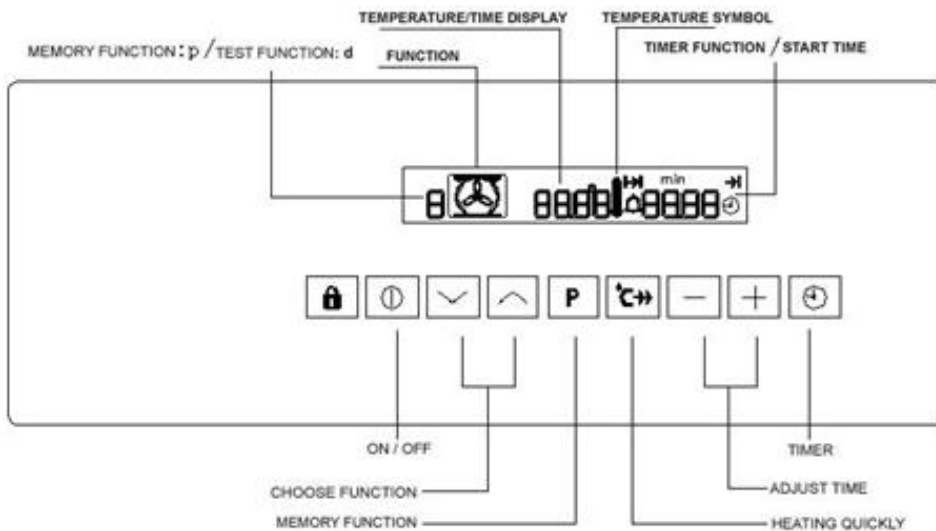

Operating instructions

 
 
 
Before using the oven you must set the time

1. To set the time, press and hold the timer /clock icon until the display starts flashing.
2. Use the  or  symbols to set the time, the display will stop flashing after approximately 5 seconds & the time will be displayed. The oven is now ready for use.



 
 **IMPORTANT: THE OVEN WILL NOT HEAT UNTIL THE DOOR IS CLOSED!**

 
In order to test or use the functions the oven may start in the test mode. The oven does not heat in this mode


Turn on the test mode

 
1. Use the ON/OFF  icon to turn off the oven.
2. Press  and  together until the buzzer sounds and the letter “d” shows in the display.


 
Turn off the test mode



1. Use the ON/OFF  key to turn off the oven.
2. Press and hold the  and  until the buzzer sounds and the letter “d” disappears from the display.



The memory function.  is helpful as it can save frequent settings.

1. Select the oven function, required temperature and time.
2. Press and hold the  until the buzzer sounds to save the setting. If you save another setting this will replace the previous setting.




 
Using the memory function. 

1. Use the ON/OFF  key to turn on the oven.
2. Press the  key to select your saved setting.

Child lock safety feature.  When this feature is in use the oven door will not open but the ON/OFF  key is still functional.

 
 

 
1. To activate the child lock feature. Press and hold the  key until the lock icon shows in the display.
2. To cancel the child lock feature. Press and hold the  key until the lock icon disappears.

Turning the display On and Off.

1. Press and hold  and  until the display is showing in the screen.
2. Press and hold  and  until the display disappears from the screen.

Operating instructions

Turning the key pad tones On and Off.










 
 
1. Press and hold  and  until the buzzer sounds to de-activate the key pad tones.
2. Press and hold  and  until the buzzer sounds to re-activate the key pad tones.

Cooling fan with high and low speed options.

1. The cooling fan will start automatically once the oven is switched off.
2. The fan will continue to work before shutting off automatically once the surface reaches 50°C

 


 
 
 
Self cleaning function

REMOVE OVEN RACKS, SIDE RACKS, BAKING TRAY AND GRILL DISH BEFORE SELF CLEANING!

1. Turn on the oven. Display will show  and the timer will flash, you can now set the clock if needed.
2. Press and hold  and  until    and "00.25" show on the display.
3. To cancel the self cleaning mode press and hold  and  until the  disappears.
4. The self cleaning timer is set at 25 minutes, to adjust the cleaning time use the  or  keys within 5 seconds of activating the self clean mode, once the display stops flashing the time is set and the self clean function will begin.
5. The maximum self cleaning time is 45 minutes, the minimum is 25 minutes and the time cannot be adjusted once the self cleaning function has started.
6. No other functions are available while the oven is in self cleaning mode.
7. The door will lock automatically once the oven temperature reaches 170°C.
8. The cooling fan will start automatically when the oven temperature reaches 260°C and will switch off once the self clean is complete and the oven temperature drops below 105°C.
9. Once the self clean is complete and the oven temperature drops below 150°C the lock symbol will disappear and the door can be opened.

 



 

Timer start time.



 
 


 
 

 


1. Choose the cooking function then use the  and  keys to set the temperature.
2. Press and hold  until the start time  icon appears.
3. Use  and  to set the time you want cooking to begin, oven will start at the specified time.
4. Manually turn off oven once cooking is complete.

Operating instructions


Timer end time.

1. Choose the cooking function then use the  and  to set the temperature.
2. Press and hold  until the start time  icon appears.
3. Use  and  to set the time you want cooking to stop.
4. The buzzer will sound and cooking will stop at the specified time.




 


Using the start and end timers together.

1. Choose the cooking function then use the  and  to set the temperature.
2. Press and hold the  until the  start time icon appears.
3. Use the  and  to set the start time, example 12.05pm.
4. Press and hold the  until the  icon appears.
5. Use the  and  to set the finish time, example 13.05pm.
6. The oven will start and stop at the specified times.

Quick heat function.








 


1. Press the quick heat function key to start the quick heat mode.
2. When the temperature gauge icon  shows on the display the quick heat function is in progress.
3. In the quick heat mode the grill, bake and fan motor are working together.
4. The quick heat function is not available when the oven temperature is below 100°C.
5. The quick heat function is only for preheating the oven – not for cooking purposes.
6. The quick heat function only heats for 5 seconds, to heat for another 5 seconds press the quick heat icon again.
7. After the quick heat mode has finished the oven will keep heating & may now be used for cooking.
 - When the oven temperature is between 100°C – 150°C the quick heat temperature is actually 35°C.
 - When the oven temperature is between 150°C – 200°C the quick heat temperature is actually 40°C.
 - When the oven temperature is between 200°C – 250°C the quick heat temperature is actually 50°C.

Selecting oven functions.

1. Use the ON/OFF  key to turn the oven on.
2. Use the  and  keys to select the required oven function.
3. Use the  and  to adjust the temperature. 

Operating instructions

Oven functions

1.  Convection mode – top and bottom elements, no fan.
2.  Grill – grill element , no fan.
3.  Fan assisted grill - grill element with fan.
4.  Fan forced bake - bottom and rear elements with fan.
5.  Fan forced – rear element with fan.
6.  Fan assisted convection mode – top and bottom elements with fan.
7.  Fan assisted bake – bottom element with fan.
8.  Fan forced convection mode - top, bottom and rear elements with fan.
9.  Defrost – use of the fan with no heat.
10.  Convection grill - grill and top elements , no fan.

Tips

- For best results pre-heat the oven.
- Where possible use high edged cookware for roasting to help contain food splatter.
- Cooking times will vary according to the type and amount of food being cooked.
- The oven can be switched off a few minutes beforehand as the residual heat will complete the cooking.
- Avoid opening the oven door excessively during the cooking process to reduce heat loss.
- Fan assisted and fan forced modes require less cooking time.
- The defrost mode is similar to room temperature thawing with the fan helping to reduce defrosting time.

Cleaning and Maintenance

 
! IMPORTANT – BEFORE CLEANING DISCONNECT OVEN FROM POWER SUPPLY!

General cleaning

- The oven must be cold before commencing any cleaning.
- Never use harsh cleaners or scourers as this may damage the finish.
- Use a damp sponge or soft cloth and warm soapy water.
- Rinse away any soapy residue before drying with a soft cloth.
- For stubborn stains a suitable non abrasive cleaning product may be used.
- Only clean the glass door with water and a soft cloth.
- Never use a steam cleaner.
- Make sure the grill element is secured correctly in place before using the oven.

Cleaning the oven door

- Removing the door
 - Fully open the door.
 - Lift and turn the hinges towards you.
 - Slowly close the door then lift up & tilt backwards to unhook the door from hinges.
- Refitting the door
 - Insert the hinges into the slits on the underside of door.
 - Fully open the door.
 - Push the door onto the hinges then close door slowly so that the door is sitting flush against the oven.

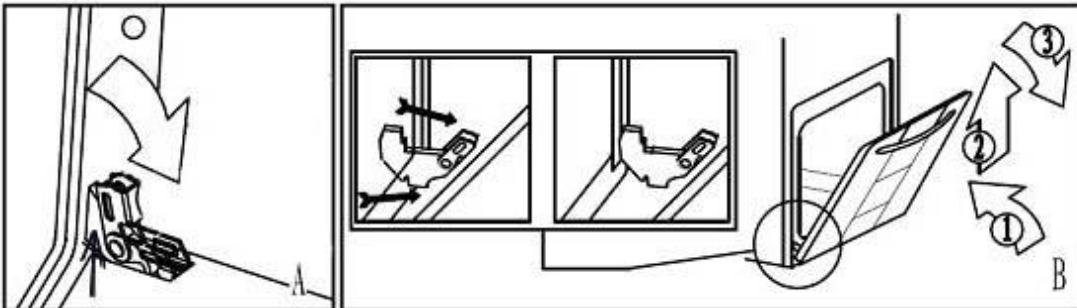

! IMPORTANT – BEFORE MAINTENANCE DISCONNECT OVEN FROM POWER SUPPLY!

Replacing the oven bulb – (must be suitable for high temperatures 300°C)

 
 
1. Make sure oven is cold before replacing the bulb.
2. Unscrew the glass protection cover then unscrew the bulb.
3. Fit the new bulb and screw the glass cover into place.
4. Reconnect the power supply.

Bulb Requirements
Voltage: 220~240v
Power: 15w
Socket: E14

Cleaning and Maintenance

Fitting the side racks

- If this model has side racks, follow directions below to fit racks to oven cavity wall.
- 1. Insert racks into the fixing holes of side wall cavity wall as below.
- 2. Lay the racks flat against the side wall then fasten with screw to keep in place.

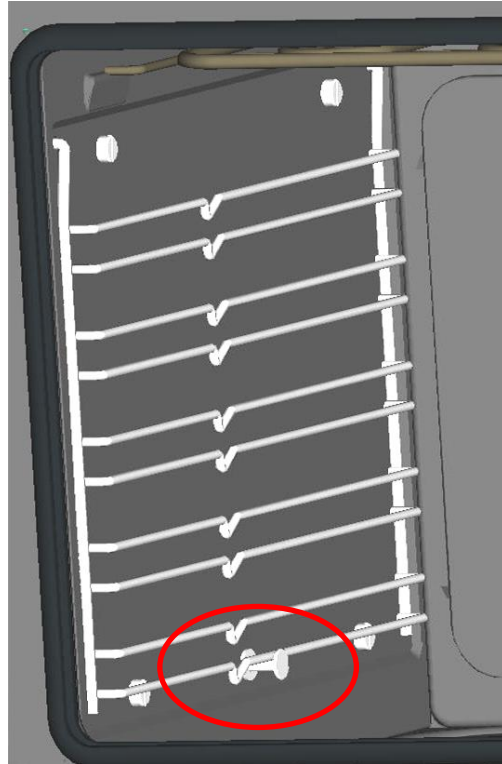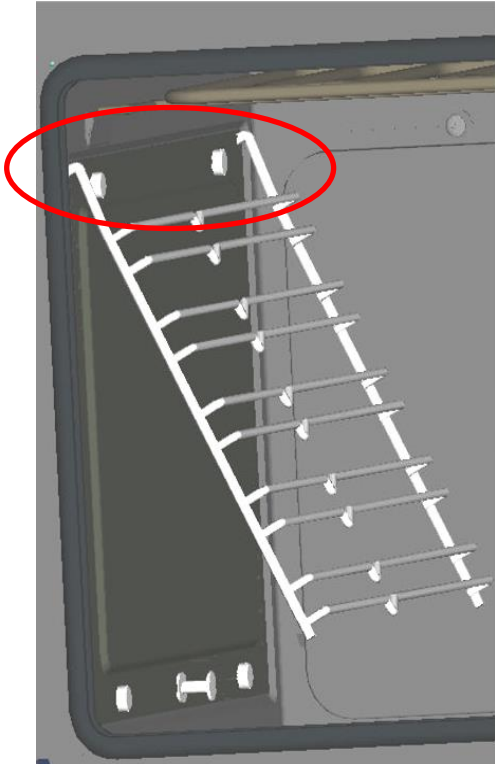

Warranty Certificate (New Zealand)

Terms and Conditions

The following conditions apply in respect of the warranty given in this certificate:

1. Monaco Corporation Limited ("Monaco") warrants the following Robinhood products against manufacturing defects and faulty materials, under normal use and subject to the exclusions in this certificate, for a period of:
Rangehood, Ovens, Cooktops, Dishwashers - 24 months from date of original purchase for domestic use.
Uniduct - 12 months from date of original purchase for domestic use.
Ironing centre - 12 months from date of original purchase for domestic use.
Taps, including Pull-out and Mixer taps - 5 years on parts only from date of original purchase domestic for use, 24 months parts and labour from date of original purchase for domestic use
Sinks sets - 5 years on stainless steel sink including draining bench from date of original purchase for domestic use, 6 months on all stainless steel accessories, including wire rack, colander and tray from date of original purchase for domestic use.
Laundry Tub - 5 years on stainless bowl, 24 months on Tap, Cabinet and other components from the date of original purchase for domestic use.

"Original purchase", when used in this certificate, means purchase by the customer directly from Monaco or one of its approved suppliers.

2. This warranty is limited to the repair or replacement, at our option, within the warranty period of any component part which we at our discretion determine to contain faulty materials or a manufacturing defect in breach of this warranty. This warranty is subject to terms and conditions set out in this certificate.
3. The warranty only applies within New Zealand.
4. The customer must produce the original invoice or other purchase documentation as proof of the original purchase date.

Warranty exclusions

1. The warranty does not apply where, in Monaco's opinion:
The defect is caused by misuse, wear and tear, dirt, fire or accidental damage.
The product has been repaired or serviced by an unauthorised person.
The product was not installed in accordance with our instructions.
The product was purchased overseas or was not designed for use in New Zealand.
The product was not used, cleaned or cared for in accordance with our instructions.
The product was used outdoors.
2. In addition, this warranty does not extend to damage or defects which in our opinion, directly or indirectly arise from or are due to:
Exposing the product to acidic or corrosive materials or chemicals such as dyes, solvents, denture cleaner or acetone;
Using inappropriate household cleaning products such as abrasive cream or powder cleansers, furniture polish, bleach, mentholated spirits, drain cleaners, sugar soap, metal pads and strongly alkaline or acidic cleaners;
Heat damage, including from washing the product at high temperatures;
Impact or mishandling the product, including the impact caused by objects scraped along, thrown or dropped on the product surface or excessive weight being placed on the product;
Structural or support changes in or affecting the building or the application where the product has been installed;
Failure to clean or maintain the product as recommended; or
any other causes specified in the product information as being excluded from this warranty.
3. Variations with the colour or gloss within the product or any ageing or fading of colour, shine or gloss level over time are not covered by this warranty. The warranty does not cover visual imperfections or blemishes in the surface and edges of the product that were not brought to your supplier's attention at the time you inspected the product.
4. Costs incurred on installation or removal of a product, or any reinstallation of a product, or any associated costs, are not covered by this warranty.
5. Monaco will not be liable for consequential or indirect loss or damage whatsoever and however arising out of or in connection with the supply, performance or removal of the product, including (but not limited to) loss of profit, loss of revenue, loss of contract, loss of goodwill or increased cost of workings, even if due to the negligence of Monaco or any of its approved suppliers, employees or agents.
6. Charcoal filters and light bulbs are not covered by this warranty
7. This warranty and the statements contained in this certificate or other documents given to you do not exclude, restrict or modify the application of any term implied into this warranty by statute, provided that (to the extent any statutory provision permits Monaco to limit its liability for a breach of an implied condition or warranty) Monaco's liability for such breach is limited to the payment of the cost of replacing the product, repairing the product or acquiring an equivalent product.
8. Subject to clause 5, our obligations under this warranty are limited to those set out in this certificate, and this warranty is expressly instead of all other warranties, express or implied, including any implied warranty of merchantability or fitness for a particular purpose and notwithstanding any course of dealing between the parties or custom and usage in trade to the contrary.

Terms and conditions are subject to change.

Should you require service please contact us on:

New Zealand

Monaco Corporation Ltd

Telephone: (09) 415 6000

Facsimile: (09) 415 7400

Email: enquiries@robinhood.co.nz

www.robinhood.co.nz

Warranty Certificate (Australia)

Terms and Conditions

If you are a consumer under the Australian Consumer Law, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure

1. Shiro Australia Pty Limited ("Shiro") also warrants the following Robinhood products against manufacturing defects and faulty materials, under normal use and subject to the exclusions in this certificate, for a period of:

Rangehood, Ovens, Cooktops, Dishwashers - 24 months from date of original purchase for domestic use.

Uniduct – 12 months from date of original purchase for domestic use.

Ironing centre – 12 months from date of original purchase for domestic use.

Taps, including Pull-out and Mixer taps – 5 years on parts only from date of original purchase domestic use, 24 months parts and labour from date of original purchase for domestic use

Sinks sets– 5 years on stainless steel sink including draining bench from date of original purchase for domestic use, 6 months on all stainless steel accessories, including wire rack, colander and tray from date of original purchase for domestic use.

Laundry Tub - 5 years on stainless bowl, 24 months on Tap, Cabinet and other components from the date of original purchase for domestic use. "Original purchase", when used in this certificate, means purchase by the customer directly from Shiro or one of its approved suppliers.

2. This warranty is limited to the repair or replacement, at our option, within the warranty period of any component part which we at our discretion determine to contain faulty materials or a manufacturing defect in breach of this warranty. This warranty is subject to terms and conditions set out in this certificate.

3. The warranty only applies within Australia.

4. For warranty service outside of capital city metropolitan area or 30 km from nearest authorised service agent you will be liable for reasonable travelling expenses and the cost of transport of the product or parts to and from the service agent

5. To make a claim under this warranty, you must produce the original invoice or other purchase documentation as proof of the original purchase date. You must send your claim to Shiro Australia Pty Limited, 104 Vanessa Street, Kingsgrove NSW 2208 within 7 days of any alleged defect or failure of the product first becoming apparent, you are responsible for the expense of making a claim under this warranty.

This warranty is given by:

Shiro Australia Pty Ltd

ABN 28 002 386 129

Telephone: 1800 648 556

Facsimile: 1800 628 577

Email: enquiries@robinhood.com.au

www.robinhood.com.au

Attention Customer Services Manager

Warranty exclusions

1. The warranty does not apply where, in Shiro's opinion:

The defect is caused by misuse, wear and tear, dirt, fire or accidental damage.

The product has been repaired or serviced by an unauthorised person.

The product was not installed in accordance with our instructions.

The product was purchased overseas or was not designed for use in Australia.

The product was not used, cleaned or cared for in accordance with our instructions.

The product was used outdoors.

2. All Robinhood Rangehoods are suitable for indoor use only and not suitable over BBQs or charcoal cookers designed for outdoor use.

3. In addition, this warranty does not extend to damage or defects which in our opinion, directly or indirectly arise from or are due to: exposing the product to acidic or corrosive materials or chemicals such as dyes, solvents, denture cleaner or acetone; using inappropriate household cleaning products such as abrasive cream or powder cleansers, furniture polish, bleach, mentholated spirits, drain cleaners, sugar soap, metal pads and strongly alkaline or acidic cleaners; heat damage, including from washing the product at high temperatures;

impact or mishandling the product, including the impact caused by objects scraped along, thrown or dropped on the product surface or excessive weight being placed on the product; structural or support changes in or affecting the building or the application where the product has been installed; failure to clean or maintain the product as recommended; or any other causes specified in the product information as being excluded from this warranty.

4. Variations with the colour or gloss within the product or any ageing or fading of colour, shine or gloss level over time are not covered by this warranty. The warranty does not cover visual imperfections or blemishes in the surface and edges of the product that were not brought to your supplier's attention at the time you inspected the product.

5. We will not be responsible under this warranty for, nor pay the costs of, removing the existing product, or reinstalling the new product, or any associated costs or damages.

6. Charcoal filters and light bulbs are not covered by this warranty

The benefits given by this warranty are in addition to other rights and remedies of consumers under any law in relation to the goods which cannot be excluded.

This warranty certificate is not intended to create a contract between Shiro Australia Pty Limited and the purchaser.

Should you require service please contact us on:

Australia

Shiro Australia Pty Ltd

ABN 28 002 386 129

Telephone: 1800 648 556

Facsimile: 1800 628 577

Email: enquiries@robinhood.com.au

www.robinhood.com.au