


















Description: **ROBINHOOD 60CM BUILT IN OVEN 5 FUNCTIONS**

Model Number: **RHBO77B**



*Model may vary slightly from image pictured*

## Warning and safety information

-  This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Young children should be supervised to ensure that they do not play with the appliance. In certain circumstances electrical appliances may be a safety hazard. Do not leave this oven unattended or unsupervised whilst children or infirmed are present.
-  **WARNING** – Accessible parts will become hot when in use. Young children should be kept away. During use the oven becomes hot. Care should be taken to avoid touching heating elements inside the oven. Do not touch any components during this time, as they may be hot and can cause burns. Use heat resistant cooking gloves where possible when moving food and cooking utensils in and out of the oven.
-  The oven is not intended to be operated by means of an external timer or separate remote-control system.
-  Do not modify this appliance.
-  Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven glass doors since they can scratch the surface, which may result in shattering of the glass. Clean the glass door using warm damp cloth and dry it with a soft cloth.
-  Cleaning may only be commenced on the appliance once it has cooled down (best slightly warm). The appliance should be disconnected from the power outlet or turned off at your isolation switch before commencing any cleaning process. Do not use a steam jet or any other high pressure cleaning equipment to clean the appliance. Follow oven cleaner directions if these are being used. **WARNING:** Ensure the appliance is switched off before replacing the lamp to avoid the possibility of electric shock. If you use your oven for an extended period of time, condensation may form. Dry it using a soft dry cloth.
-  Do not place heavy objects in or on these appliances, use for storage or let children play/swing from the door. These appliances are designed for cooking food only. This appliance is designed for domestic household use only and for the cooking of domestic food products. Use as a commercial appliance will void the warranty. It should not to be used in a marine environment or outdoors.
-  Ensure that the kitchen is well ventilated or mechanical ventilation is in use while cooking with this appliance.
-  Do not store or use flammable materials or aerosols near the oven. Items made from aluminium, plastic or plastic film should also be kept away from the appliance, as they may fuse to the surface. Never line the oven bottom with aluminium foil, as the consequent accumulation of heat could compromise the cooking and even damage the enamel.
-  **Important: the power supply to the appliance must be turned off before any adjustments or maintenance work.**
-  The appliance must be installed and put in operation by an authorised technician under the conditions provided by the manufacturer in this manual. The manufacturer cannot be held responsible for any damage that might occur due to faulty installation.
-  To ensure the proper working order of the built-in appliance, the kitchen unit must be of a suitable size. The unit panels next to the cooker must be heat resistant. In the case of veneered wood units, glues must be resistant to a temperature of 100°C above ambient temperature. Do not allow electrical fittings or cables to be in contact with hot areas of the appliance.
-  This oven is to be installed in accordance with the local, national building, electrical and plumbing codes. In accordance with safety standards, once the appliance has been mounted, there must be no possible contact with electrical parts. Any protective parts must be secured so that they can only be removed with the use of tools.
-  This oven must not be installed behind a decorative door in order to avoid overheating. The installation of this oven is to be carried out by using only a qualified electrician and must be earthed.
-  The electrical connection must be accessible after installation. The appliance must be electrically isolated before any maintenance can be performed. Electrical connection must be made as per local wiring rules and regulations. Do not disconnect the appliance with wet hands or bare feet, and do not disconnect the power cord with extreme force. If the electricity supply is restricted, means of an all-pole disconnection must be accessible and incorporated in the fixed wiring in accordance with the wiring rules.
-  Where this appliance is installed in a caravan, it shall NOT be used as a space heater.
-  If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

# Installing the built in oven

**Important:** the power supply to the appliance must be turned off before any adjustments or maintenance work.

## PREPARATION FOR INSTALLATION AND USE

Manufactured with best quality parts and materials, this modern, functional and practical oven will meet your needs in all respects. Make sure to read the manual to obtain successful results so as not to experience any problems in the future. The information given below contains rules that are necessary for correct positioning and service operations. They should be read without fail, especially by the technician who will position the appliance.

## CHOOSING A PLACE FOR THE APPLIANCES

There are several factors to consider when choosing a place for your oven. Make sure to take into account our recommendations below in order to prevent any problems and dangerous situations which might arise.



When choosing a place for the oven, attention should be paid to ensure there are no flammable or combustible materials in the close vicinity, such as curtains, oil, cloth etc. which quickly catch fire.

Furniture surrounding the oven or cooktop must be made of materials resistant to temperatures of at least 100 C° .

Required changes to wall cabinets and exhaust fans above a built-in cooktop as well as minimum heights from the oven board are shown below. Accordingly, a range hood should be at a minimum height of 65 cm from the cooktop. If there is no range hood the height should not be less than 70 cm. Refer to the range hood instructions for specific details before installation.

If there is a drawer below the oven, a protective board must be placed between the oven and drawer.


A cooling fan draws air in from the appliance sides to cool the outer surfaces and removes excess steam through the front of the oven (above the door). This fan will continue to operate for some time after the cooking sequence has finished. Ventilation space must be allowed beside and behind the oven; failure to do so can cause damage to both the appliance and surrounding cupboards.

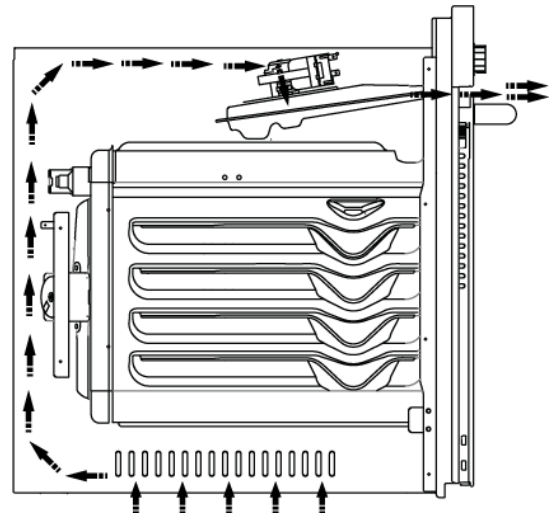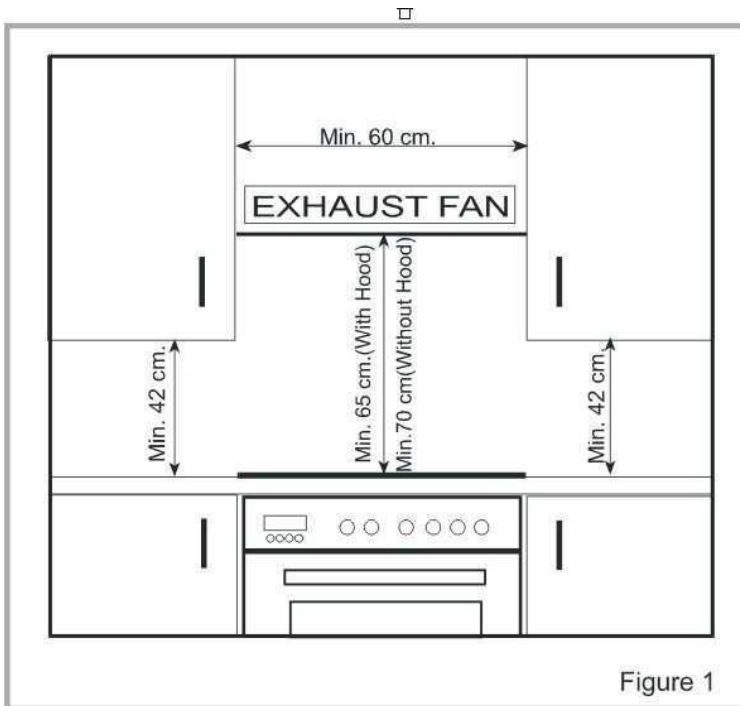

## INSTALLATION OF BUII TIN OVEN


Insert the oven into cabinet partly by pushing it forward. Open the oven door and insert 4 screws into the holes on the oven frame. While the product frame touches the wooden surface of the cabinet, tighten the screws. If the oven is installed below a built-in hob, the distance between the cooktop and the top panel of the oven must be a minimum of 50mm, and the distance between the cooktop and the top of the oven control panel must be a minimum of 25mm.

The dimensions and material of the cabinet in which the oven will be installed must be correct and resistant to increases in temperature. In a correct installation, contact with electrical or insulated parts must be prevented. Insulating parts need to be fitted in a way to ensure that they cannot be removed by using any kind of tool. Installing the appliance in the close vicinity of a refrigerator or a deep-freezer is not recommended as the performance of the above-mentioned appliances will be negatively affected due to emanating heat. After removing your oven from its packaging, be sure that the oven is not damaged. If you suspect any damage to the appliance, do not use it; immediately contact an authorised Service Centre.

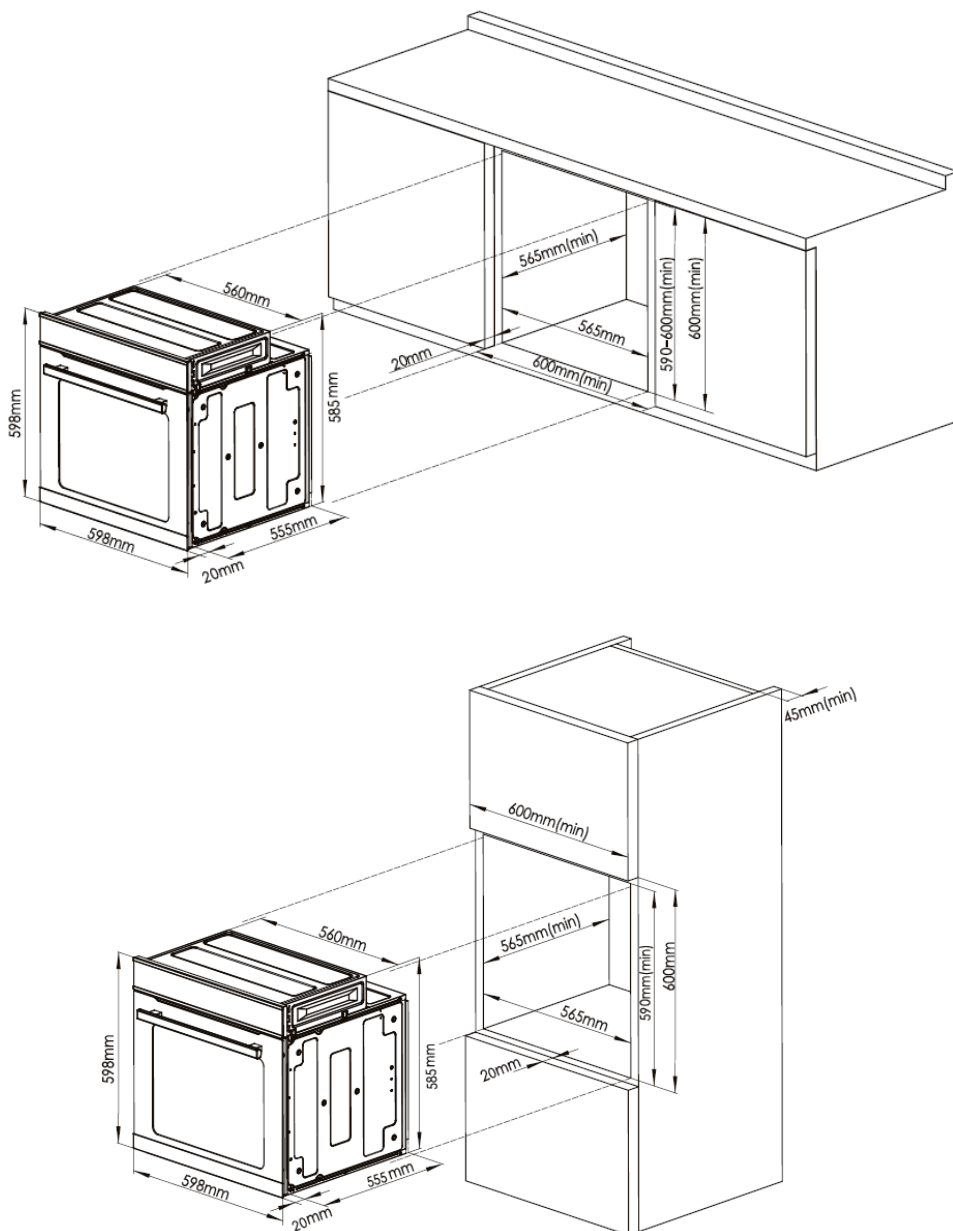

## Installation- *continued*

In order to ensure adequate ventilation, the back panel of the cabinet unit must be removed. Installing the oven so that it rests on two strips of wood is preferable. If the oven rests on a continuous, flat surface, there must be an aperture of at least 45x560mm.

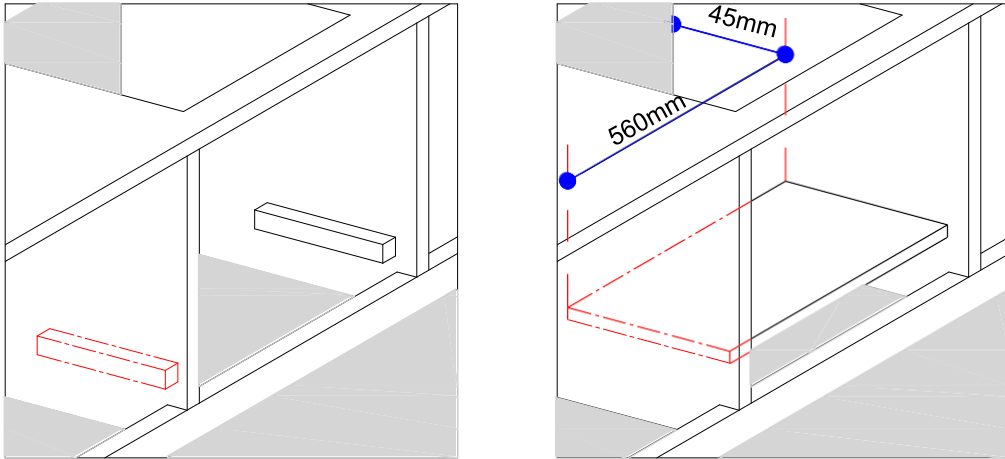

### Electric connection

#### **LOCAL AUTHORITY REQUIREMENTS**

Installation is only permitted by a licensed electrician, and carried out according to instructions provided by the manufacturer. Incorrect installation might cause harm and damage which the manufacturer accepts no responsibility.

#### **ELECTRICAL INSTALLATION FOR THE LICENSED ELECTRICIAN**

This oven must be connected to a 220-240V 50Hz power supply.

Before carrying out the connection to the power supply, the voltage rating of the appliance (stamped on the appliance identification plate) must be checked for correspondence to the available mains supply voltage, and the mains electric wiring should be suitable for the oven's power rating (also indicated on the appliance identification plate);

The switched outlet must be connected to a suitable earth wiring, in conformity to current safety regulations.

It should not be located above the appliance and no more than 1.25m away from it. The power supply cord must not touch any hot surfaces and must be placed so that its temperature does not exceed 75° C at any point along its length. After having installed the appliance, the switched outlet must always be in an accessible position.

**NOTE:** For connections to the mains power supply, never use adapters, reductions or multiple power points as these may overheat and catch fire.

The mains terminal block is located on the back of the oven and the terminals are accessible by opening the terminal block cover.



**NOTE:** The terminal cover should not be opened when the mains power is still connected to the appliance and never by an unauthorized person.

The electrical safety of this appliance can only be guaranteed if the oven is correctly and efficiently earthed. The manufacturer declines all responsibility for damage resulting from an installation which has not been earthed correctly.

The use of adapters, multiple sockets and/or extensions, is not allowed.

# Instruction on use


## Parts and Accessories

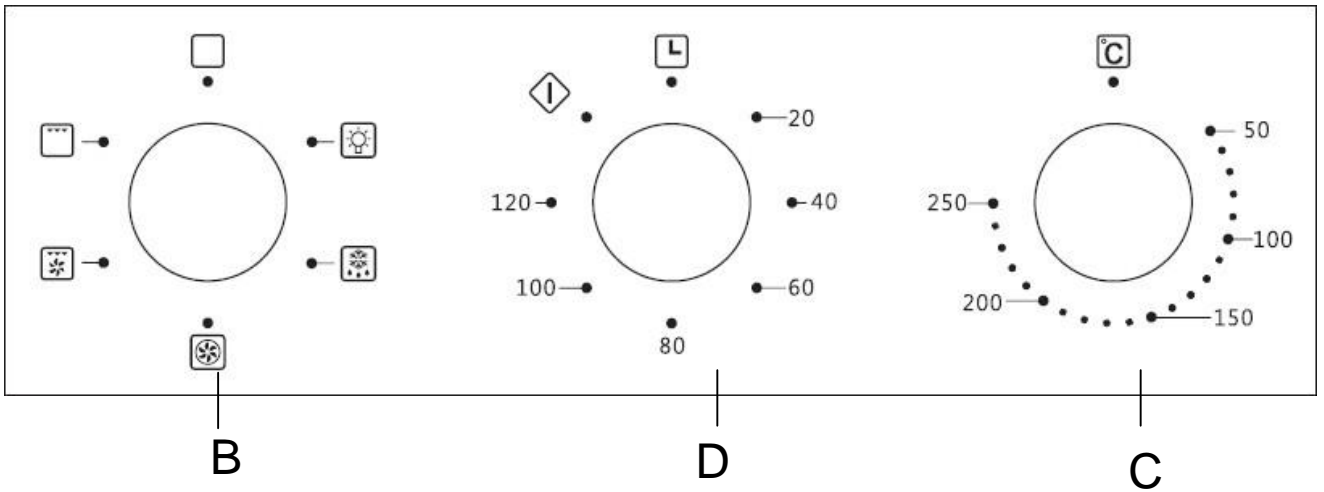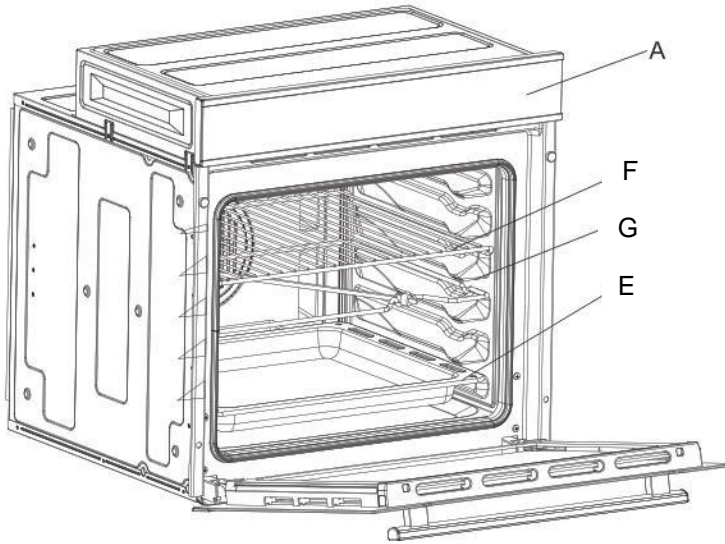

- A. Control panel
- B. Cooking mode selection knob
- C. Cooking temperature selection knob
- D. Time knob
- E. Dripping pan or baking sheet
- F. Oven Rack
- G. Guides for sliding the racks or dripping pan in and out

## Instruction on use

### Thermostat control features

The oven has a thermostat control knob to the right hand side of the control panel. This is used to set the cooking temperature of the oven (between 50° C and 250° C). Turn the control knob from off position  and clockwise to the desired temperature (do not rotate clockwise from the 250° C setting to off position).

When the oven is heating up to the desired temperature, the small indicator to the upper right will be lit. When the temperature has been reached, the indicator will turn off (it is normal for this to turn on & off during the course of cooking).

### Function control features

The oven has a function control knob to the left hand side of the control panel. This is used to select the different functions available on the oven. When a function is selected, the oven light will turn on (this may be modified depending on the timer function selected). The control knob can rotate clockwise and anti-clockwise through the full range of functions. Each function and its description is listed below. Take care to understand the functions that are on your particular model oven.



**Oven light:** This function turns on the internal light.



**Defrost:** This function turns on the rear fan without any heating element on. The time required to defrost the food depends on the room temperature.



**Circular element with fan (Fan Forced):** This function turns on the rear fan and the rear heating element on. The fan helps circulate the heat throughout the oven and allows food on different rack levels to be cooked at the same time.



**Fan Assist (Fan Bake):** This function turns on the upper heating element as well as the rear fan to help circulate the heat more evenly.



**Half grill:** This function turns on the upper heating element for grill function.

### **Timer (D)**

When you want to cook food, you have to turn the time clockwise to desired time after setting of cooking modes and temperature, otherwise, the machine will be not energized.

But please note the timer will count back automatically until "0" position although the power off suddenly. So, you have to set the time again if the food is not cooked well.




## Maintenance and cleaning

### Replacing the light bulb

Before replacing a light bulb, turn off the supply of power to the oven by turning off the circuit breaker connecting it to the mains. Do not turn on the power to the appliance until after the bulb has been changed over & the cover replaced.

Remove the glass cover attached to the lamp holder by rotating the glass cover anti-clockwise. Remove the bulb and then replace with a new bulb of a similar rating. Clean any oil and fats that might have collected around the thread of the cover and replace (finger tighten only).


**Voltage:** AC220V-240V  
**Wattage:** 25W  
**Socket:** E14  
**Temperature rating:** 300 ° C

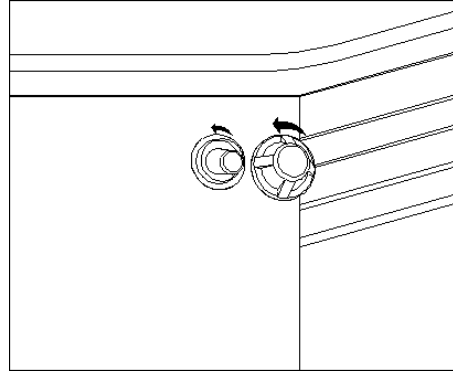

### How to remove oven door

For a more thorough clean, you can remove the oven door, proceed as follows:

- Open the door fully;
- Lift up and turn the small levers situated on the two hinges, be sure the lockers must be on position shown on step.1
- Pull the door towards you, pulling it out of its seat;
- Push the latch on both side and pull the bar out.
- Remove the door glass accordingly
- Assembly the door by following the above procedures backwards.

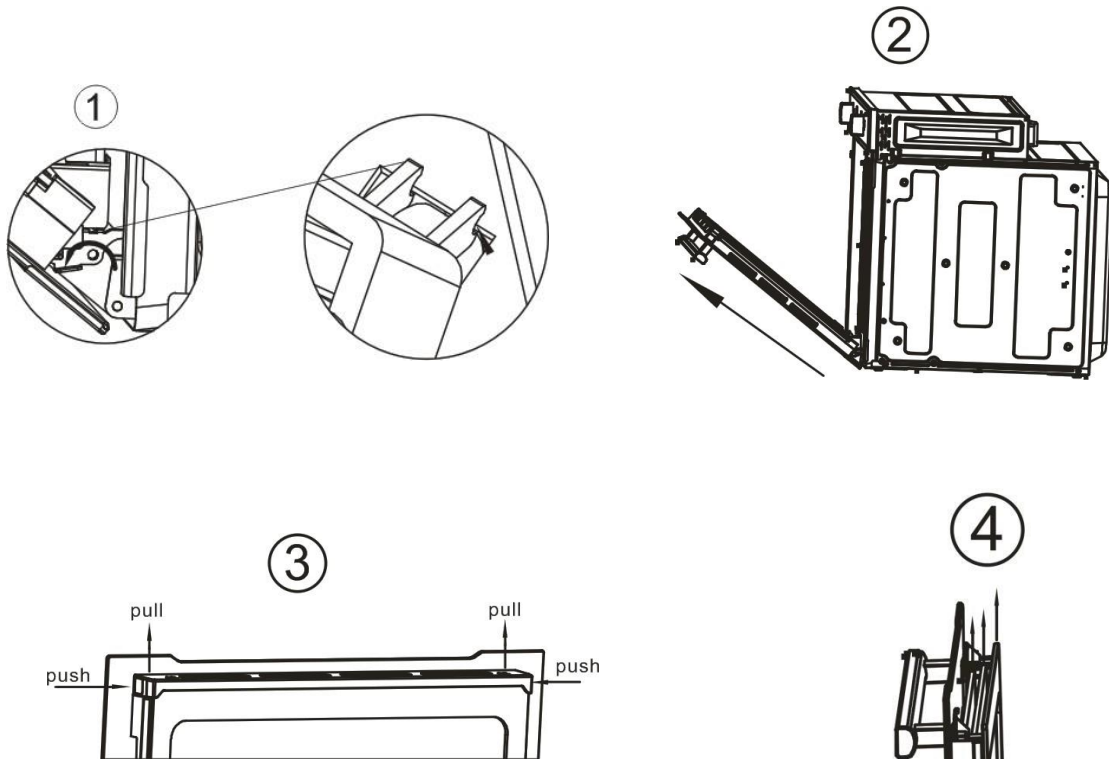






### How to keep your oven in good condition

 **Important: Before cleaning your oven, or performing maintenance, disconnect it from the power supply.**

To extend the life of your oven, it must be cleaned frequently, keeping in mind that:

- Do not use steam equipment to clean the appliance
- The enamelled or stainless steel parts should be washed with lukewarm water without using any abrasive powders or corrosive substances which could ruin them; Stainless steel could get stained. If these stains are difficult to remove, use special products available to rinse thoroughly and dry.
- The inside of the oven should preferably be cleaned immediately after use, when it is still warm, with hot water and soap; the soap should be rinsed away and the interior dried thoroughly. Avoid using abrasive detergents (for example cleaning powders) and abrasive sponges for dishes or acids (such as lime scale-remover, etc...) as these could damage the enamel. If the grease spots and dirt are particularly tough to remove, use a special product for oven cleaning, following the instructions provided on the packet.
- If you use your oven for an extended period of time, condensation may form. Dry it using a soft cloth.
- There is a rubber seal surrounding the oven opening which guarantees its perfect functioning. Check the condition of this seal on a regular basis. If necessary, clean it and avoid using abrasive products or objects to do so. Should it become damaged, please contact Customer Service. We recommend you avoid using the oven until it has been repaired.
- Never line the oven bottom with aluminium foil, as the consequent accumulation of heat could compromise the cooking and even damage the enamel.
- Clean the glass door using non-abrasive products or sponges and dry it with a soft cloth.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

## Cooking Guide

Selector knob	Food to be cooked	Weight(in kg)	Cooking rack position from bottom	Preheating time (m)	Thermostat at knob setting	Cooking time(m)
 Circular element with fan	Tarts	0.5	3	5	180	20-30
	Fruitcakes	1	2 or 3	15	180	40-45
	Plum cake	0.7	3	15	180	40-50
	Sponge cake	0.5	3	15	160	25-30
	Stuffed pancakes (on 2 racks)	1.2	2 and 4	15	200	30-35
	Small cakes (on 2 racks)	0.6	2 and 4	15	190	20-25
	Cheese puffs (on 2 racks)	0.4	2 and 4	15	210	15-20
	cream puffs (on 2 racks)	0.7	3 and 5	15	180	20-25
	Biscuits (on 3 racks)	0.7	3 and 5	15	180	20-25
Meringues (on 3 racks)	0.5	3 and 5	15	90	180	
 Half grill	Soles and cuttlefish	1	4	5	Max	8-10
	Squid and prawn kebabs	1	4	5	Max	6-8
	Cod filet					
	Grilled vegetable	1	4	5	Max	10
	Veal steak	1	3/4	5	Max	10-15
	Cutlets	1	4	5	Max	15-20
	Hamburgers	1	4	5	Max	15-20
	Mackerels	1	4	5	Max	7-10
	Toasted sandwiches	1	4	5	Max	15-20
	0.4	4	5	Max	2-3	
 Fan assisted grill	Grilled chicken	1.5	3	5	200	55-60
	Cuttlefish	1.5	3	5	200	30-35

# Troubleshooting

### The oven isn't coming on.

- Check that the oven is in manual operation mode.
- Check that you have selected a cooking function and a cooking temperature.

### There appears to be no power to the oven and grill.

- Check that the appliance has been connected to the electrical mains supply correctly.
- Check that the mains fuses are in working order.
- Check that the operating instructions for setting the time of day and putting the appliance into manual operation mode have been followed.

### The grill function works but the main oven does not.

- Check that you have selected the correct cooking function.

### The grill and top oven element is not working, or cuts out for long periods of time during use.

- Allow the oven to cool for approximately 2 hours. Once cool, check whether the appliance is again working properly.

### My food is not cooking properly

- Ensure that you are selecting the correct temperature and the correct cooking function for the food that you are cooking. It may be appropriate to adjust your cooking temperature by plus or minus 10° C, to achieve the best cooking results.

### My food is not cooking evenly

- Check that the oven has been installed correctly and is level.
- Check that the correct temperatures and shelf positions are being used.

### The oven light is not working


- Refer to previous page and follow the "Replacing the oven bulb" section.

### I am getting condensation in my oven

- Steam and condensation is a natural by product of cooking any food with high water content, such as frozen food, chicken etc.
- You may get condensation in the oven cavity and forming between the oven door glasses. This is not necessarily a sign that the oven is not working correctly.
- Do not leave food in the oven to cool after it has been cooked and the oven has been switched off.
- Use a covered container, where practical, when cooking to reduce the amount of condensation that forms.

# Technical information

Model	RHBO77B
Oven size	Gross 77L
Width	598mm
Depth	575mm
Height	598mm
Voltage	220-240V, 50Hz
Wattage	2000W

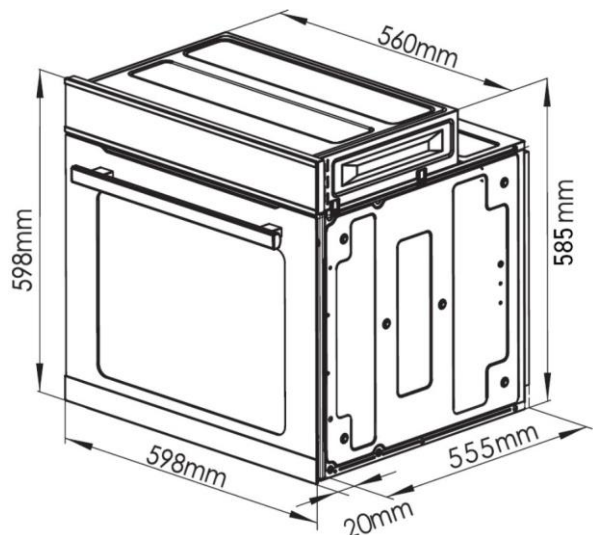

## Warranty Certificate (New Zealand)

### Terms and Conditions

The following conditions apply in respect of the warranty given in this certificate:

**1.** Monaco Corporation Limited ("Monaco") warrants the following Robinhood products against manufacturing defects and faulty materials, under normal use and subject to the exclusions in this certificate, for a period of:

**Rangehood, Ovens, Cooktops, Dishwashers** - 24 months from date of original purchase for domestic use.

**Uniduct** - 12 months from date of original purchase for domestic use.

**Ironing centre** - 12 months from date of original purchase for domestic use.

**Taps, including Pull-out and Mixer taps** - 5 years on parts only from date of original purchase domestic for use, 24 months parts and labour from date of original purchase for domestic use

**Sinks sets** - 5 years on stainless steel sink including draining bench from date of original purchase for domestic use, 6 months on all stainless steel accessories, including wire rack, colander and tray from date of original purchase for domestic use.

**Laundry Tub** - 5 years on stainless bowl, 24 months on Tap, Cabinet and other components from the date of original purchase for domestic use.

"Original purchase", when used in this certificate, means purchase by the customer directly from Monaco or one of its approved suppliers.

**2.** This warranty is limited to the repair or replacement, at our option, within the warranty period of any component part which we at our discretion determine to contain faulty materials or a manufacturing defect in breach of this warranty. This warranty is subject to terms and conditions set out in this certificate.

**3.** The warranty only applies within New Zealand.

**4.** The customer must produce the original invoice or other purchase documentation as proof of the original purchase date.

### Warranty exclusions

**1.** The warranty does not apply where, in Monaco's opinion:

The defect is caused by misuse, wear and tear, dirt, fire or accidental damage.

The product has been repaired or serviced by an unauthorised person.

The product was not installed in accordance with our instructions.

The product was purchased overseas or was not designed for use in New Zealand.

The product was not used, cleaned or cared for in accordance with our instructions.

The product was used outdoors.

**2.** In addition, this warranty does not extend to damage or defects which in our opinion, directly or indirectly arise from or are due to:

Exposing the product to acidic or corrosive materials or chemicals such as dyes, solvents, denture cleaner or acetone;

Using inappropriate household cleaning products such as abrasive cream or powder cleansers, furniture polish, bleach, mentholated spirits, drain cleaners, sugar soap, metal pads and strongly alkaline or acidic cleaners;

Heat damage, including from washing the product at high temperatures;

Impact or mishandling the product, including the impact caused by objects scraped along, thrown or dropped on the product surface or excessive weight being placed on the product;

Structural or support changes in or affecting the building or the application where the product has been installed;

Failure to clean or maintain the product as recommended; or

any other causes specified in the product information as being excluded from this warranty.

**3.** Variations with the colour or gloss within the product or any ageing or fading of colour, shine or gloss level over time are not covered by this warranty. The warranty does not cover visual imperfections or blemishes in the surface and edges of the product that were not brought to your supplier's attention at the time you inspected the product.

**4.** Costs incurred on installation or removal of a product, or any reinstallation of a product, or any associated costs, are not covered by this warranty.

**5.** Monaco will not be liable for consequential or indirect loss or damage whatsoever and however arising out of or in connection with the supply, performance or removal of the product, including (but not limited to) loss of profit, loss of revenue, loss of contract, loss of goodwill or increased cost of workings, even if due to the negligence of Monaco or any of its approved suppliers, employees or agents.

**6.** Charcoal filters and light bulbs are not covered by this warranty

**7.** This warranty and the statements contained in this certificate or other documents given to you do not exclude, restrict or modify the application of any term implied into this warranty by statute, provided that (to the extent any statutory provision permits Monaco to limit its liability for a breach of an implied condition or warranty) Monaco's liability for such breach is limited to the payment of the cost of replacing the product, repairing the product or acquiring an equivalent product.

**8.** Subject to clause 5, our obligations under this warranty are limited to those set out in this certificate, and this warranty is expressly instead of all other warranties, express or implied, including any implied warranty of merchantability or fitness for a particular purpose and notwithstanding any course of dealing between the parties or custom and usage in trade to the contrary.

Terms and conditions are subject to change.

### New Zealand

Monaco Corporation Ltd

Telephone: (09) 415 6000

Facsimile: (09) 415 7400

Email: [customercare@monacocorp.co.nz](mailto:customercare@monacocorp.co.nz)

[www.robinhood.co.nz](http://www.robinhood.co.nz)



## Warranty Certificate (Australia)

### Terms and Conditions

If you are a consumer under the Australian Consumer Law, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure

1. Shiro Australia Pty Limited ("Shiro") also warrants the following Robinhood products against manufacturing defects and faulty materials, under normal use and subject to the exclusions in this certificate, for a period of:

**Rangehood, Ovens, Cooktops, Dishwashers** - 24 months from date of original purchase for domestic use.

**Uniduct** – 12 months from date of original purchase for domestic use.

**Ironing centre** – 12 months from date of original purchase for domestic use.

**Taps, including Pull-out and Mixer taps** – 5 years on parts only from date of original purchase domestic for use, 24 months parts and labour from date of original purchase for domestic use

**Sinks sets**– 5 years on stainless steel sink including draining bench from date of original purchase for domestic use, 6 months on all stainless steel accessories, including wire rack, colander and tray from date of original purchase for domestic use.

**Laundry Tub** - 5 years on stainless bowl, 24 months on Tap, Cabinet and other components from the date of original purchase for domestic use.

"Original purchase", when used in this certificate, means purchase by the customer directly from Shiro or one of its approved suppliers.

2. This warranty is limited to the repair or replacement, at our option, within the warranty period of any component part which we at our discretion determine to contain faulty materials or a manufacturing defect in breach of this warranty. This warranty is subject to terms and conditions set out in this certificate.

3. The warranty only applies within Australia.

4. For warranty service outside of capital city metropolitan area or 30 km from nearest authorised service agent you will be liable for reasonable travelling expenses and the cost of transport of the product or parts to and from the service agent

5. To make a claim under this warranty, you must produce the original invoice or other purchase documentation as proof of the original purchase date. You must send your claim to Shiro Australia Pty Limited, 104 Vanessa Street, Kingsgrove NSW 2208 within 7 days of any alleged defect or failure of the product first becoming apparent, you are responsible for the expense of making a claim under this warranty.

This warranty is given by:

Shiro Australia Pty Ltd

ABN 28 002 386 129

Telephone: 1800 648 556

Facsimile: 1800 628 577

Email: [customercare@shiro.com.au](mailto:customercare@shiro.com.au)

[www.robinhood.com.au](http://www.robinhood.com.au)

Attention Customer Services Manager

### Warranty exclusions

1. The warranty does not apply where, in Shiro's opinion:

The defect is caused by misuse, wear and tear, dirt, fire or accidental damage.

The product has been repaired or serviced by an unauthorised person.

The product was not installed in accordance with our instructions.

The product was purchased overseas or was not designed for use in Australia.

The product was not used, cleaned or cared for in accordance with our instructions.

The product was used outdoors.

2. All Robinhood Rangehoods are suitable for indoor use only and not suitable over BBQs or charcoal cookers designed for outdoor use.

3. In addition, this warranty does not extend to damage or defects which in our opinion, directly or indirectly arise from or are due to: exposing the product to acidic or corrosive materials or chemicals such as dyes, solvents, denture cleaner or acetone; using inappropriate household cleaning products such as abrasive cream or powder cleansers, furniture polish, bleach, mentholated spirits, drain cleaners, sugar soap, metal pads and strongly alkaline or acidic cleaners; heat damage, including from washing the product at high temperatures;

impact or mishandling the product, including the impact caused by objects scraped along, thrown or dropped on the product surface or excessive weight being placed on the product; structural or support changes in or affecting the building or the application where the product has been installed; failure to clean or maintain the product as recommended; or any other causes specified in the product information as being excluded from this warranty.

4. Variations with the colour or gloss within the product or any ageing or fading of colour, shine or gloss level over time are not covered by this warranty. The warranty does not cover visual imperfections or blemishes in the surface and edges of the product that were not brought to your supplier's attention at the time you inspected the product.

5. We will not be responsible under this warranty for, nor pay the costs of, removing the existing product, or reinstalling the new product, or any associated costs or damages.

6. Charcoal filters and light bulbs are not covered by this warranty

The benefits given by this warranty are in addition to other rights and remedies of consumers under any law in relation to the goods which cannot be excluded.

This warranty certificate is not intended to create a contract between Shiro Australia Pty Limited and the purchaser.

### Australia

Shiro Australia Pty Ltd

ABN 28 002 386 129

Telephone: 1800 648 556

Facsimile: 1800 628 577

Email: [customercare@shiro.com.au](mailto:customercare@shiro.com.au)

[www.robinhood.com.au](http://www.robinhood.com.au)


















Description: **ROBINHOOD 60CM CERAMIC COOKTOP TOUCH CONTROL**

Model Number: **RHCC64T**



**MUST BE  
INSTALLED  
BY A LICENSED  
ELECTRICIAN**

## Warning and safety information

-  This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
-  Do not leave this cooktop unattended or unsupervised whilst children or infirmed are present.
-  Accessible parts will become hot when in use and directly after use, care should be taken to avoid touching the burners. To avoid burns and scalds keep children away.
-  The installation of this cooktop is to be carried out by using only a qualified electrician.
-  This cooktop is to be installed in accordance with the local, national building, electrical and plumbing codes.
-  If the power supply cable is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person to avoid a hazard
-  The cooktop is not intended to be operated by means of an external timer or separate remote-control system.
-  **CAUTION** – The cooking process has to be supervised. A short term cooking process has to be supervised continuously. **Warning** – Unattended cooking on a hob with fat or oil can be dangerous and may result in a fire.
-  **WARNING:** If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.
-  Do not use steam cleaner to clean the appliance.
-  Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.
-  The appliance is not intended to be operated by means of external timer or separated remote-control system.
-  **Danger of fire:** Do not store items on the cooking surfaces.
-  Never use the ceramic-glass cooktop as a working surface. Sharp objects may damage the cooktop surface.
-  Do not use steam cleaner or hot steam to clean the appliance.



## Installing the built in cooktop

The appliance must be installed by an qualified person in accordance with local and national building regulations.

Panels and furniture lining of the kitchen cabinet receiving the cooktop must be treated with temperature resistant adhesives 90°C (otherwise they may become discoloured or deformed due to inadequate temperature resistance).

The cooktop is intended for installation into a benchtop above a kitchen cabinet of min 600mm width or more.

The distance between the top of the cooktop and any cabinets or rangehoods above must be no less than 650mm such as indicated in the instructions for installation of the rangehood.

The use of hard wood decorative borders around the worktop behind the appliance is allowed, in case the minimum distance remains as indicated on the installation illustrations.

Minimum distance between the built-in cooktop and rear wall is indicated at the illustration for the installation of the built-in cooktop.

Induction cooktop may be installed into benchtop between 25mm to 40mm thick.

Kitchen cabinet must not have a drawer directly below cooktop. It must be fitted with a horizontal board at least 20mm away from the cooktop bottom surface. Space between the plate and the cooktop must be empty and no objects may be stored or kept there.

Rear side of the kitchen element must also have a 50mm high opening along the entire width of the element, and the front part must have an opening of no less than 10mm .






Incorporation of the oven under the induction cooktop is permissible for ovens equipped with a cooling fan.

Do not install the appliance above a dishwasher or refrigerator.

# Installation

## Built in Ceramic Cooktop Cut-out Dimensions

RHCC64T	
A (mm)	580
B (mm)	510
C (mm)	560
D (mm)	490
E (mm)	50
F (mm)	10
G (mm)	50
H (mm)	4

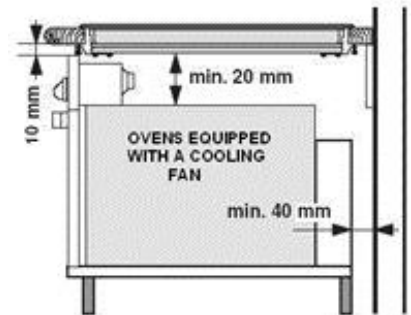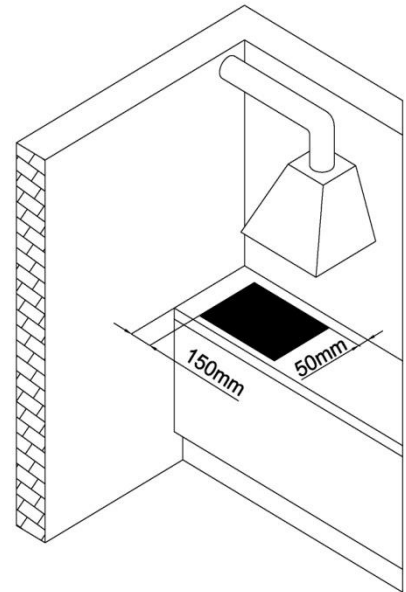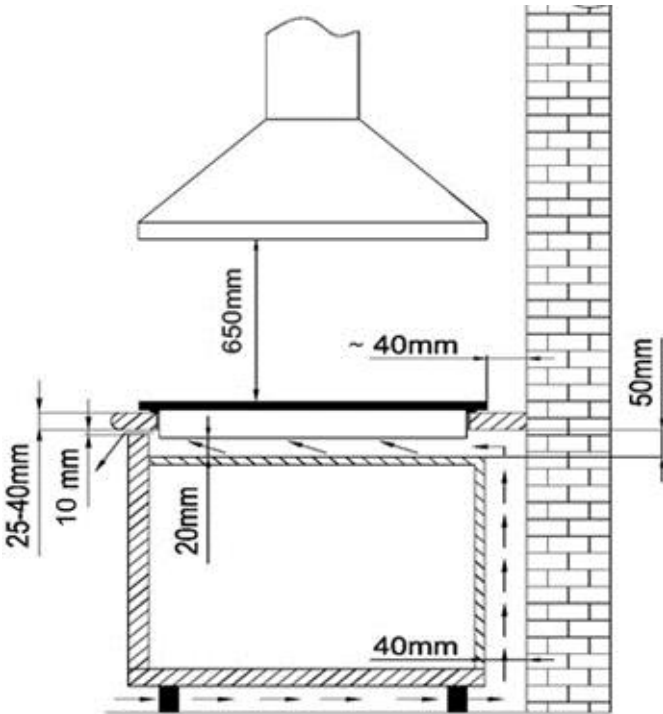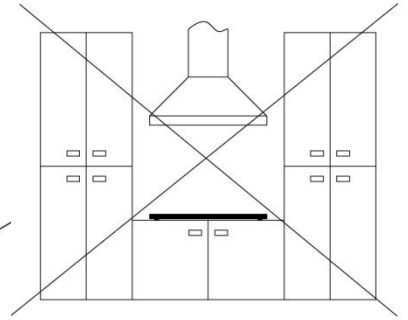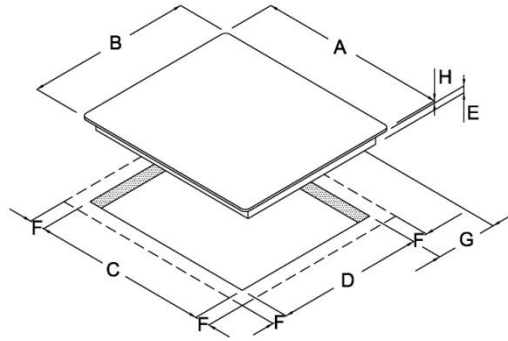

**Note:** In the case of units with base plinths a front grill is necessary which allows an input section of at least 100mm<sup>2</sup>.


### Installing the Foam Gasket

Before inserting the appliance into the opening in the kitchen benchtop, the supplied foam gasket must be attached to the lower side of the glass ceramic (glass) cooktop between the benchtop and cooktop.

**⚠ Do not install the appliance without the foam gasket!**

The gasket should be attached to the appliance in the following way:

- Remove the protective film from the gasket.
- Then, attach the gasket to the lower side of the glass, approximately 2-3mm from the edge.
- The gasket must be attached along the entire length of the glass edge and should not overlap at the corners.
- When installing the gasket, make sure that the glass does not come into contact with any sharp objects.

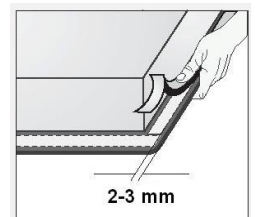


## Installation - *continued*

### Installation procedure.

#### **Cooktop must be placed absolutely horizontal.**

- Suitably protect the edges of the cut aperture.
- Connect the cooktop to the mains power supply (see instructions for the connection of the cooktop to the mains power supply).
- Fix the 4 brackets to the sides.
- Insert the cooktop into the cut aperture.
- Press the cooktop firmly towards the worktop from above.

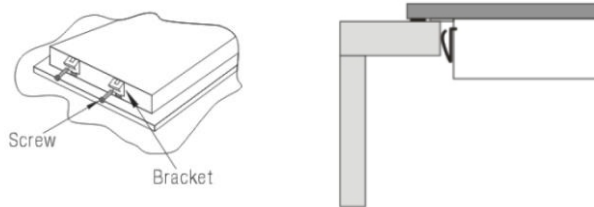

### Connection to the power supply.

Connections must be carried out by a qualified electrician only. The earth protection must comply with the national regulations.

1. Use the cable already attached to the appliance for connection to the power source.
2. Prior to any attempted connection check that the voltage indicated on the rating plate is in line with your home power supply.
  - The rating plate is located underneath the appliance.
  - The appliance is manufactured for use with the power supply voltage 220-240 V~.
3. The electric wiring should be equipped with a circuit breaker able to isolate the appliance from the mains in all points, with the distance between terminals of at least 3 mm in open position. This may be done by means of fuses, safety switches, etc.
4. The connection should be selected in accordance with the declared charge capacity of the mains and the fuse power.
5. Such appliances are allowed to be mounted on one side next to a high kitchen cabinet, the height of which may exceed that of the appliance. On the opposite side however, only a kitchen cabinet of equal height as the appliance is allowed.
6. Upon the completion of installation, live wires and isolated cables must be adequately protected against accidental touching.
7. In accordance with the mains voltage, the appliance should be connected in line with the attached diagram.
8. The earth wire (PE) must be connected to the terminal marked with the earth symbol .
9. Connection may be carried out by means of:
  - rubber coated connection cables, model H05RR-F with yellow-green earth cable;
  - rubber coated connection cables, model H07RN-F with yellow-green earth cable.
10. The power cable must lead through the relief safety device, protecting it from accidental pull out.
11. Upon the completion of installation switch all the hotplates on for about 3 minutes to check the proper functioning



#### **Attention**

Only qualified electricians should attempt any repairs on the appliance, always disconnect the power supply beforehand.

### Technical information

Type	RHCC64T
Product Size (WxDxH)	580x510x50 mm
Rated voltage	220-240 V~ 50/60 Hz
Type of switch	Electronic sensors

### Cooking Zones

Front left	200 mm, 1800 W
Rear left	165 mm, 1200 W
Rear right	200 mm, 1800 W
Front right	165 mm, 1200 W
Total Power (W)	6000W

### Basic adjustment of the sensors to the environment

Upon each connection to the power supply the sensors of the appliance are automatically adjusted to the environment to ensure their proper function, all displays turn on and are fully illuminated for a few seconds.

During the adjustment procedure the sensors must be free of any objects, otherwise the adjustment procedure will be interrupted until such objects are removed from the sensor surface. During this period the regulation process of the cooktop is impossible.

### Hotplate functions

Ceramic glass cooktop is fitted with four hotplates. The cooktop surface is completely flat and smooth, without edges to accumulate dirt.



### **IMPORTANT!**

In case sugar or other heavily sweetened substance is spilled on the hotplate, wipe it up immediately and carefully remove the sugar residues with a scraper while the cooking zone is still warm, otherwise the hotplate may be damaged.

Avoid cleaning the cooktop while the cooking zones are still hot, as you may damage the cooktop.

## Installation - *continued*

### **Power regulation**

Heating power of the hotplates may be set at nine different levels.

The following chart indicates illustrative use of each power setting.

<b>Power Setting</b>	<b>Purpose</b>
<b>1</b>	To melt butter, chocolate, and the like.
<b>2-3</b>	To heat food, keep small amounts of water on the boil, and whip up sauces with egg yolk or butter.
<b>4-5</b>	To heat solid or liquid food, keep small amounts of water on the boil, thaw deep-frozen food, cook omelettes of 2 or 3 eggs, fruit and vegetables, and the like.
<b>6</b>	To stew meat, fish and vegetables, simmer food, make jams, and so on.
<b>7-8</b>	To roast meat, fish, steaks, and liver; to sauté meat, fish, eggs and so on.
<b>9</b>	To deep-fry potatoes, etc and to quick-boil water

### **Energy saving tips**

When buying cookware be careful in selecting size: pot diameter usually refers to the top edge of the dish, which is often larger than the dish bottom.

Steam-pressure pots (economic pots), which use pressure in tightly sealed interior, are especially economic, and save both time and energy. Shorter cooking time leaves more vitamins in food.



Always leave enough water in steam-pressure pots, otherwise it may result in overheating which may damage both the pot and the hotplate.



Always cover the cookware with lids of appropriate size.



Use such dish size to accommodate the quantity of food to be prepared. If you use excessively large pot for small amount of food, you will consume considerably more energy.

# Instructions for use and maintenance

## Ceramic Glass Cooktop

- A. Cooking zone rear left
- B. Cooking zone rear right
- C. Cooking zone front left
- D. Cooking zone front right

Cooktop control panel



## Cooktop Control Panel

All the cooktop controls are grouped together on the front panel. Below chart provides a description of the symbols used.



Hob ignition



Lock key



Value increase button



Value decrease button



Time setting button



Rear right-hand cooking zone



Front right-hand cooking zone



Front left-hand cooking zone



Rear left-hand cooking zone



## Use of the cooktop

When an icon is pressed the unit beeps to confirm.

To operate the panel of the hobs equipped with touch-controls, lightly press the icons printed on its surface.

On first connection to the electrical mains, an operating check will be carried out automatically and all the indicator lights will come on for a few seconds.

# Instructions for use and maintenance

## **Switching on the hob**

When the hob is not in use, all hob components will be switched off. Hold down switch key for 2 seconds to switch the hob on; a LED will turn on above the symbol to confirm that the hob is lit. If no functions are used within 10 seconds of switching the hob on, it will automatically turn itself off.

## **Single cooking zones**

The associated cooking zone is indicated close to each control zone. For example, there is a symbol identifies the knob that controls the rear right-hand cooking zone.


After turning on the hob as described in paragraph "Switching on the Hob", press the keys "+" and "-" to activate the cooking zone (display indicating 0) and adjust the power at which it should operate. The power settings range from a minimum of 1 to a maximum of 9.

You must adjust the power within 10 seconds from when the cooking zone is activated, otherwise it will automatically deactivate.

Press the symbol "+" and "-" buttons in the following way to activate the cooking zone and adjust its power:

1. Press the symbol "+", by continuing to press "+", you can adjust the power of the cooking zone up to the maximum value of 9;
2. If you instead press the symbol "-", you adjust the power of the cooking zone down to the minimum value of 1.



## **Cooking Zone Lock Out**

The cooking zone lock-out function is a user safety functions. It locks out the hob controls to prevent the ceramic cooking zones being switched on accidentally. Hold down lock key  for 1 second to lock out the hob. The hob can be reactivated by holding down lock key again for 1 second.




## **Modifying the data set**

During timed cooking, each single touch on the "+" and "-" symbols increase or reduces the power of the cooking zone. To change the remaining time of a zone, you have to press time key until the LED light in the cooking zone turns on. Now it will be possible to change the operating time by working with the symbols "+" and "-" of the timer.


## **Residual heat**

Each cooking zone is equipped with a residual heat warning device. After any zone is switched off, a flashing  may appear on the display. These warns that the cooking zone concerned is still very hot. Cooking can be restarted while the  is flashing; proceed as described in section "Single cooking zones".

 
## **Control circuit board thermal protection**

If the cooking zones cause overheating of the internal electronic circuit board, the heat will be switched off automatically. This switches off power to the front zones, and the letters  and  flash alternately on the power LEDs. If the circuit board does not cool down, power to all the cooking zones is switched off, and the power les display the text . Cooking can be resumed once the temperature has dropped below the safety threshold.



## **Operator Error**

If the user makes a mistake when using the touch-control buttons, an  appears on the power display, it will remain there as long as the user continues to press the button being used incorrectly.

## **Switching off the cooking zones**

The cooking zones are switched off when the operational power display indicated 0. The zone will automatically deactivate 5 seconds after the display shows 0. If the cooking zones are hot the blinking residual heat  will appear after they are switched off.

## **Switching off**

To switch the hob off, hold down switch key  for 1 second; this deactivates all cooking zones even if they are in use or the lock-out function is active, and the hob will turn off completely. If the cooking zones have just been used, indicator  will start flashing a few seconds after the hob is turned off to warn that they are still hot.



## Troubleshooting

PROBLEM	POSSIBLE CAUSES	WHAT TO DO
The hob doesn't work	<ul style="list-style-type: none"><li>-The hob is not wired in or switch on at the wall.</li><li>- There is a power failure</li></ul>	<ul style="list-style-type: none"><li>-Switch on at the wall</li><li>-Check power supply</li></ul>
The results of cooking are unsatisfactory	<ul style="list-style-type: none"><li>-Temperature is too high or too low</li><li>-Wrong shelf position</li><li>-Wrong type of dish</li><li>-Cooking time is incorrect</li></ul>	<ul style="list-style-type: none"><li>-Consult cooking tips</li></ul>
The hob smokes	<ul style="list-style-type: none"><li>-The hob is dirty</li><li>-Food has spilled over</li></ul>	<ul style="list-style-type: none"><li>-Clean the hob once cooking is finished. Let it cool down first.</li><li>-Use a larger pan</li></ul>
The cooking zones do not come on during timed cooking	Timed cooking programming error	<ul style="list-style-type: none"><li>-Check the instructions for time.</li></ul>

# Cleaning & maintenance

## Cleaning and maintenance of ceramic glass cooktop

Ceramic glass hob should be cleaned only when completely cooled down, preferably after each use, otherwise even the slightest stains remaining after cooking may burn into the hob surface with each following use.

For regular maintenance of ceramic-glass hob use special cleansing agents, produced in such way to create protective film upon the surface.

Before each use, wipe the dust and other particles from the hob, they may scratch the surface (Fig. 1).

Caution: use of steel wool, abrasive cleaning sponges, and abrasive detergents can scratch the surface of the hob. The surface may also be damaged by the use of aggressive sprays and inappropriate liquid chemicals (Fig. 1 and 2).

Pattern marks can be erased by the use of aggressive cleansing agents or rough and damaged cookware bottoms (Fig. 2).

Minor stains are removed with moist soft cloth; after that the surface should be wiped dry (Fig. 3).

Water stains are removed with gentle vinegar solution, but you must not wipe the frame with it (certain models only), since it may lose its glow. Never use any aggressive sprays or limestone removers (Fig. 3).

Major stains are removed with special ceramic-glass cleansers. Follow strictly the manufacturer's instructions.

Be careful to remove any remains of cleansing agent from the hob surface, otherwise they will be heated during the next use and can damage the hob (Fig. 3).

Stubborn and burnt stains are removed with special ceramic-glass scraper. Be careful, however, not to touch the hotplate surface with the scraper handle (Fig. 4).

Handle the scraper with utmost care to avoid injuries!

Sugar and sugar containing food may permanently damage the ceramic-glass hob surface (Fig. 5), so the remains of sugar and sugar containing food must be scraped off from the hob surface immediately, when the hotplates are still hot (Fig. 4).

Discolouring of ceramic-glass hob has no effect whatsoever on its operation and stability. In most cases, it appears as the consequence of burnt in food remains, or as a result of dragging pots and pans (especially aluminium or copper bottom cookware) across the surface, and such discolouring is rather hard to remove.

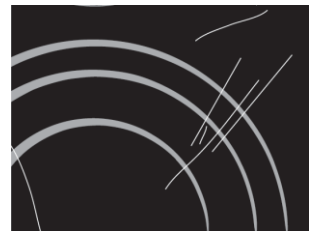


Figure 1



Figure 2

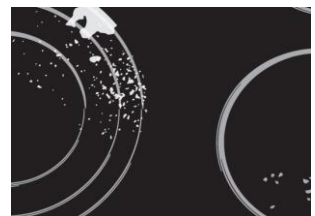


Figure 3



Figure 4

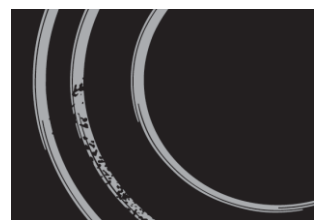


Figure 5

### **Note:**

All described faults are mostly aesthetic and do not affect directly the operation of the appliance. Remedy of such faults is not covered by warranty.

## Warranty Certificate (New Zealand)

### Terms and Conditions

The following conditions apply in respect of the warranty given in this certificate:

1. Monaco Corporation Limited ("Monaco") warrants the following Robinhood products against manufacturing defects and faulty materials, under normal use and subject to the exclusions in this certificate, for a period of:  
**Rangehood, Ovens, Cooktops, Dishwashers** - 24 months from date of original purchase for domestic use.  
**Uniduct** - 12 months from date of original purchase for domestic use.  
**Ironing centre** - 12 months from date of original purchase for domestic use.  
**Taps, including Pull-out and Mixer taps** - 5 years on parts only from date of original purchase domestic for use, 24 months parts and labour from date of original purchase for domestic use  
**Sinks sets** - 5 years on stainless steel sink including draining bench from date of original purchase for domestic use, 6 months on all stainless steel accessories, including wire rack, colander and tray from date of original purchase for domestic use.  
**Laundry Tub** - 5 years on stainless bowl, 24 months on Tap, Cabinet and other components from the date of original purchase for domestic use.

"Original purchase", when used in this certificate, means purchase by the customer directly from Monaco or one of its approved suppliers.

2. This warranty is limited to the repair or replacement, at our option, within the warranty period of any component part which we at our discretion determine to contain faulty materials or a manufacturing defect in breach of this warranty. This warranty is subject to terms and conditions set out in this certificate.
3. The warranty only applies within New Zealand.
4. The customer must produce the original invoice or other purchase documentation as proof of the original purchase date.

### Warranty exclusions

1. The warranty does not apply where, in Monaco's opinion:  
The defect is caused by misuse, wear and tear, dirt, fire or accidental damage.  
The product has been repaired or serviced by an unauthorised person.  
The product was not installed in accordance with our instructions.  
The product was purchased overseas or was not designed for use in New Zealand.  
The product was not used, cleaned or cared for in accordance with our instructions.  
The product was used outdoors.
2. In addition, this warranty does not extend to damage or defects which in our opinion, directly or indirectly arise from or are due to:  
Exposing the product to acidic or corrosive materials or chemicals such as dyes, solvents, denture cleaner or acetone;  
Using inappropriate household cleaning products such as abrasive cream or powder cleansers, furniture polish, bleach, mentholated spirits, drain cleaners, sugar soap, metal pads and strongly alkaline or acidic cleaners;  
Heat damage, including from washing the product at high temperatures;  
Impact or mishandling the product, including the impact caused by objects scraped along, thrown or dropped on the product surface or excessive weight being placed on the product;  
Structural or support changes in or affecting the building or the application where the product has been installed;  
Failure to clean or maintain the product as recommended; or  
any other causes specified in the product information as being excluded from this warranty.
3. Variations with the colour or gloss within the product or any ageing or fading of colour, shine or gloss level over time are not covered by this warranty. The warranty does not cover visual imperfections or blemishes in the surface and edges of the product that were not brought to your supplier's attention at the time you inspected the product.
4. Costs incurred on installation or removal of a product, or any reinstallation of a product, or any associated costs, are not covered by this warranty.
5. Monaco will not be liable for consequential or indirect loss or damage whatsoever and however arising out of or in connection with the supply, performance or removal of the product, including (but not limited to) loss of profit, loss of revenue, loss of contract, loss of goodwill or increased cost of workings, even if due to the negligence of Monaco or any of its approved suppliers, employees or agents.
6. Charcoal filters and light bulbs are not covered by this warranty
7. This warranty and the statements contained in this certificate or other documents given to you do not exclude, restrict or modify the application of any term implied into this warranty by statute, provided that (to the extent any statutory provision permits Monaco to limit its liability for a breach of an implied condition or warranty) Monaco's liability for such breach is limited to the payment of the cost of replacing the product, repairing the product or acquiring an equivalent product.
8. Subject to clause 5, our obligations under this warranty are limited to those set out in this certificate, and this warranty is expressly instead of all other warranties, express or implied, including any implied warranty of merchantability or fitness for a particular purpose and notwithstanding any course of dealing between the parties or custom and usage in trade to the contrary.

Terms and conditions are subject to change.

#### New Zealand

Monaco Corporation Ltd  
Telephone: (09) 415 6000  
Facsimile: (09) 415 7400  
Email: [customer-care@monacocorp.co.nz](mailto:customer-care@monacocorp.co.nz)  
[www.robinhood.co.nz](http://www.robinhood.co.nz)

#### Australia

Shriro Australia Pty Ltd  
ABN 28 002 386 129  
Telephone: 1800 648 556  
Facsimile: 1800 628 577  
Email: [customer-care@shriro.com.au](mailto:customer-care@shriro.com.au)  
[www.robinhood.com.au](http://www.robinhood.com.au)



## Warranty Certificate (Australia)

### Terms and Conditions

If you are a consumer under the Australian Consumer Law, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure

1. Shriro Australia Pty Limited ("Shriro") also warrants the following Robinhood products against manufacturing defects and faulty materials, under normal use and subject to the exclusions in this certificate, for a period of:

**Rangehood, Ovens, Cooktops, Dishwashers** - 24 months from date of original purchase for domestic use.

**Uniduct** – 12 months from date of original purchase for domestic use.

**Ironing centre** – 12 months from date of original purchase for domestic use.

**Taps, including Pull-out and Mixer taps** – 5 years on parts only from date of original purchase domestic for use, 24 months parts and labour from date of original purchase for domestic use

**Sinks sets**– 5 years on stainless steel sink including draining bench from date of original purchase for domestic use, 6 months on all stainless steel accessories, including wire rack, colander and tray from date of original purchase for domestic use.

**Laundry Tub** - 5 years on stainless bowl, 24 months on Tap, Cabinet and other components from the date of original purchase for domestic use. "Original purchase", when used in this certificate, means purchase by the customer directly from Shriro or one of its approved suppliers.

2. This warranty is limited to the repair or replacement, at our option, within the warranty period of any component part which we at our discretion determine to contain faulty materials or a manufacturing defect in breach of this warranty. This warranty is subject to terms and conditions set out in this certificate.

3. The warranty only applies within Australia.

4. For warranty service outside of capital city metropolitan area or 30 km from nearest authorised service agent you will be liable for reasonable travelling expenses and the cost of transport of the product or parts to and from the service agent

5. To make a claim under this warranty, you must produce the original invoice or other purchase documentation as proof of the original purchase date. You must send your claim to Shriro Australia Pty Limited, 104 Vanessa Street, Kingsgrove NSW 2208 within 7 days of any alleged defect or failure of the product first becoming apparent, you are responsible for the expense of making a claim under this warranty.

This warranty is given by:

Shriro Australia Pty Ltd

ABN 28 002 386 129

Telephone: 1800 648 556

Facsimile: 1800 628 577

Email: [customercare@shriro.com.au](mailto:customercare@shriro.com.au)

[www.robinhood.com.au](http://www.robinhood.com.au)

Attention Customer Services Manager

### Warranty exclusions

1. The warranty does not apply where, in Shriro's opinion:

The defect is caused by misuse, wear and tear, dirt, fire or accidental damage.

The product has been repaired or serviced by an unauthorised person.

The product was not installed in accordance with our instructions.

The product was purchased overseas or was not designed for use in Australia.

The product was not used, cleaned or cared for in accordance with our instructions.

The product was used outdoors.

2. All Robinhood Rangehoods are suitable for indoor use only and not suitable over BBQs or charcoal cookers designed for outdoor use.

3. In addition, this warranty does not extend to damage or defects which in our opinion, directly or indirectly arise from or are due to: exposing the product to acidic or corrosive materials or chemicals such as dyes, solvents, denture cleaner or acetone; using inappropriate household cleaning products such as abrasive cream or powder cleansers, furniture polish, bleach, mentholated spirits, drain cleaners, sugar soap, metal pads and strongly alkaline or acidic cleaners; heat damage, including from washing the product at high temperatures;

impact or mishandling the product, including the impact caused by objects scraped along, thrown or dropped on the product surface or excessive weight being placed on the product; structural or support changes in or affecting the building or the application where the product has been installed; failure to clean or maintain the product as recommended; or any other causes specified in the product information as being excluded from this warranty.

4. Variations with the colour or gloss within the product or any ageing or fading of colour, shine or gloss level over time are not covered by this warranty. The warranty does not cover visual imperfections or blemishes in the surface and edges of the product that were not brought to your supplier's attention at the time you inspected the product.

5. We will not be responsible under this warranty for, nor pay the costs of, removing the existing product, or reinstalling the new product, or any associated costs or damages.

6. Charcoal filters and light bulbs are not covered by this warranty

The benefits given by this warranty are in addition to other rights and remedies of consumers under any law in relation to the goods which cannot be excluded.

This warranty certificate is not intended to create a contract between Shriro Australia Pty Limited and the purchaser.

#### New Zealand

Monaco Corporation Ltd

Telephone: (09) 415 6000

Facsimile: (09) 415 7400

Email: [customercare@monacocorp.co.nz](mailto:customercare@monacocorp.co.nz)

[www.robinhood.co.nz](http://www.robinhood.co.nz)

#### Australia

Shriro Australia Pty Ltd

ABN 28 002 386 129

Telephone: 1800 648 556

Facsimile: 1800 628 577

Email: [customercare@shriro.com.au](mailto:customercare@shriro.com.au)

[www.robinhood.com.au](http://www.robinhood.com.au)

