

Description: **ROBINHOOD SENSOR DRYER 7KG WHITE**

Model Number: **RHSD7W**



Model pictured: RHSD7W

Actual unit may differ from image above

Contents

Congratulations!

Thank you for choosing one of our appliances. Before you use the appliance, we strongly recommend that you read through the whole user manual which provides important safety instructions and description of the product and the proper use of its functions.

To avoid the ever-present risks involved with using an electrical appliance it is vital that the oven is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. It is important that you retain these instructions and your proof of purchase along with any other important documents about this product for future reference.

Due to continual product development, Robinhood reserves the right to alter specifications or appearances without notice.

Important Safety Instructions.....	1-2
Appliance Details.....	3
Installation.....	4
Operating Instructions.....	5-8
Cleaning and Maintenance.....	9
Troubleshooting.....	10
Warranty certificate (New Zealand)	11

Disposal Information

- Most of the packing materials are recyclable. Please dispose of these materials through your local recycling depot or by placing them in appropriate collection containers.
- If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.

Important Safety Instructions

When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should always be followed, including

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Young children should be supervised to ensure that they do not play with the appliance.
- The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
- The lint trap has to be cleaned frequently.
- The lint trap must to be allowed to accumulate around the tumble dryer.
- Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliance burning other fuels, including open fires.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber (latex foam), shower caps, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- The exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.
- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.
- The maximum mass of dry load is 7 Kg.
- **WARNING:** Never stop a tumble dryer before the end of the drying cycle unless all items quickly removed and spread out so that the heat is dissipated.
- **WARNING:** The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- **WARNING:** This appliance is only to be serviced by a qualified person. There are no user-serviceable parts inside.

Symbol Meaning



Read operator's manual



Warning: Risk of fire / flammable material

 
Important Safety Instructions

- In certain circumstances electrical appliances may be a danger hazard. Check the conformity of voltage and power settings, which are specified on the information plate attached to the appliance and/or packaging, with the usage conditions available.
- Do not place heavy objects in or on these appliances, or use for storage, or let children play or swing from the door. Do not use the appliances until fully installed.
- The electrical connection must be accessible after installation. The appliance must be electrically isolated before any maintenance can be performed. The appliance is not intended to be operated by means of an external timer or separate remote control system.
- Fabric softeners or similar products should not be used in a tumble dryer to eliminate the effects of static electricity unless this practice is specifically recommended by the manufacturer of the fabric softener or product.
- Undergarments that contain metal reinforcements should not be placed in a tumble dryer. Damage to the tumble dryer can result if metal reinforcements come loose during drying. When available a drying rack could be used for such items.
- Plastic articles such as shower caps or babies' waterproof napkin covers should not be placed in a tumble dryer.
- Rubber-backed articles, clothes fitted with foam rubber pads, pillows, galoshes and rubber-coated tennis shoes should not be placed in a tumble dryer.
- Do not cover the air inlet or exhaust openings.
- If appliance has ventilation openings in base, ensure carpet does not obstruct the openings.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer in such a way that a full opening of the tumble dryer door is restricted.
- Undergarments that contain metal reinforcements should not be placed in a tumble dryer. Damage to the tumble dryer can result if metal reinforcements come loose during drying. When available a drying rack could be used for such items.
- Do not cover the air inlet or exhaust openings.
- If appliance has ventilation openings in base, ensure carpet does not obstruct the openings.
- Do not operate the dryer without the filter door and filter base.
- Do not install the dryer in the humid and drenching environment.
- Unplug the appliance before cleaning and maintenance.
- Save these instructions.

INDOOR USE ONLY - this appliance is not intended for outdoor use.

Appliance details


Model	RHSD7W
Maximum Drying Capacity	7 kg
Rated Voltage	220 - 240 V
Rated Frequency	50 Hz
Rated Wattage	2000 W
Net Weight	35 kg
Dimension (WxDxH)	595 × 555 × 840mm (without door frame) 595 × 610 × 840mm (with door frame)

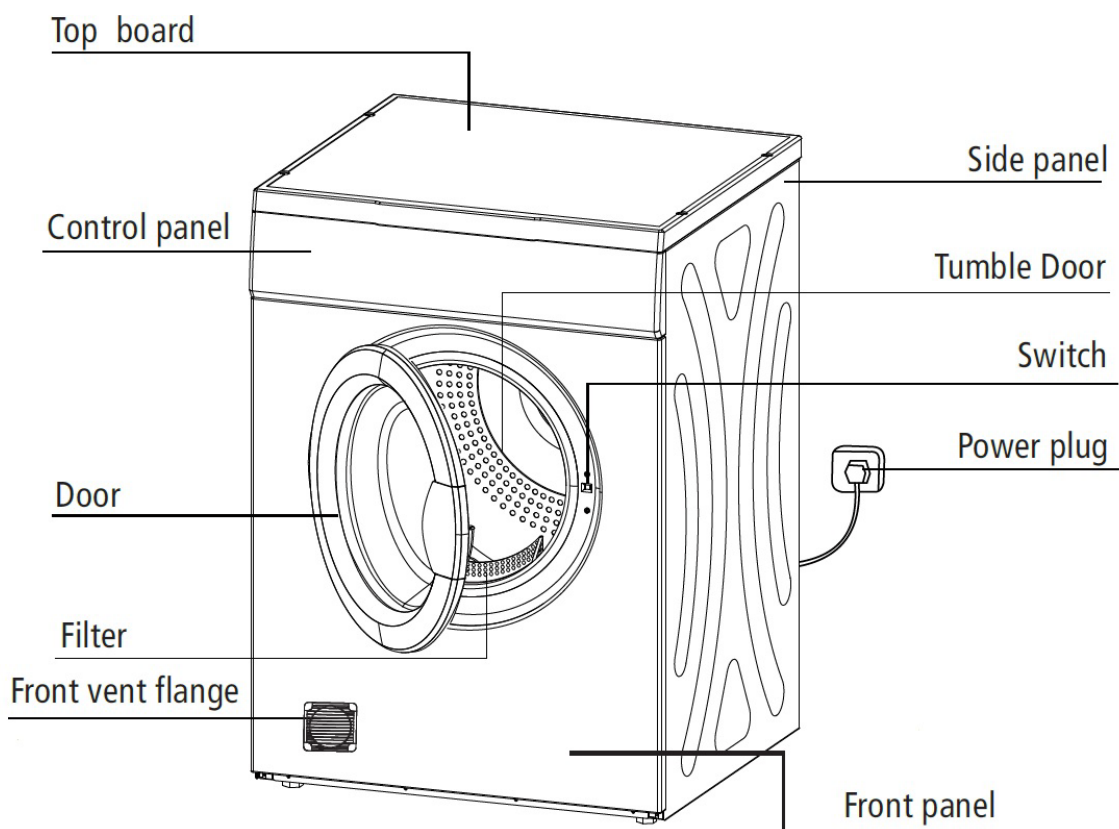

Installation Instructions


Installation Area

 Dryer should be placed in a ventilated area with not less than 10cm distance from the wall. It is suggested there is no obstacle within 1.5m in front of dryer and keep the area ventilated.

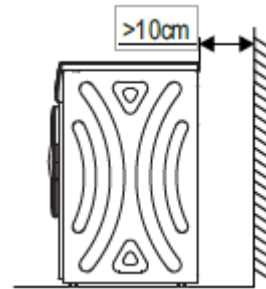

Levelling Adjustment

 Once the dryer is installed in a desired position, check if the dryer is 100% levelled by using a spirit level. If not, adjust the levelling feet with a tool.

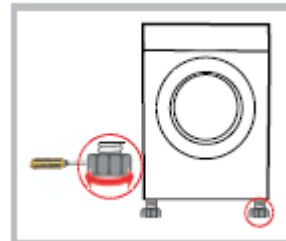

Note!

If the dryer cannot be placed vertically (the lean angle should be less than 2°), dryer will work unbalanced or stop working.

Notice when installing:

 
- Do not install the dryer in the open air or place easily damaged by rain;
- Do not place the back of dryer near curtain or something in the wind;
- Do not place the dryer near gas or flammable area.

Operation Instructions


Quick Start

Note!


Ensure the dryer is installed properly before using.

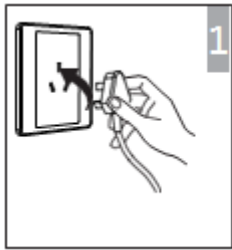

Plug in

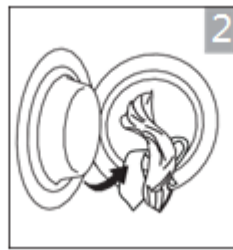 

Load

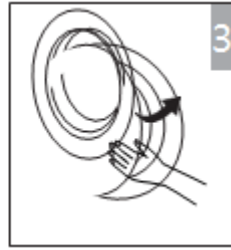 

Close door

Drying



On

 
Select
program

Select
dryness
level


Start

After Drying


Buzzer beeps

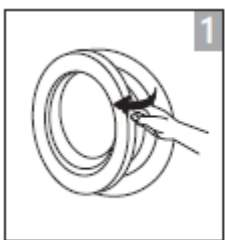

Open the door and
take out laundry

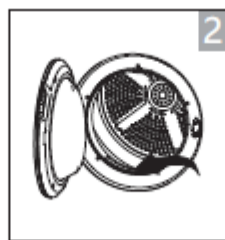 

Clean the
lint filter

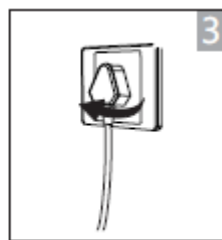 

Unplug

Note!












- If the socket comes with on/off switch, please switch off the power supply.

Operation Instructions

Before Each Drying

1. Before drying, thoroughly spin the wet laundry in the washing machine. High spin speed can reduce the drying time and save energy consumption.
2. For uniform drying result, sort the laundry according to fabric type and drying program.
3. Before drying, please close zips, hooks and eyelets, button up, tie fabric belts, etc.
4. Do not over dry the clothes, because over dried clothes can easily get creases.
5. Do not dry the articles containing rubber or similar elastic materials.
6. The door can be opened only after the program of the drying machine finishes to prevent human skin from being scalded by hot steam or over heated drying machine.
7. Clean the lint filter and empty container after each use to avoid extension of drying time and energy consumption.
8. Do not dry these clothes after dry-clean process.













The reference weight of dry clothes (each)

 Mixed-fabric clothes (about 800g)	 Jacket (about 800g cotton)	 Jeans (about 800g)	 Towel quilt (about 900g cotton)
 Single bedsheet (about 600g cotton)	 Work clothes (about 1120g)	 Sleepwear (about 200g)	 Long sleeve shirt (about 300g cotton)
 Short sleeve shirt (about 180g cotton)	 Short pants (about 70g cotton)	 Socks (about 50g mixed-weave)	

Note!


- Never overload.
- Not for textile with dropping water. The dryer could be damaged, even fire.
- Not suitable for silk or woolen textiles.

Please pay attention to using the dryer. If the materials of your clothes cannot be machine dried or contain the following symbols:

 Dry	 Normal	 Not tumble dry normal	 Do not dry
 Line dry / hang to dry	 Drip dry	 Dry flat	 In the shade
 Dry clean	 Do not dry clean	 Dry clean normal cycle with any solvent	 Dry clean normal cycle petroleum solvent only

Operation Instructions

 Control Panel

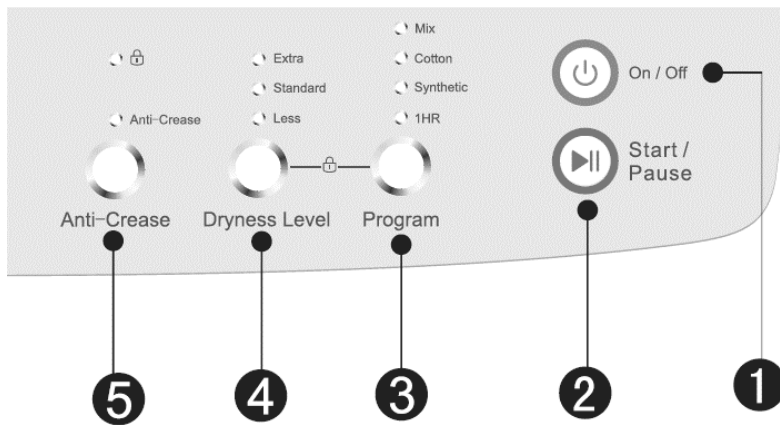

1 On / Off

Product is switched on or off.

4 Dryness Level

(Extra/Standard/Less)

2 Start / Pause

Press the button to start or pause the drying cycle.

5 Anti-Crease

At the end of the drying cycle, the anti-crease phase time is 30 minutes (default) or 120 minutes (selected).

3 Program

Different dryer cycle can be selected according to the user's needs to make the clothes have more effective drying results.

Note!

- Press the [Program] button to select the desired program.
- Press the [Dryness Level] button to select the desired dryness level.
- Press the [Anti-Crease] button to activate Anti-Crease function.
- Press the [Start/Pause] button to start the dryer or pause a selected program.
- Press the [Delay] button to book the drying process in advance.
- If users need Child Lock function, press the [Program] and [Dryness Level] buttons simultaneously for over 3 seconds to activate child lock function. Press both buttons for 3 seconds again to deactivate the Child Lock function. The "Child Lock" function will lock all buttons except [On/Off]. When the power supply is shut off, the preset "Child Lock" function will be deactivated.
- Once the drying cycle is finished, the buzzer will prompt. Press the [On/Off] button to switch off and unplug the dryer.
- Clean the lint filter and drum regularly to ensure optimal drying performance.

Operation Instructions

Drying Program Table


Clothing Type	Approximate amount of remaining humidity	Capacity (kg)	Programs	Dryness Level	Note
Cotton	80 % - 90 %	7	Cotton	Extra	According to the Type and Capacity of the clothing to select the most suitable Program and Dryness Level.
	60 % - 70 %	7 / 3.5	Cotton	Standard	
		7	Cotton	Less	
Mix	70 %	7 / 3.5	Mix	Extra	
	60 %	7 / 3.5	Mix	Standard	
Synthetic	50 %	3.5	Synthetic	Extra	
	40 %	3.5	Synthetic	Standard	
Cotton	--	1	1 Hr	--	

Cleaning and Maintenance

Filter clean

- Clean the lint filter after each use.
- Remove by pulling straight up.
- Clean the filter with damp cloth or your hands.
- Install the filter back after cleaning.

 Note: If the filter is cleaned by wet damp cloth or water, please ensure it's 100% sun dried before putting it back.

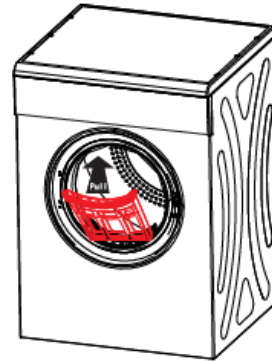

Cleaning cabinet and drum

- Use soft damp cloth to wipe the cabinet and drum.
- Not to rinse by water directly.
- Not to use neutral scour wipe.
- Not to use gasoline and alcohol wipe.
- Ensure to open the front door for aeration after cleaning the drum.



Safety reset

 
1. The dryer has a safety shut-off switch which is activated by temperature.
2. The safety reset button is on the back of the dryer. If your dryer is not heating, please try to reset this button. You may need to wait 10 minutes for the dryer to cool down.
3. The most common reason for the dryer being overheated is a blocked lint filter.
4. Clean the lint filter after each load to prevent overheating of the dryer.

The shut-off switch may operate for the following reasons:

1. Lint filter is blocked.
2. Exhaust outlets blocked at the front of the dryer.
3. Poor ventilation in the laundry area, open a window or door.
4. Lightweight garment eg. handkerchief, may cover up the filter.

Safety Reset Button

Use your finger or a pencil to press the button in until you feel it clicks.

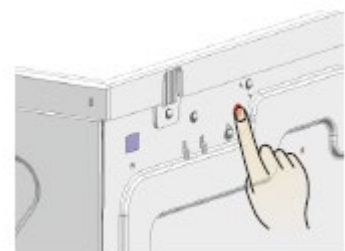

Trouble Shooting

Trouble	Cause	Solution
Will not start	<ul style="list-style-type: none"> • Power cut. • The power plug is not plugged tight. • Dry clothes exceed. 	<ul style="list-style-type: none"> • Wait for switching on electricity. • Check the power socket, make sure plug tight. • The clothes in drier must be after spinning, and drying clothes cannot exceed 7kg.
External surface is hot or can smell hot	<ul style="list-style-type: none"> • The lint filter is dirty. • The uptake or exhaust duct is dirty. 	<ul style="list-style-type: none"> • Make sure clean the lint filter in time.
Clothes too dry	<ul style="list-style-type: none"> • The clothes in machine are too full. • Not to take out the clothes on time when drying cycle finishes. • The clothes don't assort properly. • The temperature is enacted too high. 	<ul style="list-style-type: none"> • Make sure the clothes are not too full. • Take out the clothes immediately when finish. • Observe the maintenance label on clothes.
Clothes shrink	<ul style="list-style-type: none"> • Too dry 	<ul style="list-style-type: none"> • Observe the maintenance label on clothes. If easy to shrink, should examine the clothes when dry. Take out the clothes when tiny damp for too dry. Then hang the clothes until full dry.
Hairball on clothes	<ul style="list-style-type: none"> • It is right for synthetic fibre and permanent press fibre causing hairballs. This is because the right rubs causing. 	<ul style="list-style-type: none"> • Use fabric softener lubricate fibre, please spray settled glue on cuff and neckline when iron clothes. Turn the sarcenet out for reducing rub.

Note:

- Overloaded wet clothes may cause noise when the dryer is in operation.
- Air bumping: When drying, the dryer will generate steam which comes out from the venting flange. This may cause bumping with the bottom of the drum.

Warranty Certificate (New Zealand)

Terms and Conditions

The following conditions apply in respect of the warranty given in this certificate:

1. Monaco Corporation Limited ("Monaco") warrants the following Robinhood products against manufacturing defects and faulty materials, under normal use and subject to the exclusions in this certificate, for a period of:
Rangehood, Ovens, Cooktops, Dishwashers - 24 months from date of original purchase for domestic use.
Uniduct – 12 months from date of original purchase for domestic use.
Ironing centre – 12 months from date of original purchase for domestic use.
Laundry Tub - 5 years on stainless bowl, 24 months on Tap, Cabinet and other components from the date of original purchase for domestic use.

"Original purchase", when used in this certificate, means purchase by the customer directly from Monaco or one of its approved suppliers.

2. This warranty is limited to the repair or replacement, at our option, within the warranty period of any component part which we at our discretion determine to contain faulty materials or a manufacturing defect in breach of this warranty. This warranty is subject to terms and conditions set out in this certificate.
3. The warranty only applies within New Zealand.
4. The customer must produce the original invoice or other purchase documentation as proof of the original purchase date.

Warranty exclusions

1. The warranty does not apply where, in Monaco's opinion:
The defect is caused by misuse, wear and tear, dirt, fire or accidental damage.
The product has been repaired or serviced by an unauthorised person.
The product was not installed in accordance with our instructions.
The product was purchased overseas or was not designed for use in New Zealand.
The product was not used, cleaned or cared for in accordance with our instructions.
The product was used outdoors.
2. In addition, this warranty does not extend to damage or defects which in our opinion, directly or indirectly arise from or are due to:
Exposing the product to acidic or corrosive materials or chemicals such as dyes, solvents, denture cleaner or acetone;
Using inappropriate household cleaning products such as abrasive cream or powder cleansers, furniture polish, bleach, mentholated spirits, drain cleaners, sugar soap, metal pads and strongly alkaline or acidic cleaners;
Heat damage, including from washing the product at high temperatures;
Impact or mishandling the product, including the impact caused by objects scraped along, thrown or dropped on the product surface or excessive weight being placed on the product;
Structural or support changes in or affecting the building or the application where the product has been installed;
Failure to clean or maintain the product as recommended; or
any other causes specified in the product information as being excluded from this warranty.
3. Variations with the colour or gloss within the product or any ageing or fading of colour, shine or gloss level over time are not covered by this warranty. The warranty does not cover visual imperfections or blemishes in the surface and edges of the product that were not brought to your supplier's attention at the time you inspected the product.
4. Costs incurred on installation or removal of a product, or any reinstallation of a product, or any associated costs, are not covered by this warranty.
5. Monaco will not be liable for consequential or indirect loss or damage whatsoever and however arising out of or in connection with the supply, performance or removal of the product, including (but not limited to) loss of profit, loss of revenue, loss of contract, loss of goodwill or increased cost of workings, even if due to the negligence of Monaco or any of its approved suppliers, employees or agents.
6. Charcoal filters and light bulbs are not covered by this warranty
7. This warranty and the statements contained in this certificate or other documents given to you do not exclude, restrict or modify the application of any term implied into this warranty by statute, provided that (to the extent any statutory provision permits Monaco to limit its liability for a breach of an implied condition or warranty) Monaco's liability for such breach is limited to the payment of the cost of replacing the product, repairing the product or acquiring an equivalent product.
8. Subject to clause 5, our obligations under this warranty are limited to those set out in this certificate, and this warranty is expressly instead of all other warranties, express or implied, including any implied warranty of merchantability or fitness for a particular purpose and notwithstanding any course of dealing between the parties or custom and usage in trade to the contrary.

Terms and conditions are subject to change.

New Zealand

Monaco Corporation Ltd
Telephone: (09) 415 6000
Facsimile: (09) 415 7400
Email: customercare@monacocorp.co.nz
www.robinhood.co.nz