


Description: **ROBINHOOD PREMIUM WALL CANOPY RANGEHOOD 90CM WITH GESTURE CONTROL**  
Model: **RHWC1600PBW**



**Model pictured:** RHWC1600PBW Pure Black

*Model may vary slightly from image pictured*

## Product Dimensions

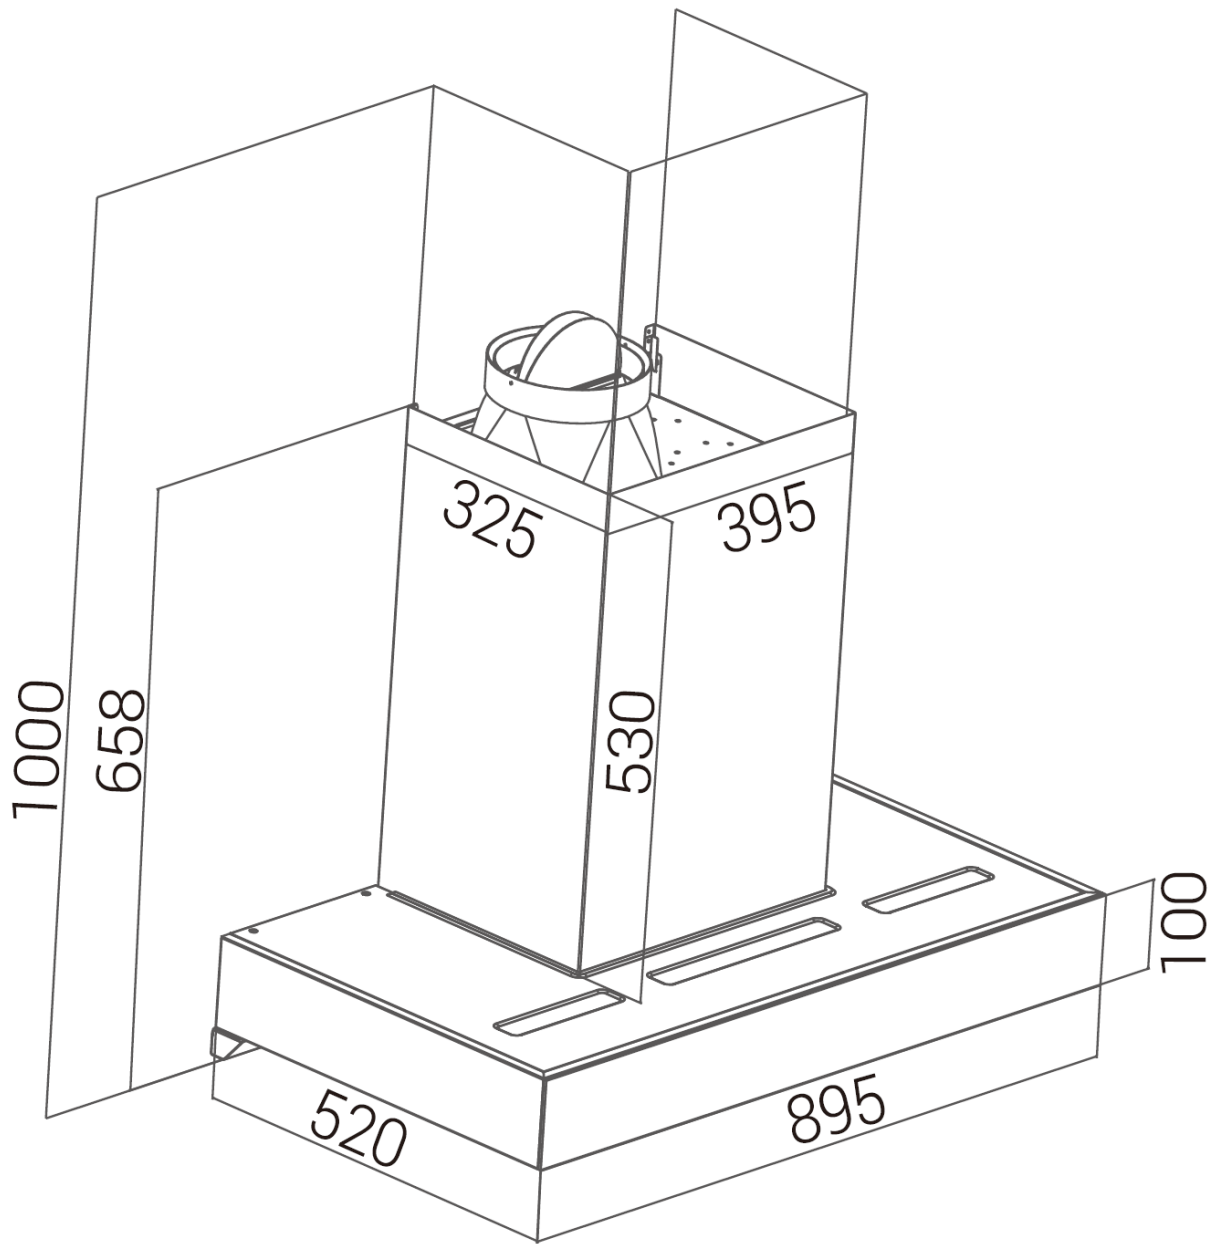

















**Model Pictured:** RHWC1600PBW (Pure Black)

## Product approvals and ratings

Product rating

**Appliance:**  
**RHWC1600PBW: 284W 220-240V ~50Hz LED: 1x4W**

## Important safety information

-  All electrical work must be done by a registered electrician in accordance with local and national electrical codes as applicable. For your safety, this product must be earthed.
-  If the supply cord of this equipment is damaged, it must only be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
-  This rangehood is designed for indoor use only and must be in a dry location.
-  Disconnect the power supply when any maintenance is carried out, including changing light bulbs or inspecting filters. Do not touch lights after appliance use.
-  This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
-  Children should be supervised to ensure that they do not play with the appliance.
-  There shall be adequate ventilation of the room when the rangehood is used at the same time as appliances burning gas or other fuels.
-  There is a fire risk if cleaning is not carried out in accordance with the instructions. You must read the details concerning the method and frequency of cleaning.
-  Do not flambé under the rangehood. Do not flame under the rangehood.
-  Exhaust air must not be discharged into an existing flue which is used for exhausting fumes from appliances burning gas or other fuels.
-  The minimum distance between the hob surface and the lowest part of the rangehood is 650mm. If the instructions for the hob specify a greater distance, this has to be taken into account.
-  Attention should be given to ensure that any applicable regulations concerning the discharge of exhaust air is fulfilled. If recirculating, take care no ventilation becomes blocked or partially blocked.
-  CAUTION: Accessible parts may become hot when used with cooking appliances.
-  WARNING: Failure to install the screws or fixing devices in accordance with these instructions may result in an electrical hazard.
-  It is recommended that the rangehood is started before cooking, and allowed to run for a period after cooking has finished (to remove vapours & odours). Turn off when not in use.
-  Ranged hoods and other cooking fume extractors may adversely affect the safe operation of appliances burning gas or other fuels (including those in other rooms) due to back flow of combustion of a range hood or other cooking fume extractor, the operation of open flued gas appliance should be tested by a competent person to ensure that back flow of combustion gases does not occur.













### Notes:

- Please remember to fill out the details on the warranty certificate (do not post).
- Remove any plastic coating from the product.
- Ensure all screws are fitted and tightened.

## Pre-installation

Thank you for purchasing a quality Robinhood rangehood. Robinhood has a high standard of quality control and every range hood is tested and approved before it leaves the factory.

### Important:

-  Please read the entire instructions before installing the rangehood. Check appliance for damage or missing parts (if damaged, do not install).
-  Always switch power off prior to installation.
-  All electrical work must be done in accordance with local and national electrical codes as applicable.
-  For safety, this product must be earthed.
-  A power outlet should be within 1m of the power cord exit from the rangehood.
-  The socket must be accessible and enable the end user to isolate the rangehood from the power for the purpose of internal cleaning or maintenance.
-  Stainless steel or powder coat is very easily damaged during installation if abraded or knocked by tools. Protect the rangehood with the cardboard box or plastic bag during installation.
-  All ducting must comply with local requirements and building codes.
-  Suitable fixings will be required to mount this rangehood.
-  See Ducting options next page.
-  The minimum distance between an electric or gas hob surface and the lowest part of the rangehood is 600mm. If the instructions for the hob specify a greater distance, this has to be taken into account.
-  Stainless steel is very easily damaged during installation if abraded or knocked by tools. Protect the rangehood with the cardboard box or plastic bag during installation.

### Contents of packaging:


- 1 x Rangehood
- 1 x Oil collector
- 1 x Ø180mm S/S wall duct outlet
- 1 x Ø180mm to Ø150mm adaptor
- 1 x Inner flue
- 1 x Outer flue
- 1 x 2M Ø180mm flexi ducting
- 1 x Sealing tape
- 1 x mounting bracket
- 3 x Wall Plugs
- 3 x M5x40mm Screw
- 9 x 15mm Screw
- 2 x 7mm Screw
- 2 x 4mm Screw

### Typical equipment required:

- electric drill
- screwdriver
- tape measure
- spirit level
- duct tape
- jig saw and ladder


## Ducting Options


The method of ducting should be carefully considered before installing the rangehood. The guide below recommends the ducting components to use for all common ducting configurations - through the top of the home (for the roof and eaves) and through the wall of the home. For RHC1600PBW model Robinhood always recommends the use of the 2M Ø180mm flexi ducting included with the model and the Ø180mm wall duct outlet. This will achieve the best extraction rate and lowest noise level for the hood. In situation where a 150mm outlet is required then the 180mm to 150mm adaptor can be used at the end of the 2M x 180mm flexi ducting that is included with this rangehood. From here 150mm ducting can be used to carry through to the outlet to enable fitment of the required 150mm duct outlet. If Ø180mm ducting can be used the entire way, this will achieve the best possible result for this rangehood. NOTE: This rangehood cannot be operated in recirculation mode.

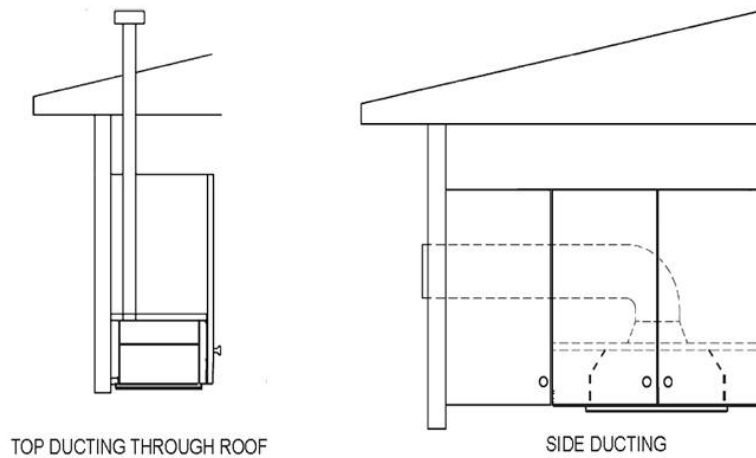

Extra lengths and/or bends may be required, depending on the length required and whether there is any structural material in the run e.g. rafters. As stated above, if additional ducting is required then Ø180mm is optimal but 150mm can be used in conjunction with the 180mm ducting supplied via the use of the 180mm to 150mm adaptor. NOTE: The shorter the duct length, the better the performance.

### Ø180mm Wall outlet:

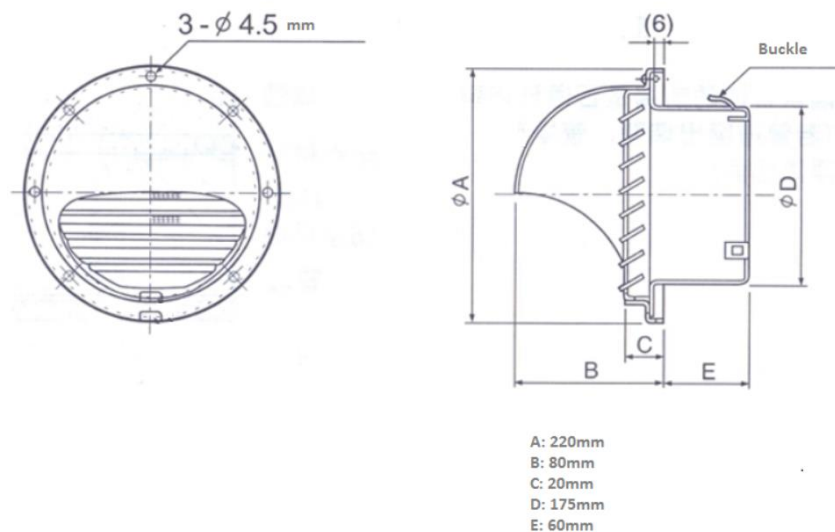

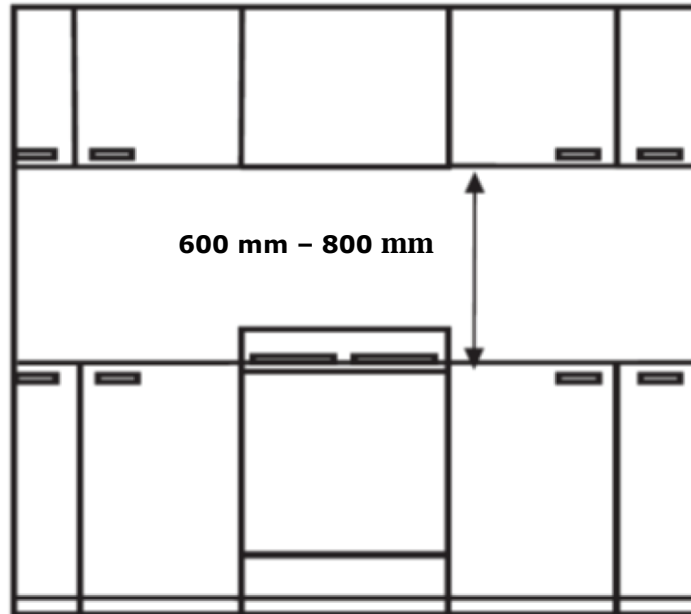

**Note: RHWC1600PBW is not suitable for Wall or Soffit Ducting with a 2.4m stud height. Stud heights of 2.55m and above are OK.**

Please note that this chart is designed as a guide. Please consult Robinhood customer services if unsure. For NZ phone (09) 415 6000 or [www.robinhood.co.nz](http://www.robinhood.co.nz). For AUS phone 1800 648 556 or [www.robinhood.com.au](http://www.robinhood.com.au).

**⚠ Before drilling any holes check that the area behind the surface to be drilled is clear of any electrical cables, pipes etc. The cabinet must take a weight bearing of at least 40kgs weight. Whenever possible protect the Rangehood with a fabric sheet or similar.**


When installing the rangehood, the lower edge of the unit must be a minimum of 600mm above the cooking surface of the cooktop. Note that the minimum distance specified in the cooktop manual may be different; if so, the greater distance must be used.

## Installation

### Installation


- With the rangehood unpackaged, place the outlet spacer on top of the outlet hole, place the Ø180mm outlet on top of that, line up the mounting holes and fix in place using eight of the 15mm screws.
- If the outlet flaps are not installed, fix at the top of the outlet (these form a one-way valve that stops things from falling into the rangehood when it is not in operation).
- As stated on page 4 - always use the 2M Ø180mm ducting provided with these hoods. If required, the 180mm to 150mm adaptor can be fitted to the end of the 180mm ducting to allow for 150mm ducting exterior/wall outlet.
- The rangehood must be installed at the correct distance above the cooktop (600mm minimum from the cooking surface, 800mm recommended maximum). Measure up from the top of the cooktop the desired height & draw a horizontal line.
- From this line, measure up 600mm and draw a second horizontal line for the main mounting screws.
- Mark the centre point on this line and use the mounting bracket to mark the other two screw positions ~132mm either side.
- For a brick or concrete wall, drill in the two holes ~40mm deep.
- Fit the wall plugs and attach the mounting bracket (hooks up) using the three supplied 40mm screws.
- Lift the rangehood onto the bracket hooks and check for strength.
- If good, fit the remaining 15mm screw into the hole right of centre on the bracket, ~4 turns (this will help prevent the rangehood from being accidentally removed).
- Fit the ducting to the outlet and secure in place with the supplied 4mm screws.
- Lift the inner chimney to the ceiling and screw into position using the two 7mm screws (if this is not sufficient, the use of hollow wall anchors or spring toggle screws is recommended).
- Check that the rangehood is secured and connect to the power supply.
- The long oil collector clips to the bottom back edge of the rangehood.

\*If the wall is not brick or concrete, an alternate mounting method must be determined.

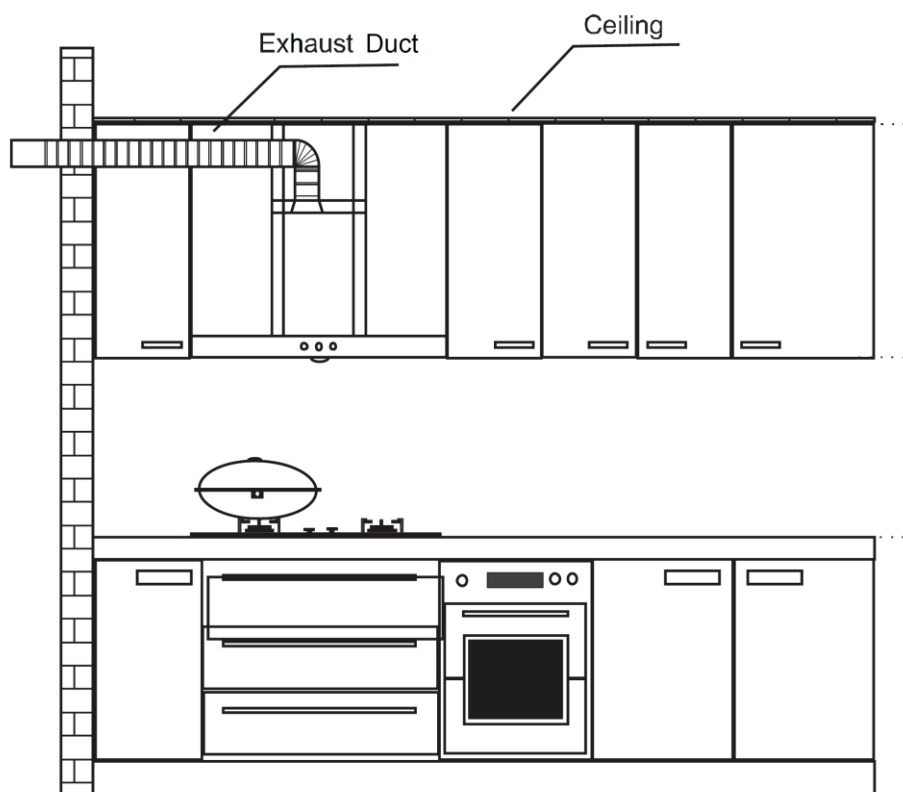

## Operating instructions

### Control Panel

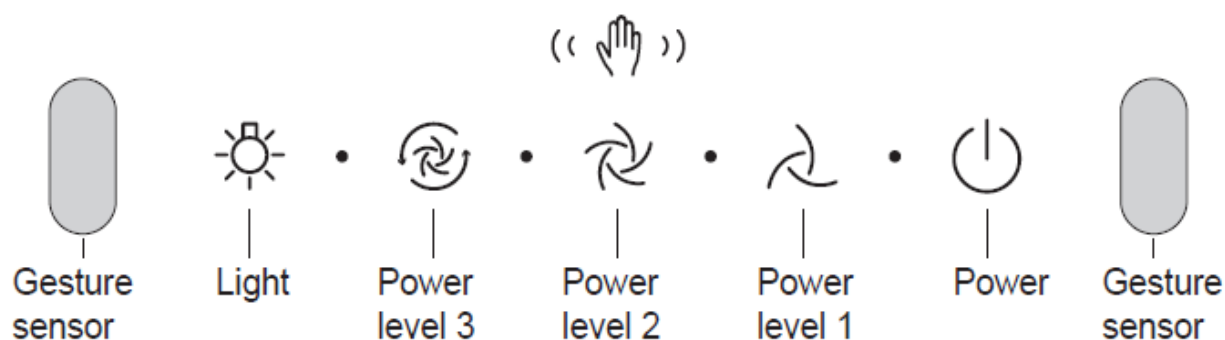

The control panel for the RHC1600PBW is combined with gesture and touch controls. Each function is represented by an icon. When the user touches or gesture controls the rangehood, each function will be activated. If the icon is touched/pressed, a “beep” will be heard.

### Power

Once the appliance is connected to the power source, the appliance is in stand-by mode.

### Gesture control

In power off mode, palm facing forward the gesture sensor, wave from left to right or right to left once, then rangehood will start operating with power level 1 and light on. During operation, power levels can be manually adjusted by touching the power level icons; light can also be manually turned off or back on. In power on mode, palm facing forward the gesture sensor, wave from left to right or right to left once, then rangehood will stop operating with light off.

### Lights

The lights can be operated independently from the fan. Press the light icon once and the LED lights will be turned on. Press a second time and they will be turned off.

### Fan Speed & Touch Control

Once rangehood is operated by gesture control on power level 1, user can manually adjust the fan speed to power level 2 or 3 by pressing each icon.


Power level 3 is a designated intensive function for maximum air movement during times of heavy fumes/smoke. It will run continuously for 3 minutes before automatically returning to power level 2.




## Cleaning and maintenance

### General Maintenance

#### Switch off the rangehood before cleaning or maintenance.

 To prevent surface damage never use abrasive or oil based liquid cleaners. To clean the surfaces of the appliance, use mild detergent and warm water. In areas of high humidity and coastal environments cleaning should be carried out frequently.

 Warning: Oil will build-up in the oil collector & must be emptied periodically.

### Filter Maintenance

The stainless steel filters do not generally need removing and cleaning. All oils should be collected in the oil collector. If excess oil can be viewed on the outside of the filter, clean off using paper towels. The filter can be removed if necessary by removing the two screws at the front of the filter.

### Removal of Oil Collector

To remove the oil collector, grip at both ends and carefully lever forward to unclip it from the corners. Take care to keep the oil collector level so that oil does not spill out. The centre of the oil collector has a viewing window; empty when the level reaches the half-way line. Once emptied, rinse with hot soapy water and reclip into place.

### Replacement of LED Lamps

The LED lamps cannot be replaced by the consumer. If any faults occur, please ring your nearest Service Department.

For any other problems please call help line on NZ 0800 760 667 or AUS 1800 648 556

### Flue Extension Kit

We supply a flue extension (**EXTKITDECN30B**) with total length of 810mm to suit higher ceiling. Simply sliding the flue extension into the original lower/outer flue and adjust the total flue height to suit your installation.

## Cleaning and maintenance

Fault	Cause	Solution
Lights do not work, but fan works	The LED damaged	Contact Service Department
	LED wiring connection poor	
	LED switch damage	
Lights work, but fan does not work	Motor bearings damage	Contact Service Department
	Motor burn out	
	Motor control switch damage	
Light does not work, motor does not work	Plug contact outlet bad	Fix or change
	Power wire cut off	Change power wire
	Switch damage	Contact Service Department
Appliance vibrates violently	Motor screw loosen	Contact Service Department
	Fixing brackets loose	Tighten the fixing brackets
Insufficient suction	The distance between the body and the cooktop too long	Readjust the distance
	Cross-ventilation too strong or too closed in the kitchen	Reduce cross-ventilation or open the window
	Exhaust pipe too long	Adjust the length of pipe
	Air outlet valve not open	Check the valve if flexible
	The outside wind is too strong	Shield outlet from wind

## Warranty Certificate (New Zealand)

### Terms and Conditions

The following conditions apply in respect of the warranty given in this certificate:

1. Monaco Corporation Limited ("Monaco") warrants the following Robinhood products against manufacturing defects and faulty materials, under normal use and subject to the exclusions in this certificate, for a period of:  
**Rangehood, Ovens, Cooktops, Dishwashers** - 24 months from date of original purchase for domestic use.  
**Uniduct** – 12 months from date of original purchase for domestic use.  
**Ironing centre** – 12 months from date of original purchase for domestic use.  
**Laundry Tub** - 5 years on stainless bowl, 24 months on Tap, Cabinet and other components from the date of original purchase for domestic use.

"Original purchase", when used in this certificate, means purchase by the customer directly from Monaco or one of its approved suppliers.

2. This warranty is limited to the repair or replacement, at our option, within the warranty period of any component part which we at our discretion determine to contain faulty materials or a manufacturing defect in breach of this warranty. This warranty is subject to terms and conditions set out in this certificate.
3. The warranty only applies within New Zealand.
4. The customer must produce the original invoice or other purchase documentation as proof of the original purchase date.

### Warranty exclusions

1. The warranty does not apply where, in Monaco's opinion:  
The defect is caused by misuse, wear and tear, dirt, fire or accidental damage.  
The product has been repaired or serviced by an unauthorised person.  
The product was not installed in accordance with our instructions.  
The product was purchased overseas or was not designed for use in New Zealand.  
The product was not used, cleaned or cared for in accordance with our instructions.  
The product was used outdoors.
2. In addition, this warranty does not extend to damage or defects which in our opinion, directly or indirectly arise from or are due to:  
Exposing the product to acidic or corrosive materials or chemicals such as dyes, solvents, denture cleaner or acetone;  
Using inappropriate household cleaning products such as abrasive cream or powder cleansers, furniture polish, bleach, mentholated spirits, drain cleaners, sugar soap, metal pads and strongly alkaline or acidic cleaners;  
Heat damage, including from washing the product at high temperatures;  
Impact or mishandling the product, including the impact caused by objects scraped along, thrown or dropped on the product surface or excessive weight being placed on the product;  
Structural or support changes in or affecting the building or the application where the product has been installed;  
Failure to clean or maintain the product as recommended; or  
any other causes specified in the product information as being excluded from this warranty.
3. Variations with the colour or gloss within the product or any ageing or fading of colour, shine or gloss level over time are not covered by this warranty. The warranty does not cover visual imperfections or blemishes in the surface and edges of the product that were not brought to your supplier's attention at the time you inspected the product.
4. Costs incurred on installation or removal of a product, or any reinstallation of a product, or any associated costs, are not covered by this warranty.
5. Monaco will not be liable for consequential or indirect loss or damage whatsoever and however arising out of or in connection with the supply, performance or removal of the product, including (but not limited to) loss of profit, loss of revenue, loss of contract, loss of goodwill or increased cost of workings, even if due to the negligence of Monaco or any of its approved suppliers, employees or agents.
6. Charcoal filters and light bulbs are not covered by this warranty
7. This warranty and the statements contained in this certificate or other documents given to you do not exclude, restrict or modify the application of any term implied into this warranty by statute, provided that (to the extent any statutory provision permits Monaco to limit its liability for a breach of an implied condition or warranty) Monaco's liability for such breach is limited to the payment of the cost of replacing the product, repairing the product or acquiring an equivalent product.
8. Subject to clause 5, our obligations under this warranty are limited to those set out in this certificate, and this warranty is expressly instead of all other warranties, express or implied, including any implied warranty of merchantability or fitness for a particular purpose and notwithstanding any course of dealing between the parties or custom and usage in trade to the contrary.

Terms and conditions are subject to change.

## Warranty Certificate (Australia)

### Terms and Conditions

If you are a consumer under the Australian Consumer Law, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure

1. Shriro Australia Pty Limited ("Shriro") also warrants the following Robinhood products against manufacturing defects and faulty materials, under normal use and subject to the exclusions in this certificate, for a period of:

**Rangehood, Ovens, Cooktops, Dishwashers** - 24 months from date of original purchase for domestic use.

**Uniduct** – 12 months from date of original purchase for domestic use.

**Ironing centre** – 12 months from date of original purchase for domestic use.

**Laundry Tub** - 5 years on stainless bowl, 24 months on Tap, Cabinet and other components from the date of original purchase for domestic use.

"Original purchase", when used in this certificate, means purchase by the customer directly from Shriro or one of its approved suppliers.

2. This warranty is limited to the repair or replacement, at our option, within the warranty period of any component part which we at our discretion determine to contain faulty materials or a manufacturing defect in breach of this warranty. This warranty is subject to terms and conditions set out in this certificate.

3. The warranty only applies within Australia.

4. For warranty service outside of capital city metropolitan area or 30 km from nearest authorised service agent you will be liable for reasonable travelling expenses and the cost of transport of the product or parts to and from the service agent

5. To make a claim under this warranty, you must produce the original invoice or other purchase documentation as proof of the original purchase date. You must send your claim to Shriro Australia Pty Limited, 104 Vanessa Street, Kingsgrove NSW 2208 within 7 days of any alleged defect or failure of the product first becoming apparent, you are responsible for the expense of making a claim under this warranty.

This warranty is given by:

Shriro Australia Pty Ltd

ABN 28 002 386 129

Telephone: 1800 648 556

Facsimile: 1800 628 577

Email: [customer@shriro.com.au](mailto:customer@shriro.com.au)

[www.robinhood.com.au](http://www.robinhood.com.au)

Attention Customer Services Manager

### Warranty exclusions

1. The warranty does not apply where, in Shriro's opinion:

The defect is caused by misuse, wear and tear, dirt, fire or accidental damage.

The product has been repaired or serviced by an unauthorised person.

The product was not installed in accordance with our instructions.

The product was purchased overseas or was not designed for use in Australia.

The product was not used, cleaned or cared for in accordance with our instructions.

The product was used outdoors.

2. All Robinhood Rangehoods are suitable for indoor use only and not suitable over BBQs or charcoal cookers designed for outdoor use.

3. In addition, this warranty does not extend to damage or defects which in our opinion, directly or indirectly arise from or are due to: exposing the product to acidic or corrosive materials or chemicals such as dyes, solvents, denture cleaner or acetone; using inappropriate household cleaning products such as abrasive cream or powder cleansers, furniture polish, bleach, mentholated spirits, drain cleaners, sugar soap, metal pads and strongly alkaline or acidic cleaners; heat damage, including from washing the product at high temperatures; impact or mishandling the product, including the impact caused by objects scraped along, thrown or dropped on the product surface or excessive weight being placed on the product; structural or support changes in or affecting the building or the application where the product has been installed; failure to clean or maintain the product as recommended; or any other causes specified in the product information as being excluded from this warranty.

4. Variations with the colour or gloss within the product or any ageing or fading of colour, shine or gloss level over time are not covered by this warranty. The warranty does not cover visual imperfections or blemishes in the surface and edges of the product that were not brought to your supplier's attention at the time you inspected the product.

5. We will not be responsible under this warranty for, nor pay the costs of, removing the existing product, or reinstalling the new product, or any associated costs or damages.

6. Charcoal filters and light bulbs are not covered by this warranty

The benefits given by this warranty are in addition to other rights and remedies of consumers under any law in relation to the goods which cannot be excluded.

This warranty certificate is not intended to create a contract between Shriro Australia Pty Limited and the purchaser.

### New Zealand

Monaco Corporation Ltd

Telephone: (09) 415 6000

Facsimile: (09) 415 7400

Email: [customer@monacocorp.co.nz](mailto:customer@monacocorp.co.nz)

[www.robinhood.co.nz](http://www.robinhood.co.nz)

### Australia

Shriro Australia Pty Ltd

ABN 28 002 386 129

Telephone: 1800 648 556

Facsimile: 1800 628 577

Email: [customer@shriro.com.au](mailto:customer@shriro.com.au)

[www.robinhood.com.au](http://www.robinhood.com.au)

