


RANGEHOOD


INSTALLATION INSTRUCTION

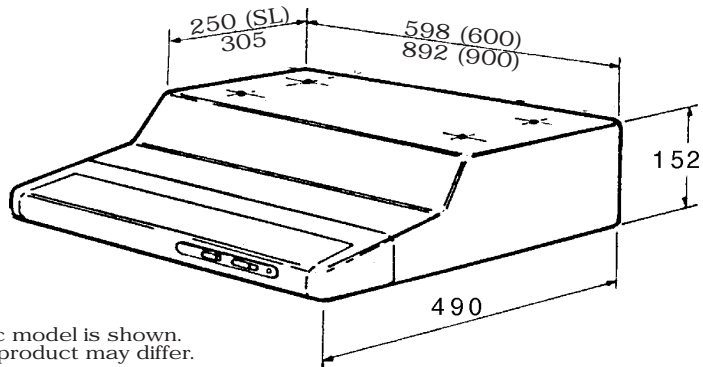


Note: Generic model is shown.
Actual product may differ.

PLEASE READ THE ENTIRE INSTRUCTION BEFORE INSTALLING THE RANGEHOOD

WALL MOUNTING

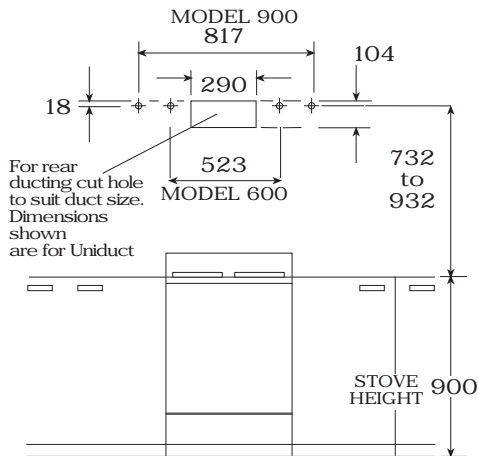


If using Uniduct
cut outside wall
hole
90 x 290mm

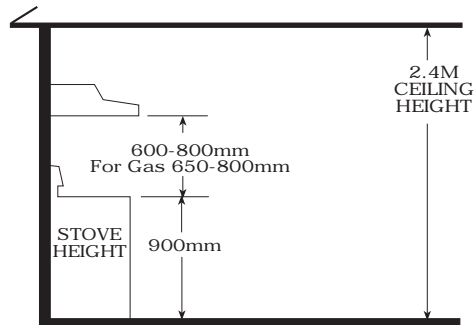


UNDERCUPBOARD MOUNTING

For top ducting cut hole
to suit duct size.
Dimensions shown are
for Uniduct

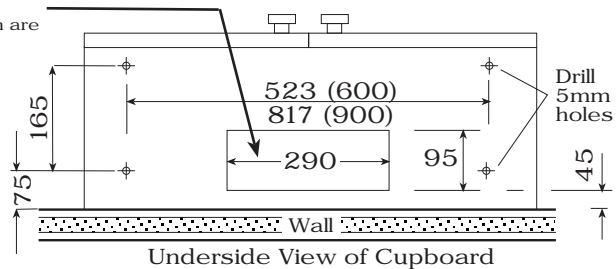


SIDE WALL MOUNTING

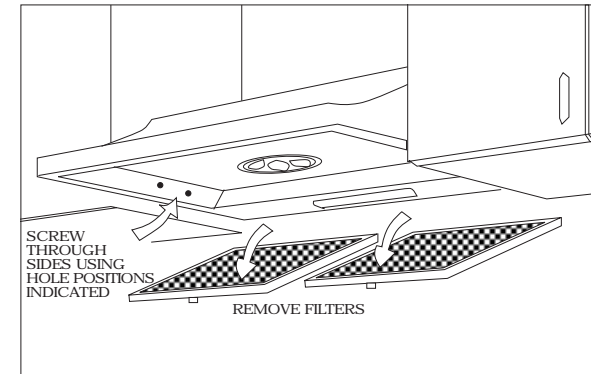


MOUNTING OPTIONS


MOUNTING TO REAR WALL

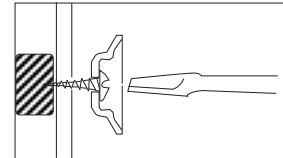

DRILL HOLES AND MOUNT TWO
CUP WASHERS AS SHOWN
REFER WALL MOUNTING DETAIL

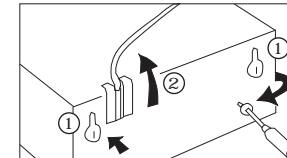


IF UNIT COMES WITH
KNOCK-OUT - REMOVE ①
SWIVEL POWER OUTLET TO TOP ②

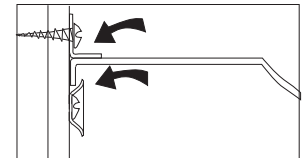


HOOK RANGEHOOD ONTO CUP
WASHERS, FIX TOP BRACKET
(BRACKET IS PRE-FITTED ON
RANGEHOOD)


MOUNTING UNDER CUPBOARDS

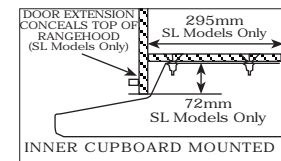

DRILL FOUR HOLES AT
POSITIONS INDICATED.
REFER UNDER CUPBOARD
MOUNTING

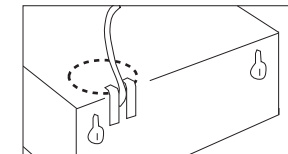

SWIVEL POWER OUTLET TO TOP.
CUT HOLE IN CABINET TO SUIT

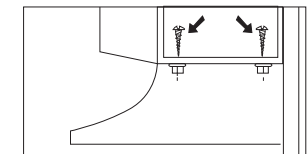


SCREW INTO PLASTIC INSERTS
FROM INSIDE CUPBOARD

WALL MOUNTING DETAILS

FOR INSTALLATION OF PLUGS FOR WALL MOUNTING

1. Mark location of holes as per installation instructions.
2. Drill 8mm hole.
Note: Do not use a screw driver to punch a hole in the base material.
3. Insert Plastic Toggle and tap with a hammer to ensure it is flush with the base material.
4. Place supplied screw through cup washer. Insert into toggle and tighten.

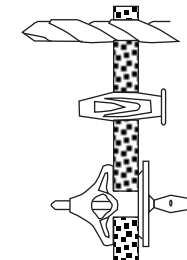


NOT FOR USE
IN SOLID WALLS


FOR SOLID WALLS
USE APPROPRIATE
WALL PLUGS

DUCTING OPTIONS


RECIRCULATING

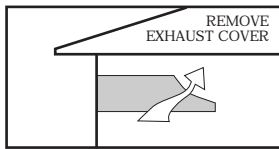


REAR DUCTED

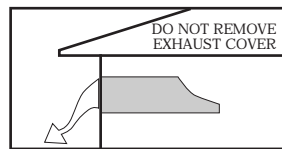

FLEXIBLE DUCT FOR SIDE DUCTING

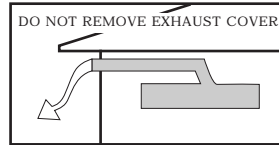

TOP DUCTED THROUGH ROOF

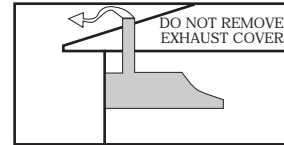

NOTE: when ducting

 
Exhaust air must not be discharged into any chimney or flue which may carry combustion products from other sources. In addition, exhaust air must not be discharged into a wall cavity, unless designed for the purpose.

OPERATION & CLEANING

OPERATION

After your Rangehood is fixed in position:

1. Check that the light and the diffuser are in place.
2. See that the filters are correctly positioned.
3. If exhaust cover is supplied ensure it is fitted in a ducted mode. Discard exhaust cover if a recirculating mode is being used. Exhaust covers may be purchased from your rangehood supplier.
4. Plug into 230-240V outlet. Keep cord clear of stove elements or hot utensils. Permanent wiring to house supply, or modifications to plug or wire should be carried out by a registered electrician.




CLEANING

1. Disconnect the Rangehood from power supply.
2. Wash aluminium filters every 2 or 3 months, depending on usage, with hot soapy water or in the dishwasher.
3. Charcoal filters are disposable items and should be replaced when cleaning the rangehood.
4. Clean the external and internal surfaces including the fan blades, using a damp cloth and mild detergent. Do not use any powder or abrasive cleaners.

LAMP REPLACEMENT

1. Disconnect the Rangehood from power supply.
2. Insert small screwdriver or slim knife as shown, ease catch to side and slip out the diffuser.
3. Replace lamp (40 watt max).
4. Slide diffuser back into aperture and 'click' into place.

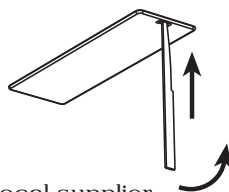

PARTS AND SERVICE

For Accessories, Parts or Services, please contact your local supplier or approved service agent. (Refer to the Warranty Certificate)

WARNING

- This appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- There shall be adequate ventilation of the room when the rangehood is used at the same time as appliances burning gas or other fuels.
- You must read the details concerning the method and frequency of cleaning.
- There is a fire risk if cleaning is not carried out in accordance with the instructions.
- Do not flambé under the rangehood.
- Exhaust air must not be discharged into an existing flue which is used for exhausting fumes from appliances burning gas or other fuels.
- The minimum distance between the hob surface and the lowest part of the rangehood is 600mm. This distance shall be at least 650mm, if the rangehood is installed over a gas hob. (We recommend 700mm)
- Attention should be given to ensure that any applicable regulations concerning the discharge of exhaust air is fulfilled.
- If the supply cord of this equipment is damaged, it must only be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid a hazard.



RECOMMENDED UNIDUCT DUCTING SYSTEMS FOR RANGEHOODS

MANUFACTURED IN NEW ZEALAND BY:
ROBINSON INDUSTRIES LIMITED
P.O. BOX 51 201, PAKURANGA, AUCKLAND, N.Z.
TEL: +64 9 272 5129 • FAX: +64 9 272 5148
ISO9001 Certified

Electrical Rating:
280W (1.16A)
Max. at 230-240V 50Hz