 


ST1500R -SERIES

 
 **Robinhood**

SUPERTUB 1500R

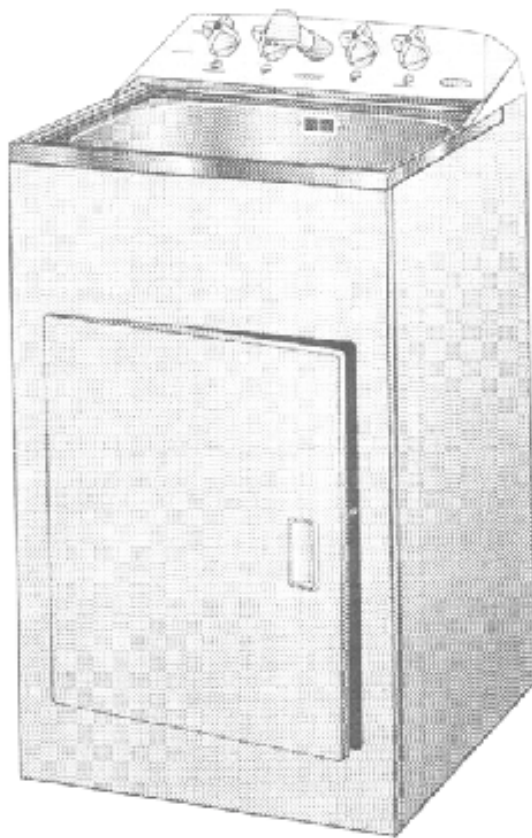

SERVICE MANUAL

ST1500R -SERIES

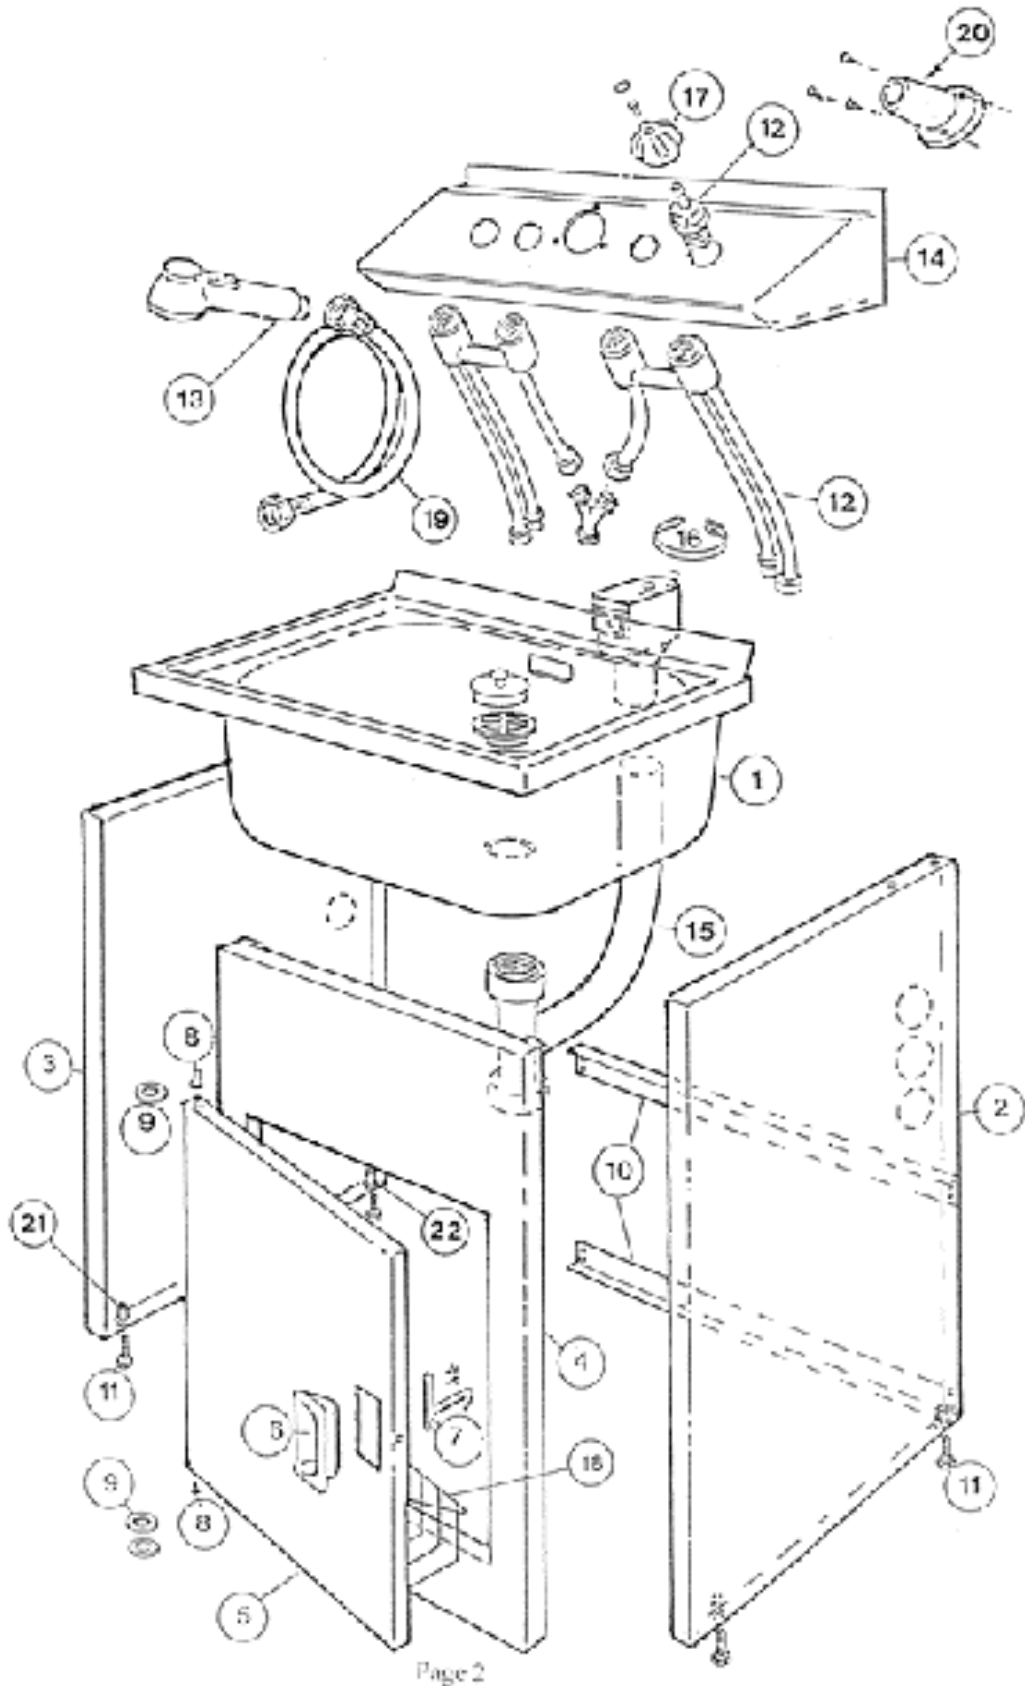 


Page 2

SUPERTUB 1500R

ITEM	DESCRIPTION	P/N
1	TUB	750454PL
2	RIGHT SIDE	750428WH
3	LEFT SIDE	750429WH
4	FRONT	750427WH
5	DOOR	750003WH
6	HANDLE	750016
7	LATCH	750017
8	PIN (HINGE)	750085
9	WASHER	750084
10	BACK BRACE	750437WH
11	LEVELLING SCREWS	999100
12	PLUMBING DETAILS	Page 4 & 5
13	HANDISPRAY UNIT	Page 6
14	CONSOLE ASSEMBLY	750472WH
15	WASTE DETAILS	Page 7
16	TIE	750107
17	KNOB DETAILS	
	TAP WHITE	750370
	INDICATOR (BLUE)	750372
	INDICATOR (RED)	750371
	SCREW M5 X 10	750044
18	DOOR RACK	750477WH
19	FLEXIBLE HOSE	750385
20	MOUNTING (CONSOLE)	750356
21	INSERT	999101

PLUMBING SECTION

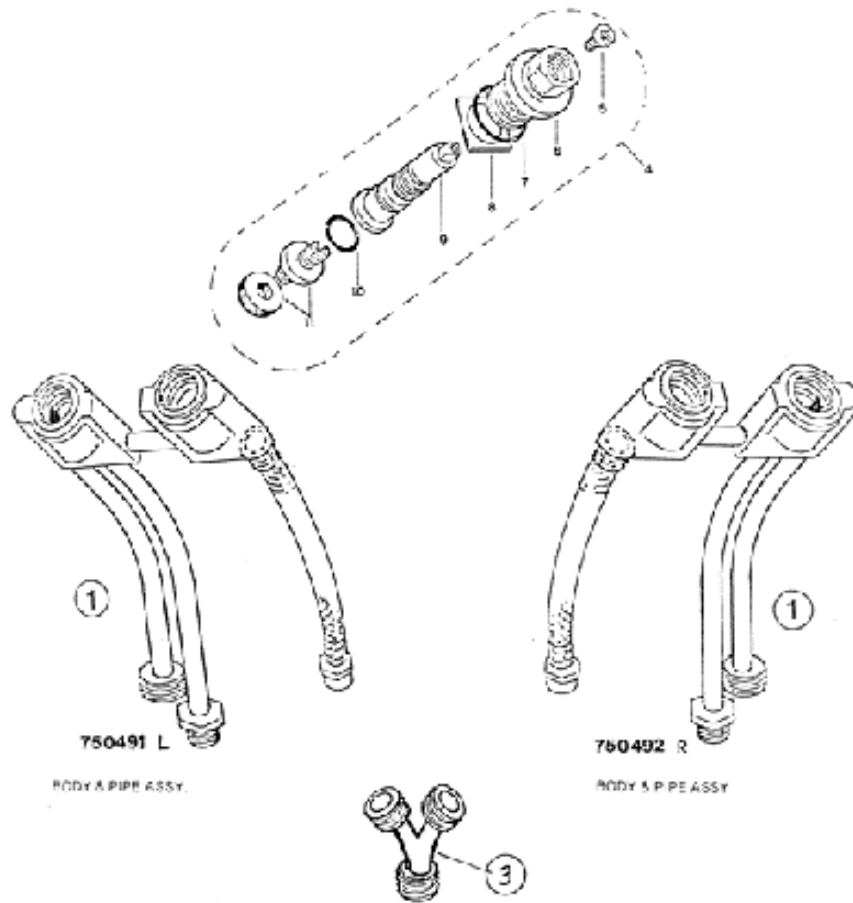 


SUPERTUB 1400F / 1500R

REF	DESCRIPTION	P/N
1	BODY & PIPE ASSEMBLY LEFT	750491
	BODY & PIPE ASSEMBLY RIGHT	750492
3	Y' CONNECTOR	750383
4	TAP HEADWORKS	750457
5	SCREW M5 X 10	750044
6	TAP HEADWORKS	750439
7	O'SEAL	750070
8	SPACER WASHER	750443
9	SPINDLE	750440
10	O'SEAL	750413
11	JUMPER VALUE ASSEMBLY	750497

WASTE SECTION

WASTE SYSTEM PARTS 50 mm.

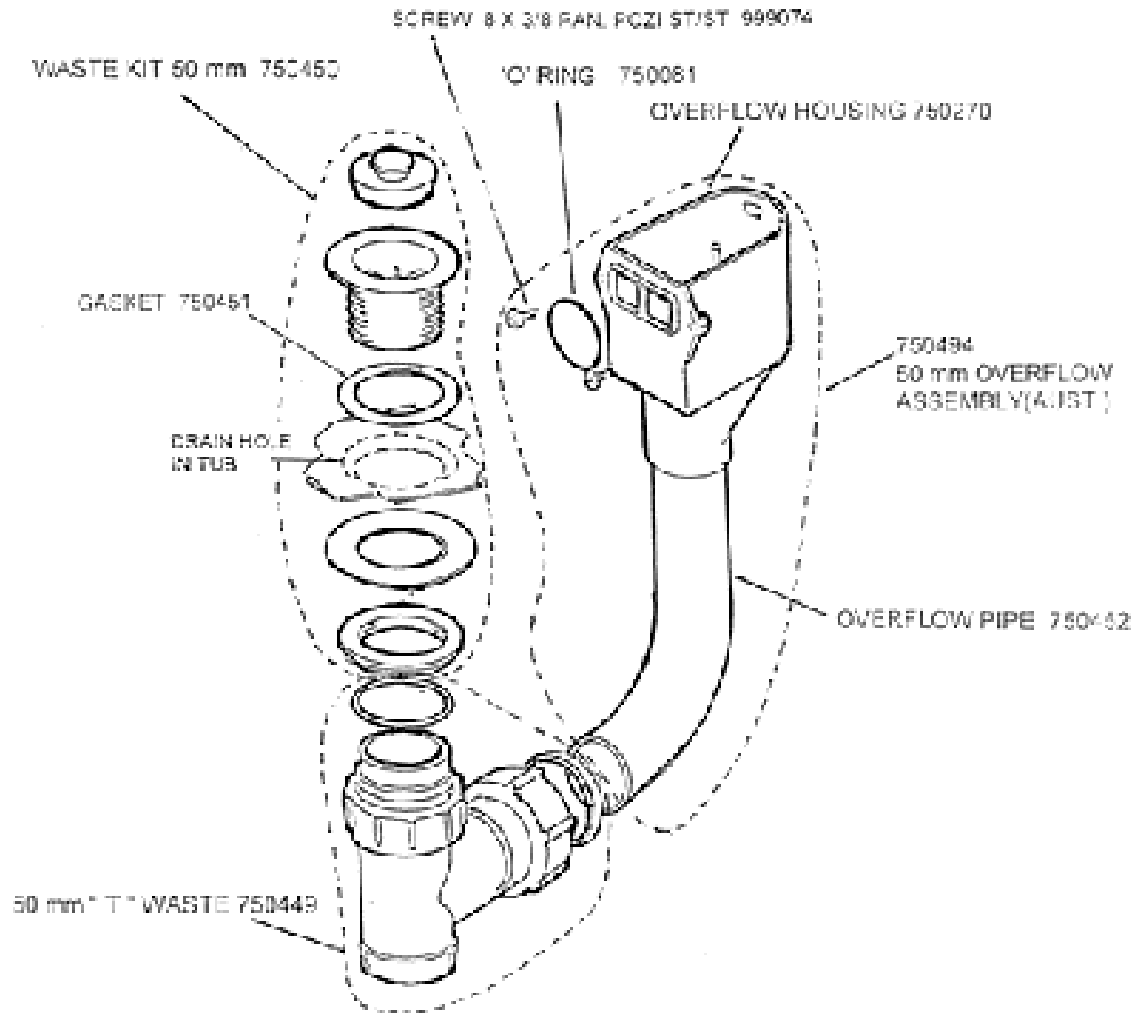

Waste Kit 50mm	750450
Overflow 50mm Assembly	750494
"T" Waste 50mm	750449