

## **How to purge air from the Jack Puck hydraulic system.**

1. Make sure release valve is closed.
2. Turn release valve counter clockwise one full turn to open.
3. Pump handle rapidly for eight full strokes.
4. Turn release valve clockwise to close valve.
5. Pump handle until the saddle reaches maximum height to remove trapped air in the arm.
6. Turn release valve counter clockwise one full turn and lower saddle to the lowest position. Use force if necessary.
7. Turn release valve clockwise to closed position and check for proper pump action. It may be necessary to perform the above more than once to assure air is evacuated totally.