


# BRUA Seal Replacement Guide

## Parts

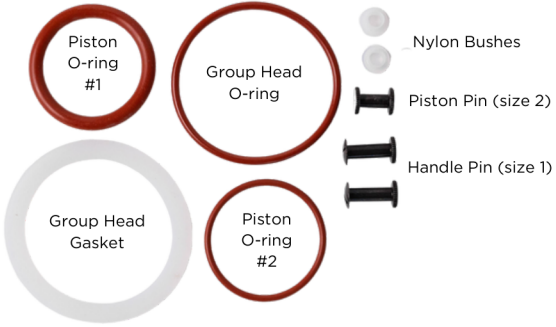


## Part Locations



1

Use a flat screwdriver to loosen the Handle Pins.


Remove the pins and Handle to reveal the Nylon Bushes.

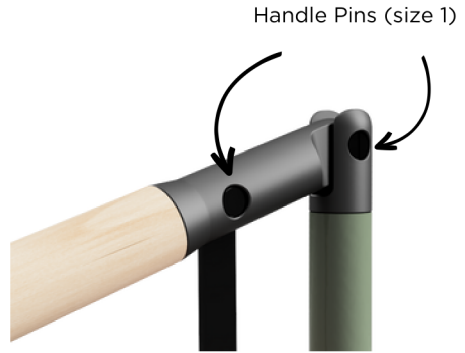

2

Remove and replace the Piston Pin if necessary.

Remove the Piston O-rings and fit the new o-rings into position (#1 into the large slot and #2 in the bottom slot).

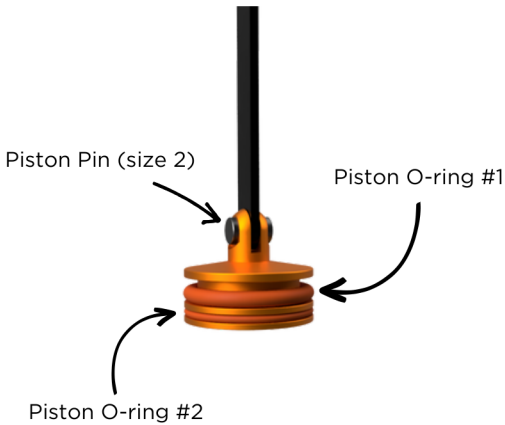

3

Remove the Group Head Gasket, water screen and Group Head O-ring.

Install the new replacement seals into the original locations.

\*Ensure the water screen is sitting and aligned in the recess.

