




URBAN PLUS

USER MANUAL

OVERVIEW

SLIDE TO UNLOCK EARBUDS

- 1 TOUCH SENSOR
MULTI-FUNCTION BUTTON(MFB)
- 2 MICROPHONE
- 3 POGO PINS
- 4 TYPE-C CHARGING PORT
- 5 SMART LED INDICATOR

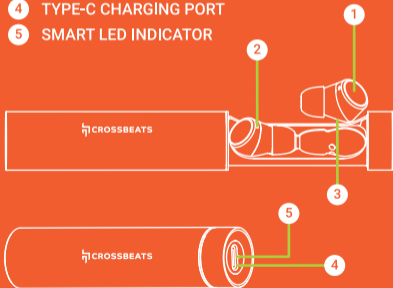

POWER ON



METHOD 1:

TAKE OUT THE EARBUDS FROM THE CHARGING CASE, IT WILL AUTO POWER ON.

METHOD 2:

TAP & HOLD THE MULTI-FUNCTION BUTTON FOR 1SEC.

POWER OFF



METHOD 1:
REPLACE THE EARBUDS IN THE CHARGING
CASE TO AUTO POWER OFF.

METHOD 2:
TAP & HOLD THE MULTI-FUNCTION BUTTON
FOR 3 SECS.

PAIRING

- TAKE OUT BOTH EARBUDS FROM THE CHARGING CASE TO AUTO POWER ON
- THE MASTER EARBUD WILL AUTO ENTER INTO PAIRING MODE WHILE LED LIGHT ON THE OTHER EARBUD WILL APPEAR TO BE OFF
- TURN ON BLUETOOTH ON YOUR MOBILE PHONE AND SEARCH FOR URBAN +
- CLICK TO PAIR

RESET

- TOUCH AND HOLD THE MULTI-FUNCTION BUTTON FOR 10SECS
- THE LED'S WILL FLASH IN RED AND WHITE COLOR AND THEN POWER OFF
- REPLACE BOTH THE EARBUDS IN THE CHARGING CASE
- NOW TAKE OUT BOTH EARBUDS FROM CHARGING CASE, THEY WILL AUTO-PAIR WITH EACH OTHER
- THE MASTER EARBUD WILL AUTO ENTER INTO PAIRING MODE WHILE LED LIGHT ON THE OTHER EARBUD WILL BE TURNED OFF
- NOW SEARCH FOR URBAN + ON YOUR PHONE'S BLUETOOTH LIST AND CONNECT

CHARGING



**CHARGING EARBUDS:
PLACE BOTH EARBUDS INTO THE CHARGING
CASE CORRECTLY ON THE POGO PINS.**



**CHARGING CASE:
PLUG IN THE TYPE-C USB CABLE TO START
CHARGING.**

LED INDICATORS FOR CHARGING CASE

- THE CASE WILL FLASH WHITE LED LIGHTS WHEN BATTERY LOW
- THE CASE WILL FLASH RED LED LIGHTS DURING THE CHARGING PROCESS
- ONCE THE CASE IS FULLY CHARGED, RED LED LIGHT WILL REMAIN TURNED ON

SIRI/OK GOOGLE

UNDER THE STANDBY STATUS, TOUCH AND HOLD THE MULTI-FUNCTION BUTTON FOR 2 SECS TO TURN ON THE VOICE ASSISTANT.

RECEIVE/DISCONNECT CALL

TAP THE MULTI-FUNCTION BUTTON TO ANSWER THE CALL. WHILE ON A CALL, TAP THE BUTTON AGAIN TO DISCONNECT ONGOING CALL.

REJECT CALL

WHEN RECEIVING A CALL, TOUCH AND HOLD THE MULTI-FUNCTION BUTTON FOR 1 SEC TO DECLINE CALL.

REDIAL LAST NUMBER

UNDER THE STAND BY STATUS, TAP MULTI-FUNCTION BUTTON 4 TIMES, IT WILL DIAL THE LAST CALLING NUMBER.

MUSIC CONTROL



MULTI-FUNCTION
BUTTON (MFB)

- **PLAY/PAUSE MUSIC – TAP MULTI-FUNCTION BUTTON ONCE**
- **NEXT TRACK – DOUBLE TAP RIGHT EARBUD FOR NEXT SONG**
- **PREVIOUS TRACK – DOUBLE TAP LEFT EARBUD FOR PREVIOUS SONG**
- **VOLUME INCREASE – TRIPLE TAP RIGHT EARBUD TO INCREASE VOLUME**
- **VOLUME DECREASE – TRIPLE TAP LEFT EARBUD TO DECREASE VOLUME**

SWITCH AUDIO OUTPUT

UNDER THE CALLING STATUS, TOUCH AND HOLD THE MULTI-FUNCTION BUTTON FOR 1SEC TO SWITCH AUDIO OUTPUT BETWEEN SMARTPHONE AND EARBUDS

MUTE ON-/OFF

UNDER THE CALLING STATUS, DOUBLE TAP THE MULTI-FUNCTION BUTTON TO TURN ON OR TURN OFF THE MUTE FUNCTION.

www.crossbeats.com

 +91 96112 93293

 +91 96112 93293

 support@crossbeats.com