

 CROSSBEATS

EPIC

USER MANUAL



**TOUCH ENABLED EARBUDS
WITH ANC MODE**



OVERVIEW

1. Touch area
2. Charging pin earbud
3. Reset button
4. LED lights on case
5. USB-C charging port

1



Take out the earbuds from the charging case

2



The earbuds will auto power ON

3



Search for CB-EPIC in your phone's Bluetooth list

4



Click to connect

FIRST TIME PAIRING

MONO PAIRING & RESET

MONO PAIRING

1



For mono mode, take out either of the earbuds when already paired

2



The music will automatically play in that particular earbud

RESET



Put the earbuds inside the charging case and press the button on the charging case for 10 seconds to reset

Note:  Tap  Touch and hold



L

R



NOTE: Available only on devices that have Voice Assistant enabled

CONTROLS

DIFFERENT SOUND MODES



NORMAL MODE

AMBIENT MODE

**ACTIVE NOISE
CANCELLING MODE**

NOTE: Touch and hold (L/R) earbud for 1 sec to switch between 3 different noise cancelling mode.



Connect and use the TYPE-C cable provided in the box for charging


CHARGING


LED INDICATORS ON CASE



- Green light flashes for 1 sec when earbuds are replaced in the charging case.
- You will see a red light indicating the below parameters
 - 1%-25% - Red light flashes once
 - 25%-50% - Red light flashes twice
 - 50%-75% - Red light flashes thrice
 - 75%-100% - Red light flashes four times
 - In case of 100% charge – Red light remains on



 +91 96112 93293

 +91 96112 93293

 support@crossbeats.com