

Bike Horn Alarm User Manual

use guide 01



use guide 02

Packing lists


- 1*bike horn alarm
- 1*USB cable
- 1*User manual
- 2*remote controller

Tech Parameters


Name	Value
Work Voltage	3.7-4.2V
Charge Voltage	5V
Standby Power	0.02V
Alarm Power	11V
Work Temperature	-10°C~ +50°C
Work Humidity	≤95%RH

use guide 03

Function Instruction

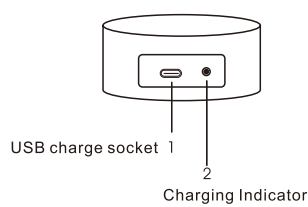

- 1:USB charge socket
- 2:Charging indicator

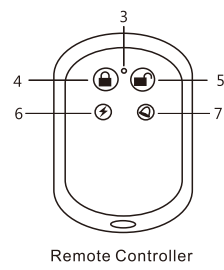

- 3: Remote LED-indicator
- 4: Lock/alarm on
- 5: Unlock/alarm off
- 6: Sensitivity adjustment
- 7: Activating the horn remotely

use guide 04

Charge the battery

Connect the Type-C USB cable to the underside of the horn. Then plug in the USB connector to a power source. It will take about 3 hours to fully charge. When the charging is finished, the color of the indicator will change.

Installing the Horn to your vehicle.

The Horn can be installed on many different types of vehicles. If you are mounting on a bicycle. You may need to use the included rubber spacers to adjust the fit to secure the horn.

Installing the wired switch

The wired switch used to activate the horn can be mounted on your handle bar. Loop the silicon strap around the handle bar to secure the switch in place.

use guide 05

Using the horn

To activate the horn, push the switch once. The horn will sound until you release the button. The horn can be activated about 2,000 times per charge.

Using the "Car Alarm" function

The horn also has an alarm feature. This feature is useful if you want to be alerted when your vehicle has been touched.

To arm the horn into the "Car Alarm" mode, push the button with the lock symbol on the included remote control. You will see the wired switch flash red light to confirm the activation. The horn is now armed and the horn will sound when any vibration is detected.

To disarm the horn, push the unlock button on the remote. You will see the wired switch flash red light to confirm the horn is disarmed.

use guide 06

Activating the horn remotely

The horn can be activated wirelessly from the remote controller. This function is useful if you need help to locate your vehicle in a crowded parking lot.

Push the bell button "🔔" on the remote controller. The horn will sound once each time this button is pressed.

Adjusting sensitivity

Push the lightning bolt button "⚡" to adjust sensitivity.

High sensitivity: The wired switch flashes red light three times.

Middle sensitivity: The wired switch flashes red light twice.

Low sensitivity: The wired switch flashes red light once.