

NINJA®

DT251ANZ

INSTRUCTIONS

NINJA® FOODI® 10-in-1 Smart XL Pro Air Fry Oven



ninjakitchen.com.au
ninjakitchen.co.nz

THANK YOU

for purchasing the Ninja® Foodi® 10-in-1 Smart XL Pro Air Fry Oven

REGISTER YOUR PURCHASE



ninjakitchen.com.au/apps/product-registration



ninjakitchen.co.nz/apps/product-registration

RECORD THIS INFORMATION

Model Number: _____

Serial Number: _____

Date of Purchase: _____
(Keep receipt)

Store of Purchase: _____

TECHNICAL SPECIFICATIONS

Voltage: 220-240V~ 50-60Hz

Watts: 2000-2400W

PRODUCT REGISTRATION

Please visit AU [Ninjakitchen.com.au](https://ninjakitchen.com.au) or NZ ninjakitchen.co.nz or call AU 02 8801 7666 NZ 0800 112 660 to register your new Ninja® product within 28 days of purchase. You will be asked to provide the store name, date of purchase and model number along with your name and address. The registration will enable us to contact you in the unlikely event of a product safety notification.

CONTENTS

Important Safeguards	2
Parts	4
Accessory Placement	5
Before First Use	5
Using the Control Panel	6
Functions	6
Control Panel Display & Operating Buttons	7
Using Your Ninja® Foodi® Oven	8
Using the Foodi® Smart Probe	8
When to Use the Roast Tray	10
Using the Cooking Functions with Rack Levels	10
How to Reduce Smoke	11
Using the Cooking Functions	12
Whole Roast	12
Air Roast	12
Air Fry	13
Bake	13
Dehydrate	14
Grill	14
Toast	14
Bagel	15
Pizza	15
Reheat	15
Cleaning & Maintenance	16
Everyday Cleaning	16
Cleaning the Smart Probe	16
Deep Cleaning	16
Troubleshooting & FAQ	17
Replacement Parts	18
Accessories for Purchase	18
Warranty	19

IMPORTANT SAFEGUARDS

HOUSEHOLD USE ONLY • READ ALL INSTRUCTIONS BEFORE USE

When using electrical appliances, basic safety precautions should always be followed, including the following:

⚠ WARNING

- 1 Read all instructions prior to using the oven and its accessories.
- 2 This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- 3 If food contents catch fire during cooking, **DO NOT** open the oven door.
 - If you can safely do so, unplug the oven immediately.
 - **DO NOT** throw water on to the fire. Food contents may contain grease and water may cause fire growth.
 - If fire emits from the oven door, call the fire service immediately.
 - **DO NOT** use the oven after it has experienced a fire. It may have been damaged and present a risk of fire or shock.
- 4 To eliminate a choking hazard for young children, discard all packaging materials immediately upon unpacking.
- 5 Take an inventory of all contents to ensure you have all parts needed to properly and safely operate your oven.
- 6 **DO NOT** use an extension cord. A short power-supply cord is used to reduce the risk of children grabbing the cord or becoming entangled and to reduce the risk of people tripping over a longer cord.
- 7 **NEVER** use electrical socket below worktop level.
- 8 Keep the appliance and its cord out of reach of children. **DO NOT** allow the appliance to be used by children. Close supervision is necessary when used near children.
- 9 **DO NOT** let cord hang over edges of tables or worktops or touch hot surfaces, including stoves and other heating ovens.
- 10 **NEVER** leave the oven unattended while in use.
- 11 **DO NOT** place any object directly onto the heating elements and **DO NOT** cover crumb tray or any part of the oven with aluminum foil. This will cause the oven to overheat or cause a fire.
- 12 **DO NOT** use the oven with crumb tray incorrectly installed. Crumb tray **MUST** be placed below lower heating elements.
- 13 To protect against electrical shock **DO NOT** immerse cord, plugs or main unit housing in water or other liquid.
- 14 **DO NOT** use the oven with damage to the power cord or plug. Regularly inspect the oven and power cord. If the oven malfunctions or has been damaged in any way, immediately stop use and call Customer Service.
- 15 **DO NOT** cover the air intake vents or air socket vents while unit is operating. Doing so will prevent even cooking and may damage the unit or cause it to overheat.
- 16 **DO NOT** insert anything in the ventilation slots and do not obstruct them.
- 17 **DO NOT** place items on top of surface while unit is operating except for authorised recommended Ninja® accessories.
- 18 Before placing any accessories into the oven ensure they are clean and dry.
- 19 Intended for worktop use only. **DO NOT** place the oven near the edge of a worktop on or near a hot gas or electric burner. Ensure the surface is level, clean and dry.
- 20 This oven is for household use only. **DO NOT** use this oven for anything other than its intended use. Misuse may cause injury.
- 21 **DO NOT** store any materials, other than supplied accessories, in this oven when not in use.
- 22 **DO NOT** use outdoors. **DO NOT** use in moving vehicles or boats.
- 23 **DO NOT** use accessories and attachments not recommended or sold by SharkNinja.
- 24 When using this oven, provide adequate space for air circulation.

- 25 **DO NOT** allow oven to be covered or touch flammable material including curtains, draperies, walls or the like when in operation as a fire may occur.
- 26 This oven has a tempered glass door and is resistant to breakage. Avoid scratching door surface or nicking edges.
- 27 **DO NOT** place anything directly on heating elements and **DO NOT** use the oven without a wire rack or air fry basket installed.
- 28 **DO NOT** spray any type of aerosol spray or flavouring inside the oven while cooking.
- 29 Use caution when inserting and removing anything from the oven, especially when hot.
- 30 Socket voltages can vary, affecting the performance of your product. To prevent possible illness, use a thermometer to check that your food is cooked to the temperatures recommended.
- 31 Prevent food contact with heating elements. Excessive food loads may cause personal injury or property damage or affect the safe use of the oven.
- 32 Oversize foods or metal utensils must not be inserted into the oven as they may create a fire or risk of electric shock.
- 33 With the exception of parchment paper, **DO NOT** place any of the following materials in the oven: paper, cardboard, plastic, roasting bags and the like.
- 34 Extreme caution should be exercised when using containers constructed of any materials other than metal or glass.
- 35 **DO NOT** touch hot surfaces. Oven surfaces and glass door are hot during and after operation. To prevent burns or personal injury, **ALWAYS** use protective hot pads or insulated oven mitts and use available handles.
- 36 Spilled food can cause serious burns. Extreme caution must be used when the oven contains hot food. Improper use may result in personal injury.
- 37 Please refer to the Cleaning & Maintenance section for regular maintenance of the oven.
- 38 Cleaning and user maintenance should not be done by children.
- 39 Allow to cool completely before cleaning and moving for storage.
- 40 When not in use, turn any control to 'off', then unplug. Grasp the plug by the body and pull from the socket. Never unplug by grasping and pulling flexible cord.
- 41 **DO NOT** clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, causing a risk of electrical shock.
- 42 **DO NOT** use the oven as a source of heat or for drying.
- 43 The supply cord is not suitable for replacement. If damaged, please contact SharkNinja for service.
- 44 **DO NOT** place appliance on hot surfaces, near hot gas or electric burner, in a heated oven or on a stovetop.

NOTE: Appliances are not intended to be operated by means of an external timer or separate remote-control system.



Indicates to read and review instructions to understand operation and use of product.



Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored.



Take care to avoid contact with hot surface. Always use hand protection to avoid burns.




For indoor and household use only.

SAVE THESE INSTRUCTIONS


PARTS

A Main Unit
(attached power cord
not shown)

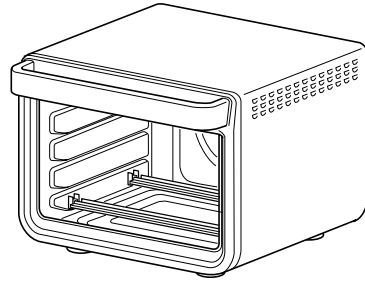


B Air Fry Basket

 Install when using the air fry function. Hand-wash recommended.




C Roast Tray

 Fits on top of the oven tray to catch grease below roasted or air fried foods to reduce smoke and grease splatter. Hand-wash only.




D 2 Oven Trays

Place on top of the wire rack. Hand-wash only.

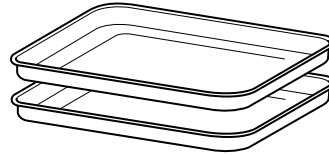


E 2 Wire Racks

Use on its own or place the oven tray on top. Hand-wash recommended.

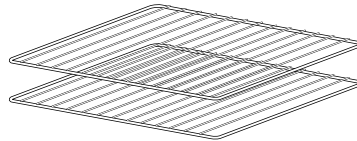

F Foodi™ Smart Probe

 

G Removable Crumb Tray
(already installed in unit)

Must remain installed when the oven is in use. Hand-wash only.




IMPORTANT: Place crumb tray below lower heating elements. **DO NOT** slide into any rack positions.

COMMON-SENSE PRACTICES/GOOD HABITS:

- **DO NOT** leave your oven unattended while making food. If possible, unplug the oven while not in use to eliminate the possibility of accidents occurring.
- Have a fire extinguisher or fire containment blanket handy in a safe, known location. If you don't have a fire extinguisher, douse the flames with bicarbonate of soda until they are put out.
- If a fire occurs and the food in the oven is not greasy, immediately unplug the unit and douse the flames with water until the fire is extinguished. **DO NOT** use water if grease is present, since it could make the fire worse. Use bicarbonate of soda instead.

ACCESSORY PLACEMENT

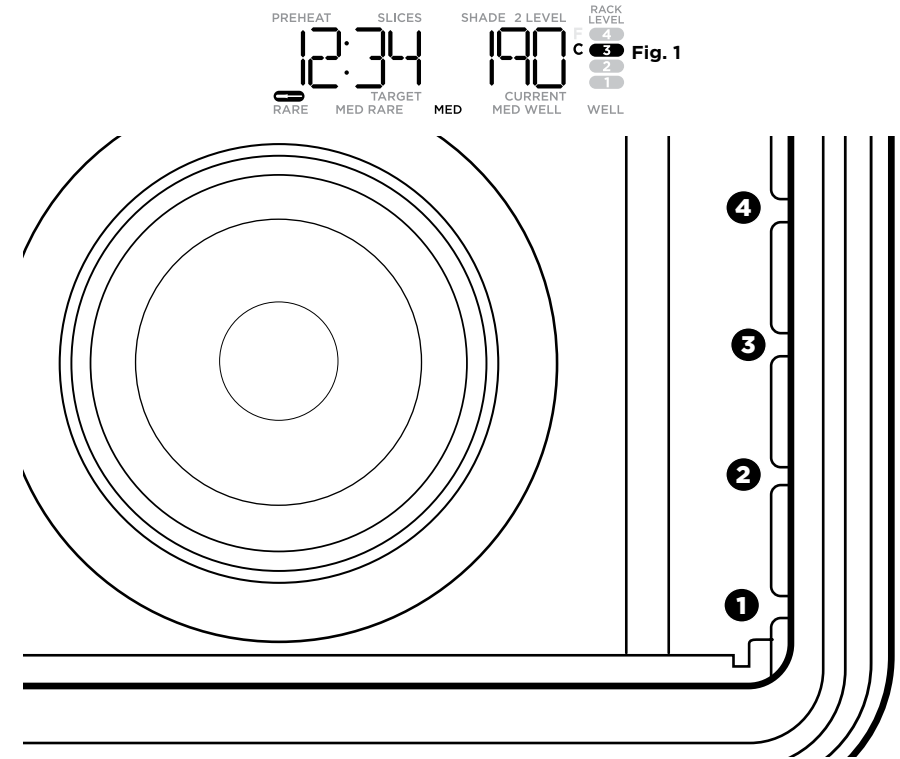

The oven has 4 available rack positions where your accessories can slide into the unit (**see image above**). When you select a function, the corresponding rack number(s) will illuminate on the control panel. The numbers on the control panel (**see Fig. 1**) will coincide with those on the interior of the unit. See the chart on page 10 for further details.


BEFORE FIRST USE

- 1 Remove and discard any packaging material, promotional labels and tape from the unit.
- 2 Remove all accessories from the package and read this manual carefully. Please pay particular attention to operational instructions, warnings and important safeguards to avoid any injury or property damage.
- 3 Wash the air fry basket, oven tray, wire rack, roasting rack and removable crumb tray in warm, soapy water, then rinse and dry thoroughly. **DO NOT** put oven tray, roasting rack or removable crumb tray in the dishwasher. Finishes may degrade. **NEVER** submerge the main unit in water.

We recommend placing all accessories inside the oven and running it on Roast at 230°C for 20 minutes without adding food. This removes any residues. This is completely safe and not detrimental to the performance of the oven.

NOTE: The accessories are hand-wash recommended. The air fry basket and wire racks can be put in the dishwasher, but may wear more quickly over time.

USING THE CONTROL PANEL

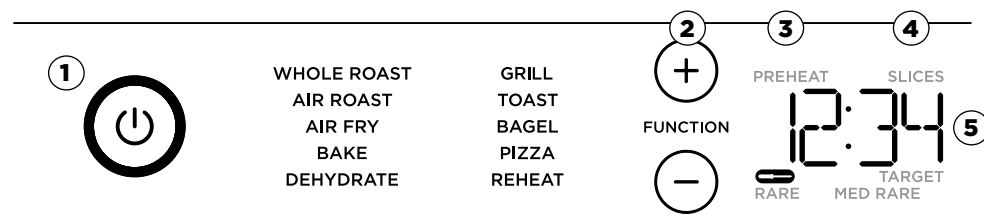

FUNCTIONS

Once you've selected a function below, you can change temperature/shade and time/slices.

WHOLE ROAST: Simultaneously roast large proteins, like a 2.25kg chicken and sides, for a complete meal. Or cook a larger protein, like a 5.4kg turkey, on its own.

AIR ROAST: Achieve a crispy outside and perfectly cooked inside for full-sized oven tray meals, thicker proteins and roasted veggies.

AIR FRY: Foods that would traditionally be fried—such as chicken wings, French fries and chicken nuggets—with little to no added oil.

BAKE: Evenly bake everything from your favourite cookies to cakes.

DEHYDRATE: Dehydrate meats, fruits and vegetables for healthy snacks.

GRILL: Evenly grill meats, fish and brown the tops of casseroles.

TOAST: Toast up to 8 slices of bread to your desired level of darkness.

BAGEL: Perfectly toast up to 8 bagel halves when they're placed cut-side up on the wire rack.

PIZZA: Cook frozen or homemade pizzas evenly.

REHEAT: Heat leftovers without over cooking.

NOTE: The oven's technology leads to faster cooking. Always monitor food to prevent overcooking. Refer to cook charts in the Recipe Guide for more guidance on cook times and temperatures.

SMART PROBE MODE DISPLAY

A. Smart Probe: Illuminates when smart probe mode is enabled by plugging in the probe then pressing the PRESET or MANUAL button.

B. DONENESS display: Shows the different doneness levels when in smart probe mode.

C. TARGET: Illuminates when using smart probe to show target temperature.

D. CURRENT: Illuminates when using smart probe to show current temperature.

CONTROL PANEL DISPLAY & OPERATING BUTTONS

1 Power button: Press to turn the unit on and off.


2 FUNCTION +/- buttons: To select a cook function, press the FUNCTION +/- buttons.

3 PREHEAT: Flashes when the unit is preheating.

4 SLICES: Illuminates when using the Toast or Bagel function to designate number of slices.

5 Time display: Shows the cook time. The time will count down when cooking is in progress.

NOTE: As you move through functions, you'll notice the rack level recommendations change for best results.

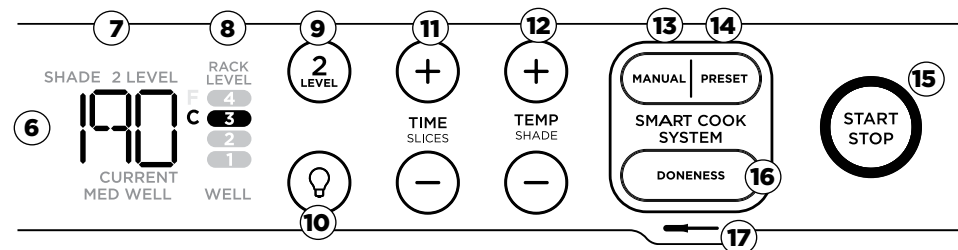

6 Temperature display: Shows the cook temperature.

NOTE: Time and temperature will always return to the settings used the last time the oven was in operation.

7 SHADE: Illuminates when using the Toast or Bagel function to designate desired shade.

8 RACK LEVEL: Depending on the function you choose, the illuminated rack level(s) will indicate where your accessory should be placed in the unit.

9 2 LEVEL: For functions that allow you to cook on 2 levels, press the button to select two level cooking and RACK LEVEL will update.

10 Light button: Press to turn the oven's interior light on and off while cooking.

NOTE: The light will automatically turn on when 1 minute of cook time remains and when door is open while cooking.

11 TIME/SLICES +/- buttons: To select a cook time, press the TIME +/- buttons. Time will increase in 1-minute increments under 1 hour and 5-minute increments over 1 hour. Hold the +/- buttons for 2 seconds to activate faster scrolling in 5-minute increments. When using the Toast or Bagel function, these buttons will adjust the number of slices/bagel halves instead of the time.

12 TEMP/SHADE +/- buttons: To adjust temperature, press the TEMP +/- buttons. When using the Toast or Bagel function, these buttons will adjust the shade level (1-7 from lightest to darkest) instead of the temperature. Temperature will increase in 5-degree increments. Hold the +/- buttons for 2 seconds to activate faster scrolling in 10-degree increments.

NOTE: The cook time and temperature may be adjusted at any time during the cooking cycle.

13 MANUAL button: Press to switch the display to the manual temperature setting for the smart probe. Use TEMP/SHADE +/- button to set smart probes target temperature.

14 PRESET button: Press to switch the display to the food type settings for the smart probe. Press repeatedly to toggle through different food types.

15 START/STOP button: Press to start or stop cooking.

16 DONENESS button: Press to switch the display to the internal doneness settings for the smart probe. The display will show the different doneness levels. Press DONENESS repeatedly to toggle through the doneness levels. DONENESS can only be selected if a food type has previously been selected with the PRESET button.

17 Foodi™ Smart Probe plugs in here as shown in the image above.

USING YOUR FOODI® SMART XL PRO AIR FRY OVEN

USING THE FOODI™ SMART PROBE

Before First Use

Make sure the smart probe jack is free of any residue and the cord is free of knots before plugging it into the jack.

- 1 Remove the smart probe from storage. Then unwind the cord from the cord wrap to remove the smart probe on the right side of the unit.
- 2 Plug the smart probe into the jack. Push firmly on the plug until it cannot go into the jack any further and you hear the plug click into place.
- 3 The smart probe icon on the display will illuminate once the smart probe is plugged in and the smart probe mode is enabled by pressing the PRESET or MANUAL button. Select the desired cook function (e.g., Whole Roast) and change cook temperature accordingly.

NOTE: There is no need to set a cook time, as the unit will automatically turn off the heating element and alert you when your food has finished cooking.

- 4 Press PRESET repeatedly to select your desired food type and press DONENESS repeatedly to set the internal doneness of your food (Rare through Well).

If selecting the MANUAL button, use the below recommended internal cook temperatures.



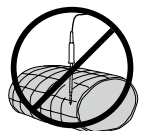

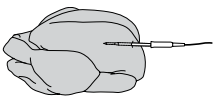

FOOD TYPE:	PRESET DONENESS TO:
Fish	Medium Rare (50°C)
	Medium (55°C)
	Medium Well (60°C)
	Well Done (65°C)
Chicken/Turkey	Well Done (75°C)
Pork	Medium Rare (55°C)
	Medium (60°C)
	Medium Well (65°C)
	Well Done (70°C)
Beef/Lamb	Rare (50°C)
	Medium Rare (55°C)
	Medium (60°C)
	Medium Well (65°C)
	Well Done (70°C)

NOTE: Default Preset doneness is automatically set to medium.

- 5 Place the accessory required for your selected cook function in the unit and close the hood. Press START/STOP to begin preheating.
- 6 While the unit is preheating, insert the smart probe horizontally into the center of the thickest part of the piece of protein. Refer to the chart on the next page for further smart probe placement instructions.
- 7 When the unit has preheated and the unit beeps, open the door, place food with inserted smart probe in the unit, and close the door over the smart probe cord.
- 8 The display will show the current smart probe temperature and target smart probe temperature to show progress. Press TEMP/SHADE +/- buttons to view the oven temperature and TIME/SLICES +/- buttons to view time since start of cook.
- 9 The unit will automatically stop when smart probe temperature has reached the target. Display will beep and show "COOK END".
- 10 Transfer protein to a plate and allow to rest for 5 minutes before serving.

NOTE: The smart probe will be HOT. Wait for the smart probe to cool before cleaning and storing. Use either oven mitts or tongs to take the smart probe out of the protein.

HOW TO CORRECTLY INSERT THE SMART PROBE

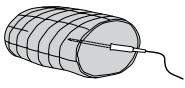
FOOD TYPE	PLACEMENT	CORRECT	INCORRECT
Tenderloins Fish fillets Whole fish Prime rib Lamb rack Brisket Pork Shoulder Pork Loin Chuck Roast	<ul style="list-style-type: none"> • Insert smart probe horizontally into the center of the thickest part of the meat. • Make sure the tip of the smart probe is inserted straight into the center of the meat, not angled toward the bottom or top of it. • Make sure the smart probe is close to (but not touching) the bone and away from any fat or gristle. <p>NOTE: The thickest part of the fillet may not be the center. It is important that the tip of the smart probe hits the thickest part so desired results are achieved.</p>	 	 
Whole chicken	<ul style="list-style-type: none"> • Insert probe horizontally into the thickest part of the breast, parallel to, but not touching, the bone. • Make sure the tip reaches the center of the thickest part of the breast and doesn't go all the way through the breast into the cavity. 		

NOTE: DO NOT use the smart probe with frozen protein or for cuts of meat 2.5cm thick or thinner.

NINJA® FOODI® 10-IN-1 SMART XL PRO AIR FRY OVEN

WHEN TO USE THE ROAST TRAY

Use Roast Tray on Oven Tray when cooking on convection functions (such as Whole Roast, Roast and Air Fry) or with greasy foods like: whole chicken, chicken wings, bacon, marinated meats or oiled vegetables.

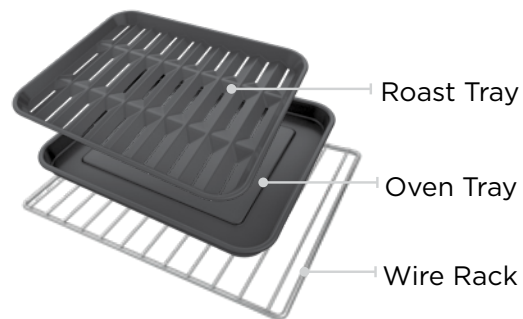

Recommended for



Whole Chicken



Chicken Wings or Thighs



Bacon



Marinated Meats



Oiled Vegetables

HOW TO REDUCE SMOKE

We recommend using vegetable, sunflower, refined coconut, avocado, canola oil or grapeseed oil, instead of olive oil.



Recommended:

- Vegetable
- Sunflower
- Refined coconut
- Avocado
- Canola Oil
- Grapeseed



Not recommended:

- Olive oil
- Butter
- Margarine

The unit may produce smoke when cooking on a hotter setting than recommended.

NOTE: For more cooking charts, refer to your recipe guide.

USING THE COOKING FUNCTIONS WITH RACK LEVELS

When you select a cooking function, the control panel will illuminate the recommended rack height(s). The chart below outlines these recommendations along with the suggested accessories. For best results, use only the recommended accessories for a given function and remove others from the oven.

	WHOLE ROAST		ROAST		AIR FRY		BAKE	
	1 Layer	2 Layers	1 Layer	2 Layers	1 Layer	2 Layers	1 Layer	2 Layers
LEVEL 4		Air Fry Basket				Air Fry Basket		
LEVEL 3			Roast Tray on Oven Tray	Air Fry Basket	Air Fry Basket		Oven Tray on Wire Rack	Accessory on Wire Rack
LEVEL 2						Roast Tray on Oven Tray		
LEVEL 1	Roast Tray on Oven Tray	Roast Tray on Oven Tray		Roast Tray on Oven Tray	Roast Tray on Oven Tray			Accessory on Wire Rack


NOTE: When cooking greasy, drippy foods on one level, place the Oven Tray on the Wire Rack below to catch the drippings. Alternatively, use the Roast Tray on top of the Oven Tray.

DEHYDRATE		GRILL	TOAST	BAGEL	REHEAT	PIZZA	
1 Layer	2 Layers	1 Layer	1 Layer	1 Layer	1 Layer	1 Layer	2 Layers
	Air Fry Basket						
Air Fry Basket		Roast Tray on Oven Tray	Wire Rack	Wire Rack	Wire Rack	Wire Rack	Wire Rack
	Oven Tray						
							Wire Rack

NOTE: Always place Oven Tray on Wire Rack, **DO NOT** place directly on heating elements.

NINJA® FOODI® 10-IN-1 SMART XL PRO AIR FRY OVEN - CONT.

USING THE COOKING FUNCTIONS

To turn on the unit, plug the power cord into an electrical socket and press the  button. The unit will automatically shut off after 10 minutes of inactivity.

Whole Roast

- 1 To select the function, press the function +/- buttons until WHOLE ROAST brightly illuminates. The default time and temperature settings will display. When cooking 2 layers, select the 2 LEVEL button so that "2 LEVEL" appears on the display.
- 2 Press the TIME/SLICES +/- buttons to select a cook time up to 4 hours.

NOTE: If cooking for 1 hour or less, the clock will count down in minutes and seconds. If cooking for more than 1 hour, the clock will count down in hours and minutes.

- 3 Press the TEMP/SHADE +/- buttons to select a temperature between 120°C and 230°C.
- 4 Press START/STOP to begin preheating.

NOTE: Food cooks faster when using the Whole Roast function so refer to cook charts in the Recipe Guide for more guidance on cook times and temperatures.

- 5 Place ingredients on the roast tray or directly on oven tray. When the unit beeps to signify it has preheated, immediately place roast tray on the oven tray on the wire rack on Level 1. Close oven door. When cooking on 2 levels, place the oven tray on Level 1 and use the air fry basket as the second layer on Level 4.

NOTE: The timer will start counting down as soon as the unit has preheated. If ingredients are not ready to go into the oven, simply press the TIME +/- buttons to add more time.

- 6 When cook time is complete, the unit will beep and "END" will appear on the display.

Air Roast

- 1 To select the function, press the function +/- buttons until ROAST brightly illuminates. The default time and temperature settings will display. When cooking 2 layers, select the 2 LEVEL button so that "2 LEVEL" appears on the display.
- 2 Press the TIME/SLICES +/- buttons to select a cook time up to 4 hours.

NOTE: If cooking for 1 hour or less, the clock will count down in minutes and seconds. If cooking for more than 1 hour, the clock will count down in hours and minutes.

- 3 Press the TEMP/SHADE +/- buttons to select a temperature between 120°C and 230°C.
- 4 Press START/STOP to begin preheating.

NOTE: Food cooks faster when using the Roast function, so refer to cook charts in the Recipe Guide for more guidance on cook times and temperatures.

- 5 Place ingredients on the oven tray. When the unit beeps to signify it has preheated, immediately place the roast tray on oven tray on the wire rack on Level 1. Close oven door. When cooking on 2 levels, place the oven tray on Level 1 and use the air fry basket as the second layer on Level 3.

NOTE: The timer will start counting down as soon as the unit has preheated. If ingredients are not ready to go into the oven, simply press TIME +/- buttons to add more time.

- 6 When cook time is complete, the unit will beep and "END" will appear on the display.

Air Fry

- 1 To select the function, press the function +/- buttons until AIR FRY brightly illuminates. The default time and temperature settings will display. When cooking 2 layers, select the 2 LEVEL button so that "2 LEVEL" appears on the display.
- 2 Press the TIME/SLICES +/- buttons to select a cook time up to 4 hours.
- 3 Then press the TEMP/SHADE +/- buttons to select a temperature between 120°C and 230°C.
- 4 Press START/STOP to begin preheating.

NOTE: Food cooks faster when using the Air Fry function. Refer to Air Fry Chart in the Recipe Guide for more guidance on cook times and temperatures.

- 5 Place ingredients in the air fry basket and roast tray with oven tray. If ingredients are fatty, oily or marinated, place the basket on the oven tray. Use air fry basket for dry ingredients.
- 6 When the unit beeps to signify it has preheated, immediately slide the basket into the rack level(s) designated on the control panel. If also using the oven tray, slide both into the oven at the same time, with the basket in the upper rack and the pan on the wire rack beneath the basket. Close oven door.
- 7 When cook time is complete, the unit will beep and "END" will appear on the display.

NOTE: The timer will start counting down as soon as the unit has preheated. If ingredients are not ready to go into the oven, simply press the TIME +/- buttons to add more time.


Bake

- 1 To select the function, press the function +/- buttons until BAKE brightly illuminates. The default time and temperature settings will display. When cooking 2 layers, select the 2 LEVEL button so that "2 LEVEL" appears on the display.
- 2 Press the TIME/SLICES +/- buttons to select a cook time up to 4 hours.

NOTE: If cooking for 1 hour or less, the clock will count down in minutes and seconds. If cooking for more than 1 hour, the clock will count down in hours and minutes.

- 3 Press the TEMP/SHADE +/- buttons to select a temperature between 80°C and 230°C.
- 4 Press START/STOP to begin preheating.
- 5 Place ingredients on the oven tray. Other baking tins can be used instead of the oven tray if preferred. When the unit beeps to signify it has preheated, immediately place the oven tray on the wire rack. Close oven door.

NOTE: The timer will start counting down as soon as the unit has preheated. If ingredients are not ready to go into the oven, simply press the TIME +/- buttons to add more time.

- 6 During cooking, you can turn on the light  to check on progress.
- 7 When cook time is complete, the unit will beep and "END" will appear on the display.

NOTE: For best results with baked goods such as cookies, line the oven tray with baking paper.

NINJA® FOODI® 10-IN-1 SMART XL PRO AIR FRY OVEN – CONT.

Dehydrate

NOTE: The unit does not preheat in Dehydrate mode.

- 1 To select the function, press the function +/- buttons until DEHYDRATE brightly illuminates. The default time and temperature settings will display. When dehydrating 2 layers, select the 2 LEVEL button so that “2 LEVEL” appears on the display.
- 2 Press the TIME/SLICES +/- buttons to select a dehydrate time up to 24 hours.
- 3 Press the TEMP/SHADE +/- buttons to select a temperature between 30°C and 90°C.
- 4 Place ingredients in the air fry basket and place basket in oven. Close oven door and press START/STOP to begin cooking.

NOTE: For best results, lay ingredients flat on each layer; do not stack food.

- 5 When cook time is complete, the unit will beep and “END” will appear on the display.

NOTE: Purchase additional dehydrate accessory to dehydrate up to 4 levels at one time.

Grill

NOTE: The unit does not preheat in Grill mode.

- 1 To select the function, press the function +/- buttons until GRILL brightly illuminates. The default time and temperature settings will display.
- 2 Press the TIME/SLICES +/- buttons to select a cook time up to 30 minutes.
- 3 Press the TEMP/SHADE +/- buttons to select either HI or LO.
- 4 Place ingredients on the oven tray. Place the oven tray on the wire rack and close the oven door, press START/STOP to start cooking.
- 5 When cook time is complete, the unit will beep and “END” will appear on the display.

Toast

NOTE: The unit does not preheat in Toast mode.

- 1 To select the function, press the function +/- buttons until TOAST brightly illuminates. The default amount of slices and darkness level will display.
- 2 Press the TIME/SLICES +/- buttons to select the number of bread slices. You may toast up to 9 slices at once.
- 3 Press the TEMP/SHADE +/- buttons to select a darkness level.

NOTE: There is no temperature adjustment available for the Toast function and the unit does not preheat in Toast mode. It is very important to select the exact number of slices to avoid over- or under-toasting.

- 4 Place bread slices on the wire rack. Close oven door and press START/STOP to begin cooking.
- 5 When cook time is complete, the unit will beep and “END” will appear on the display.

NOTE: You can also manually adjust the time once cooking has started to better choose your preferred shade.

Bagel

NOTE: The unit does not preheat in Bagel mode.

- 1 To select the function, press the function +/- buttons until BAGEL brightly illuminates. The default number of slices and darkness level will display.
- 2 Press the TIME/SLICES +/- buttons to select the number of slices. You may toast up to 9 bagel slices at once.
- 3 Press the TEMP +/- buttons to select a darkness level.

NOTE: There is no temperature adjustment available for the Bagel function and the unit does not preheat in Bagel mode. It is very important to select the exact number of slices to avoid over- or under-toasting.

- 4 Place bagel slices, cut-side up, in the middle of the wire rack. Close oven door and press START/STOP to begin cooking.
- 5 When cook time is complete, the unit will beep and “END” will appear on the display.

NOTE: You can also manually adjust the time once cooking has started to better choose your preferred shade.

Pizza

- 1 To select the function, press the function +/- buttons until PIZZA brightly illuminates. The default time and temperature setting will display.
- 2 Press the TIME/SLICES +/- buttons to select a cook time up to 4 hours.
- 3 Press the TEMP +/- buttons to select a temperature between 80°C and 230°C.
- 4 Place pizza on the oven tray or directly on the wire rack. Close oven door and press START/STOP to begin cooking.
- 5 When cook time is complete, the unit will beep and “END” will appear on the display.

Reheat

NOTE: The unit does not preheat in Reheat mode.

- 1 To select the function, press the function +/- buttons until REHEAT brightly illuminates.
- 2 Press the TIME/SLICES +/- buttons to select a reheat time up to 4 hours.
- 3 Press the TEMP/SHADE +/- buttons to select a temperature between 40°C and 230°C.
- 4 Place food on the oven tray or in an oven-safe container and place the pan or container on the wire rack. Close oven door and press START/STOP to begin warming.
- 5 When cook time is complete, the unit will beep and “END” will appear on the display.


CLEANING & MAINTENANCE

EVERYDAY CLEANING

The unit should be cleaned thoroughly after every use.

- 1 Unplug the unit from the socket and allow it to cool down before cleaning.
- 2 Empty crumb tray by sliding it out of the oven.

NOTE: Empty crumb tray frequently. Hand-wash when necessary.

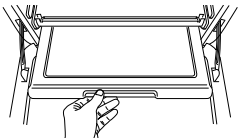

- 3 After every use, wipe away any food splatter on the interior walls and glass door of the unit with a soft, damp sponge.
- 4 To clean the exterior of the main unit and the control panel, wipe them clean with a damp cloth. A non-abrasive liquid cleanser or mild spray solution may be used. Apply the cleanser to the sponge, not the oven surface, before cleaning.
- 5 When using accessories, we recommend greasing them with recommended cooking oil or covering them with parchment paper or aluminum foil before placing food on top. **DO NOT** cover roast tray holes with parchment paper or aluminum foil.

CLEANING THE SMART PROBE

 
DO NOT place the smart probe or holder in the dishwasher.

- 1 Unplug the smart probe from the unit and allow it to cool down before cleaning.
- 2 The probe and holder are hand-wash only. **DO NOT** immerse any part of the smart probe in water or any other liquid. We recommend cleaning with a damp cloth only.

NOTE: DO NOT use liquid cleaning solution on or near the smart probe jack. We recommend using compressed air or a cotton swab to avoid damaging the jack.

DEEP CLEANING

- 1 Unplug the unit from the socket and allow it to cool down before cleaning.
- 2 Remove all accessories from the unit, including the crumb tray and wash separately. Use a non-abrasive cleaning brush to more thoroughly wash the air fry basket. Accessories are hand-wash recommended. The air fry basket and wire racks can be put in the dishwasher, but may wear more quickly over time. **DO NOT** place roast tray, oven tray or crumb tray in dishwasher.
- 3 Use warm, soapy water and a soft cloth to wash the oven's interior and glass door, **DO NOT** use abrasive cleaners, scrubbing brushes or chemical cleaners, as they will damage the oven.
CAUTION: NEVER put the main unit in the dishwasher or immerse it in water or any other liquid.
- 4 To remove tough grease, let oven tray and roast tray soak overnight in warm, soapy water, then wash with a non-abrasive sponge or brush.
- 5 Thoroughly dry all parts before placing them back in the oven.



IMPORTANT: Place crumb tray below lower heating elements. **DO NOT** slide into any rack positions.

TROUBLESHOOTING & FAQ .

ERROR MESSAGES

"CALL CUST SrVC" followed by "Er0," "Er1," "Er2," "Er3," "Er4," "Er5," or "Er6"

Turn off the unit and call Customer Service at **AUS 02 8801 7666** or **NZ 0800 112 660**. So we may better assist you, please register your product online at ninjakitchen.com.au/apps/product-registration or ninjakitchen.co.nz/apps/product-registration and have the product on hand when you call.

FAQ

Why won't the oven turn on?

- Make sure the power cord is securely plugged into the socket.
- Insert the power cord into a different socket.
- Reset the circuit breaker if necessary.
- Press the power button.

Can I use the oven tray instead of the air fry basket with Air Fry function?

- Yes, but crispiness results may vary.

Do I need to adjust the cook times and temperatures of traditional oven recipes?

- For best results, keep an eye out on your food while cooking. Refer to cook charts in the Recipe Guide for more guidance on cook times and temperatures.

Can I restore the unit to its default settings?

- The oven will remember the last setting used for each function, even if you unplug it. To restore the oven's default settings for each function, press the Light \varnothing and 2 LEVEL buttons simultaneously for 5 seconds.

Why do the heating elements appear to be turning on and off?

- This is normal. The oven is designed to control temperature precisely for every function by adjusting the heating elements' power levels.

Why does the oven have a different temperature reading with an external thermometer?

- Convection ovens circulate air differently than traditional ovens, so when the door is opened, more heat will escape. This may affect any external temperature reading of the unit's interior temperature.
- Since this is a convection oven, it can cook more quickly than a traditional oven. Convection cooking includes a fan that helps speed up cook time by circulating hot air and can affect temperatures within the cavity. The time it takes the unit to heat up to the set temperature will vary based on the amount of food being cooked, the function being used and the cook temperature and time. The oven features an algorithm that ensures temperature and time settings work with most traditional oven recipes. As a result, the temperature inside the oven may differ from the set temperature. This does not impact cooking quality. Refer to the Recipe Guide to learn more about recommended cook times and temperatures.

Why is my unit not fully preheated when the preheat cycle is completed?

- During preheating, the unit will not reach the intended cook temperature, but it will preheat to a level that will start cooking your ingredients. As the cook cycle continues, the oven will continue to heat up and cook your food to doneness. It may take up to 10 minutes for the unit to reach the intended cook temperature. This does not affect the cooking quality of most recipes.

Why is steam coming out from the oven door?

- This is normal. Foods with a high moisture content may release steam around the door.

Why is water dripping onto the worktop from under the door?

- This is normal. The condensation created by foods with a high moisture content (such as frozen breads) may run down the inside of the door and drip onto the worktop.

TROUBLESHOOTING & FAQ - CONT.

Why is the unit generating smoke?

- Ensure you are using the roast tray on the oven tray when cooking all greasy foods or when using Air Fry, Air Roast or Whole Roast functions.
- If problem persists, run a Toast cycle on shade 7 with accessories removed; this will burn off any additional grease on the heating elements that are causing smoke.

How can I clean the oven tray?

- For stuck-on food, let the oven tray soak before cleaning.
- Line the oven tray with aluminum foil or parchment paper when cooking to make clean-up easier.

Why is my food overcooked or undercooked even though I used the smart probe?

- It is important to insert the smart probe lengthwise into the thickest part of the ingredient to get the most accurate reading. Make sure to allow food to rest for 3–5 minutes to complete cooking. For more information on recommended doneness while using the MANUAL function and doneness temperatures while using the PRESET function, refer to the Using the Foodi™ Smart Probe section.

Will the smart probe grip melt if it touches the heating elements inside the oven?

- Make sure the grip does not touch any of the heating elements inside the oven.

Why does the unit sound like it is still running even though the power is off?

 
- The cooling fan may continue to run even after the unit has been turned off. This is a normal function and should not be a source of concern. The cooling fan will stop after the temperature of the unit reaches below 35°C.

REPLACEMENT PARTS

To order additional parts and accessories, visit ninjakitchen.com.au or ninjakitchen.co.nz or contact Customer Service at **AUS 02 8801 7666** or **NZ 0800 112 660**.

ACCESSORIES FOR PURCHASE


We offer range of accessories for your Ninja® Foodi® 10-in-1 Smart XL Pro Air Fry Oven. Visit ninjakitchen.com.au or ninjakitchen.co.nz to expand your capabilities and take your cooking to the next level.



• Dehydration kit



 • Casserole dish



• Muffin tin



• Cutting board

Shark | NINJA

ONE (1) YEAR LIMITED REPLACEMENT WARRANTY

For guarantee claims, you will need to submit a proof of purchase in the form of a valid receipt that displays date and place of purchase. This warranty does not replace but is in addition to your statutory rights.

If your product becomes defective due to faulty material or workmanship within a period of 1 year from the date of purchase, we warrant to do the following:

- For New Zealand Consumers: We will replace the defective/faulty part with a new product, free of charge, or if the unit is deemed defective/faulty we replace the unit with an equivalent or upgraded model, at our discretion.
- For Australian Consumers: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage.

Replacement items will be covered by the limited warranty for the balance of the warranty period from the date of the original purchase. Please note:

Your warranty is subject to the following conditions

- **DO NOT** operate the appliance with a damaged plug or cord, or if the unit has been dropped, damaged or dropped in water.
- To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, it must be replaced by a qualified electrician to avoid a hazard. Incorrect re-assembly or repair can cause a risk of electric shock or injury to persons when the appliance is used.
- The item has not been misused, abused, neglected, altered, modified or repaired by anyone.
- The item has been subjected to fair wear and tear.
- The item has not been used for trade, professional or hire purposes.
- The item has not sustained damage through foreign objects, substances or accident.

What is not covered?

- Accessories supplied with the item.
- Components that are subject to natural wear and tear caused by normal use in accordance with operating instructions.
- Unauthorised/improper maintenance/handling or overload is excluded from this warranty.

Customer costs within warranty

The customer is responsible for any inwards freight charge to return a product for warranty if requested, and outward freight charge for warranty parts and or replacement unit.

Notes

Notes

VISIT US ONLINE AT:

ninjakitchen.com.au

ninjakitchen.co.nz

Or follow us on our social media pages:

  @ninjakitchenau, @ninjakitchennz

 @NinjaKitchenANZ

Proudly distributed by:

Mann&Noble Pty Ltd

Building D

33 Quarry Road

Erskine Park NSW, Australia, 2759

AUS 02 8801 7666

NZ 0800 112 660

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

FOODI and NINJA are registered trademarks of SharkNinja Operating LLC.

© 2023 SharkNinja Operating LLC

PRINTED IN CHINA

DT251ANZ_IB_MP_Mv5

