## mel@mane

# MELOPHONES PASSION




Quick User Guide



#### 1. Product Indication

- 1) Power ON/OFF
- 2) Play/Pause, Answer/End Calls, Reject Call, Last Number Redial
- 3) Volume Up (Long Press) / Next Song (Short Press)
- 4) Volume Down (Long Press) / Last Song (Short Press)
- 5) Multi-function Button (Pairing, Auto Search Radio)
- 6) Headset Jack
- 7) LED Indicator
- 8) Micro USB Charging Port
- 9) Microphone
- 10) Micro SD/TF Card Slot

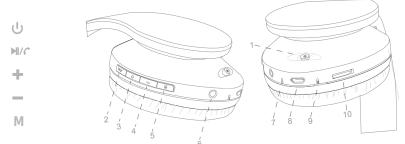

#### 2. Function Introduction

#### 1) Power ON/OFF the headset

- Power ON: Slide the switch towards right and the blue and red indicator light will flash (the headset says: the wireless is ready to pair).
- Power OFF: Slide the switch towards left and blue indicator light will go off.

#### 2) Pair to your mobile phone or other products

- Slide the switch towards right and the blue and red indicator light will flash (the headset says: the wireless is ready to pair).
- Turn on the bluetooth function of your phone or other devices.
- Search for the bluetooth devices and select "Melophone:

PASSION". (Enter the code '0000', if needed)

 If paring is successful, the blue light indicator starts flashing (the headset says: the wireless is connected successfully).

- Please make sure the melophone is turned on before pairing.
- It will connect to the pre-set phone automatically when turns on (Please make sure the bluetooth function of your phone is working).
- If the pairing is not successful, please switch off headset first, and then re-pair again.

#### 4) MP3/FM

- In the Power-ON mode, insert the TF card, short press the M button, MP3 will play automatically.
- If not TF card, short press **M** button, FM will play automatically.
- In Power-ON mode, short press **M** button, FM radio will play automatically. Long press the ►II/C button to auto search all radio station, wait for a moment, then short press + or -, you will be able to listen to any radio station you like.
- If you are listening to FM radio, short press M button, it will be converted to the bluetooth mode and auto connect to your phone and other products.

### Answer/End Calls, Reject Call, Last Number Redial (Bluetooth Mode)

- When there is a call, short press MI/C button and you can answer the call. After the call press MI/C button to hang up. If the other side hang up no need to press the MI/C button.
- Reject call: Long press ►//C button about 2-3 seconds.
- Last number redial: Press fast ►1/C button 2 times.
- When you receive a call or answer the call and if the bluetooth melophone is playing the music, the music will pause automatically and enter the waiting state. After you hang up, the music will continue to play automatically.

#### 6) Charging the headset

• Insert USB charging cable into USB port which supports 5V power (such as AC/DC USB adapter or PC USB port). When the red light is on, the headset is charging. When the red light turns off, the headset is fully charged. It takes about 2 - 2.5 hours to charge the headset completely.

• The battery is rechargeable. Low-Voltage alert: When the alert tone 'low battery' sounds and the indicator turns into red indicate that the battery has run out, need to be charged as soon as possible. First time charging: please be sure that the battery has been charged completely before use.

#### 7) Wired headphone function

For any mode of melophone, you can connect one side of 3.5 stereo sound supply extension line to melophone audio jack, the another side connect to audio jack (such as mobile phone, computer, ipad etc). Then you can hear songs from other devices.

#### 8) Precautions

- Please be gentle when using melophone. The Maximum tolerance of the button is 250g. Excessive force or be stroked by something will damage buttons.
- Please do align the USB port when plug or pull USB cable in case that damages the USB cable fail to charge the melophone.
- When encounter something similar to interference, please at

first delete the Bluetooth devices that are connected with melophone, then restart your phone, at last please re-pair with the Bluetooth melophone.

- If headset is not used since a long time, it is recommended to turn off the headset in case, the battery is in a low voltage state, causing the charging problems.
- Please don't put the headset in hot temperature area.
- Please don't vibarate or shock the headset violently, and do not let it fall down from height.
- If there is no response of the headset, Please insert melophone plug hole to reset by tool.





