STATIC Series Headlights Installation Instructions

Product Specifications

Input Voltage 12vdc

Max output

Low Beam 3000 lumens High Beam 6500 lumens

!!! Disconnect battery before attempting any electrical work or installation!!!

Installation Guide:

- 1. Disconnect battery.
- 2. Remove Grille to access headlight retainer rings.
- 3. Remove headlights using 10mm Socket and ratchet.
- 4. Inspect vehicle wiring harness and connectors for any damage. Repair if needed.
- 5. Route the RGB wires from the control box mounting location to each headlight and attach the round quick disconnect plugs. Make sure to align the arrows before making the connection so as to not damage the wiring harness or headlight connection.
- 6. Attach the headlight main connector to the factory headlight connector.
- 7. Install headlights using supplied Allen screws and springs. See image.
- 8. Attach the control box positive wire to a switch or power source of your choosing based on the following options. (Positive +)
 - 1. ACC Fuse (fuse tap provided)
 - ACC wire- if you attach to an accessory circuit the ignition switch will need to be on to power the RGB accents
 - 3. Switched circuit-(Switch available for purchase separately)
 - 4. Positive battery terminal Attach directly to the positive battery terminal circuit if you wish for the RGB to operate without the ignition switch being on. This option could risk draining the battery if the lights are left on for an extended period of time. Crank up the vehicle to recharge the battery.
- 9. Attach control box ground wire to vehicle ground.
- 10. Reconnect battery and test each function for correct operation.
- 11.Zip tie or tuck away your wiring to prevent pinching.
- 12. Reinstall Grill and your ready to enjoy your new headlights!







