

ARGOS FRAGRANCES COLD AIR DIFFUSER



AFCAD 1001D



We advocate green environmental protection, refuse over-packging.

TABLE OF CONTENTS

SPECIFICATIONS ----- 2 APPLICATION ENVIRONMENT ----- 3 OVERVIEW -----WHAT'S INSIDE THE BOX -----FILLING FRAGRANCE-----USE METHODS -----OPERATIONS -----INSTALLATION INSTRUCTIONS -----WARNING -----**EQUIPMENT CLEANING**

TROUBLE SHOOTING ------13

We advocate green environmental protection, refuse over-packging.



Please comply with the following for safety reasons.

outlet or in operation.

Do not modify or disassemble the scent machine without first consulting us. In case of product failure please contact us.

Do not use the power chord if it is damaged, kinked or cut. It's a fire hazard.

To avoid electrical shock, do not touch the power adaptor or the machine while plugged into the electrical socket during a thunderstorm or lightning.

Do not dismantle or try to repair the machine while its plugged into the electrical

/\ NOTES

SPECIFICATIONS

112*112*288mm **DC 12V** 1.4kg

5W

AFCAD 1001D

200m ³

120ml Machine:alnminum

Bottle:PET

Power adapter, bottle, manual [Accessories]

APPLICATION ENVIRONMENT









Office, Family house, VIP room, Guest room and other small places.

[Model

[Dimension

[Voltage

[Weight

[Power

[Coverage

[Material

[Bottle capacity]

OVERVIEW

Fragrance export

Increase

Display screen


Power switch

Decrease

Machine body Power indicator


DC connector

WHAT'S INSIDE THE BOX

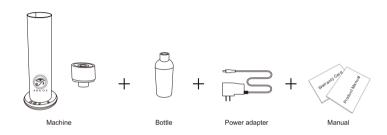

Checking and make sure the packaging is complete when you first open it, if any problem please contact with us soon.

FILLING FRAGRANCE

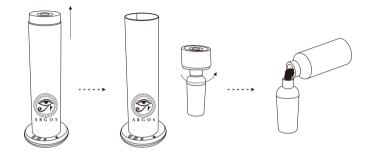

- 1. Press on the top cover to open the machine.
- 2. Take out the top cover with diffusion head and bottle.
- 3. Unscrew the bottle.
- 4. Fill the bottle with fragrance.
- 4. Fill the bottle with fragrance. Do not fill to the top.

OPERATIONS

Power ON

Connect with 12V 1A power supply, short "beep" –power-on voice comes out, the screen displays scent inensity.

Power OFF

Press , no display on panel.

Intensity setting


The machine total has 9 fragrance intensity grades, press ⊕, the intensity will increase, press ⊝, the intensity will decrease(Figure 4).




Power indicator

† indicating the direction of the power supply.

Instructions

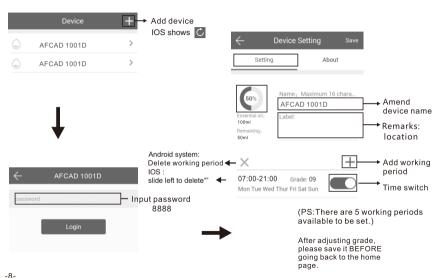

Instructions

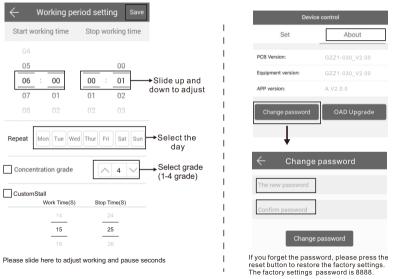

INTENSITY AND CONSUMPTION

Grade	Working(s)	Stop(s)	Consumption(ml/h)
G1	30s	270s	0.07
G2	60s	240s	0.13
G3	90s	210s	0.20
G4	120s	180s	0.27
G5	150s	150s	0.33
G6	180s	120s	0.40
G7	210s	90s	0.47
G8	240s	60s	0.53
G9	270s	30s	0.60
Customized	Customized	Customized	


+ up grade - down grade

Note: 1. Above data is bassed on standard test oil.

2. Above data only for reference, different oil may with different consumption.

WARNING



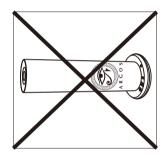

After installation, please keep the machine vertical. Tilted or angled may cause oil overflow, which will contaminated equipment circuit, affecting the normal use and unnecessary waste.

-10-

EQUIPMENT CLEANING

Equipment cleaning

- 1. When changing oil clean out the diffuser.
- 2.If scent diffusion comes weak

Cleaning steps:

- 1.Put 50-100ml alcohol in the bottle.
- Screw the bottle into the diffuser and turn the machineON 5-10 mins to clean out the diffuser head and tube.
- 3. Take off the alcohol bottle and replace with the bottle with aroma oil.

Tips:

You can start using the scent machine immediately after cleaning. There is no need to mash the tube.

TROUBLE SHOOTING

Before asking to have the machine repaired please try to disgnose the problem rst following to below instructions.

Problem	Solution	
No diffusion	- Check if the power is ON or OFF The pump is damaged and needs replacing If there is no diffusion or it is weak, replace the oil with rubbing alcohol and run it through the machine for 5 minutes.	
Little or no spray coming out	- Atomization head is blocked.Clean diffuser by running rubbing alcohol through it. Or replace diffuser core Diffuser core with straw is missing or damaged. Replace with a new one Pump is damaged and may need replacing.	
Diffuser spraying liquid	- Diffuser core is damaged. Replace diffuser core Machine is tilted or angled. Make sure it's upright at all times.	
Oil leaking	Bottle is loose. Screw it in properly and straight. Seal is broken or missing. Replace the supplied seal that came with the machine.	
Abnormal sound	- Pump is loose or damaged. Tighten the pump or replace.	
No display on screen	- Make sure the power is ON. - Check the plug for damage. Try another outlet. If plug is damaged replace. - Display screen is damaged. Replace.	