

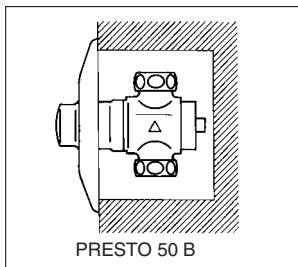
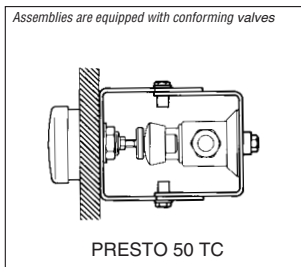


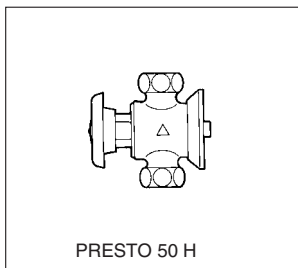

SHOWERS

PRESTO 50, 50 H, 50 TC, 50 B

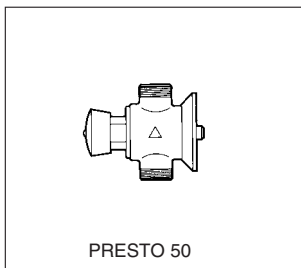

Instructions

PRESTO 50, 50 H, 50 TC and 50 B


- Check the flow direction indicated by an arrow on the body.
- Connect copper tube \varnothing 14 x 16, strainer screen on the inlet, flat washer on the outlet, flared flanges, nuts G 3/4 (20 x 27)

Instructions

PRESTO 50 and 50 H


- To be fixed by central seal screw \varnothing 7 x 30
- Do not forget to install plate

WARNING
In case of any failure in the functioning of the tap, unscrew head assembly and clean the mechanism under running water.

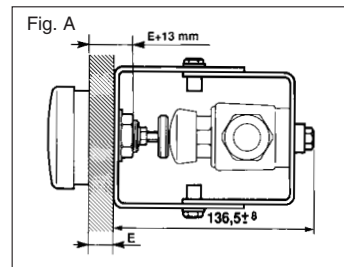

PRESTO 50 TC IN DUCTS (Dwg. A)

- This control can be adjusted to the wall thickness (E).
- Drill a 22 - 30 mm diameter hole through the wall.
- Fitting of the tube to length after fastening
 - Fit with the washer and fasten the TWC with the fixed part of the stirrup if it is employed (Delivered separately)
 - Saw through the G 1/2" tube and the plastic rod behind the nut (E + 13 mm minimum)
 - Fit the insert and tap it home with a mallet
 - Fit the plate with its nut
 - Insert the retainer housing complete with its valve.
- Adjust the cylinder and tighten the lock nut.

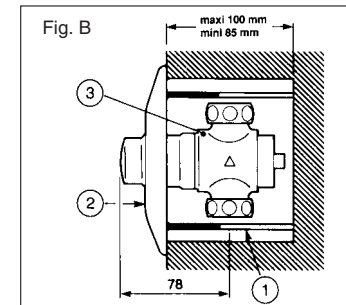

PRESTO 50 B (Dwg B)



- Place mounting template into the hole inside wall.
 - Set inlet and outlet tubes.
 - Connect the valve, strainer screen on inlet, flat washer on the outlet, flared flanges, nuts G 3/4 (20 x 27).
 - Plaster and tile
 - Snap the concealing plate over the body of the valve until it is correctly set on wall surface
- Dimensions of mounting template o.d. 110 mm, length 100 mm.

Supplies must be flushed through before final connection. A disturbance in the functioning of the tap could only be due to debris, grids, etc...

LES ROBINETS PRESTO

7, rue Racine - B.P. 551 - 92542 MONTROUGE Cedex FRANCE
 Tél. : +33 (0) 1 46 12 34 56 - Fax : +33 (0) 1 40 92 00 12
 Internet : <http://www.presto.fr>

FRANCAIS

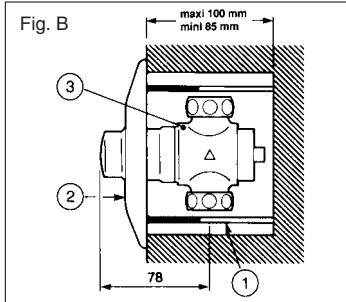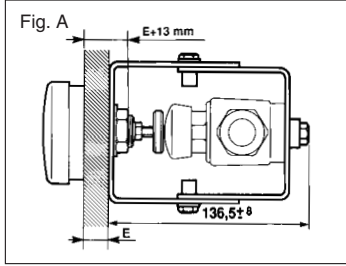

IMPORTANT

Dans tous les cas d'anomalies de fonctionnement du robinet, il est nécessaire de dévisser la tête et de nettoyer le mécanisme à l'eau courante.

ENGLISH

SHOWER

PRESTO 50, 50 H, 50 TC, 50 B

setting

PRESTO 50, 50 H, 50 TC and 50 B

- Check the flow direction indicated by an arrow on the body.
- Connect copper tube \varnothing 14 x 16, strainer screen on the inlet, flat washer on the outlet, flared flanges, nuts G 3/4 (20 x 27)

PRESTO 50 and 50 H

- To be fixed by central seal screw \varnothing 7 x 30
- Do not forget to install plate

PRESTO 50 TC IN DUCTS (Dwg. A)

- This control can be adjusted to the wall thickness (E).
- Drill a 22 - 30 mm diameter hole through the wall.
- Fitting of the tube to length after fastening
 - Fit with the washer and fasten the TWC with the fixed part of the stirrup if it is employed (Delivered separately)
 - Saw through the G 1/2" tube and the plastic rod behind the nut (E + 13 mm minimum)
 - Fit the insert and tap it home with a mallet
 - Fit the plate with its nut
 - Insert the retainer housing complete with its valve.
- Adjust the cylinder and tighten the lock nut.

PRESTO 50 B (Dwg B)

- Place mounting template ① into the hole inside wall.
 - Set inlet and outlet tubes.
 - Connect the valve, strainer screen on inlet, flat washer on the outlet, flared flanges, nuts G 3/4 (20 x 27).
 - Plaster and tile
 - Snap the concealing plate ② over the body of the valve ③ until it is correctly set on wall surface
- Dimensions of mounting template o.d. 110 mm, length 100 mm.

installation

Supplies must be flushed through before final connection.

A disturbance in the functioning of the tap could only be due to debris, grids, etc...

WARNING

In case of any failure in the functioning of the tap, unscrew head assembly and clean the mechanism under running water.

1) All the assemblies for urinals supplied with spreaders are equipped with conforming valves.