
HoopStation



powered by



Connect the HoopStation Controller

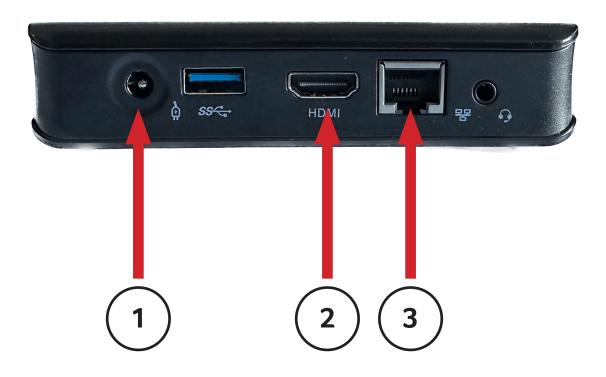


```
1: Power
```

2: HDMI - Connect this to the Projector

3: Ethernet - If possible connect the computer to your network

Mount the projector

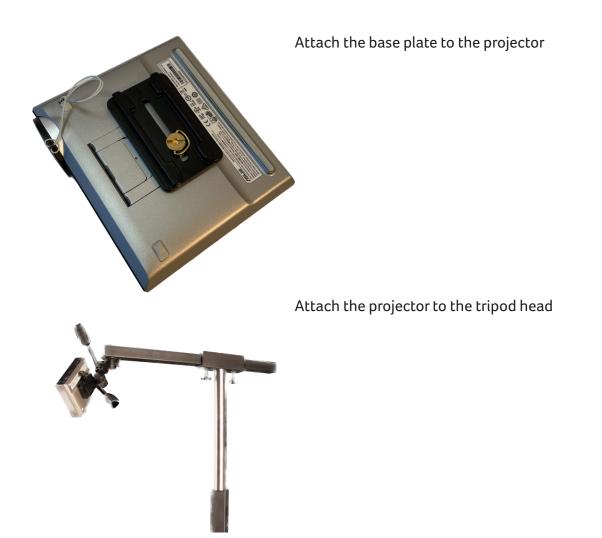

Connect the HoopStation Controller

Connect all cables and turn on the Projector and the Controller.



When everything is started, the following image is output via the projector



In this part the IP address of the EPS is displayed.

In this example 2 addresses are displayed.

192.168.1.156 and 10.42.0.1

The address 192.168.1.156 was assigned by the DHCP server.

The address 10.42.0.1 is for direct operation without network.

Connect a device to HoopStation

You have 2 possibilities to connect to the EPS A: via your own network B: directly via W-LAN

Methode A

Using a tablet or laptop that is also connected to your network, launch the web browser on your device and go to the page: http://192.168.1.156 pleace replace the IP address from the example with your own.

Methode B

The password is smake_xxxxxxxxxxx replace again xxxxxxx by the serial number.

Example: network name = eps_0000000123456 password = smake_00000000123456

Launch the web browser on your device and go to the page: http://10.42.0.1

Calibration

Now you should see the following page on your device:

Embroidery	Width: 78mm Height: 35mm			Position Environment Template					
Add +			Frame position			Collarline			
			R	Mic	ddle	L	А	В	с
			1	2	3	4	D	E	F
			5	6	7	8	G	н	I.
	Width: 78mm Height: 35mm		9	10	11	12			
			13	14	15	16			
	8 8		17	18	19	20			
			21	22	23	24			
			25	26	27	28			
			29	30	31	32			
Clear File -	Template 🔺 🗰 Grid 🔐 H	SP	···· Set siz	.e	Margin	size			

go to the settings tab an press the button "Calibration grid"

Settings						
You need some help?	Smake IT GmbH Erinstrasse 28 44575 Castrop-Rauxel Germany	Mail: help@smake.com Web: www.smake.com Phone: 49 (0) 2305 / 537 10 - 0				
Instructions and user manuals can be found under https://go.smake.com/_ps-support						
Calibration Calibration grid Fine calibration						
Settings						

Projector alignment



Fine calibration

press the button "Calibration grid, again and then press the button "Fine calibration,

EPS Main Setting	gs					
You need sor ■	ne help?	Smake IT GmbH Erinstrasse 28	Mail: help@smake.com Web: www.smake.com			
	Smake make it scalable	44575 Castrop-Rauxel Germany	Phone: 49 (0) 2305 / 537 10 - 0			
Instructions and user manuals can be found under:						
https://go.smake.com/eps-sur_oort						
Calibration						
Calibration grid	Fine calibration					
Settings						


press the button "Calibration grid, again and then press the button "Fine calibration,

EPS Main Settings						
You need some help?						
	X This function allows you to adjust or correct your projector very accurately.					
I Concerta Indee i		\	→			
Instructions and user manuals can https://go.smake.c		Look at the projector	r to see your change.	t o		
Calibration	≁			t •		
Calibration grid Fine		⇔₀	⇔₀			
Settings						
Show on-screen keyk	Save calibrat	tion				

With the buttons you can now adjust the projected image, you can make it bigger and smaller and also adjust the width. Move the projected image so that the lines of the MightyHoop and the projection are aligned.

Finish

If the lines match, save the calibration.

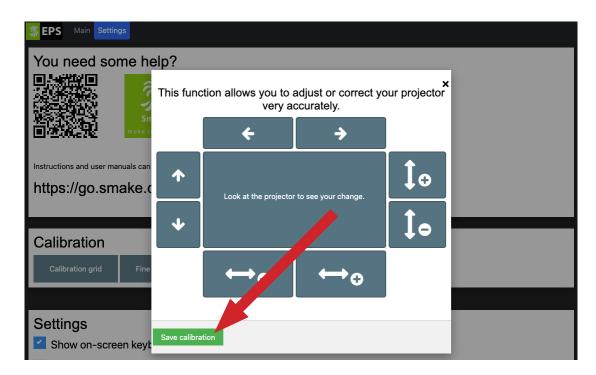

You can repeat this step over and over again if something is wrong or misaligned.