

SAGE

Wireless Speaker

USER GUIDE



Welcome to the world of TRNDlabs products!

TRNDlabs products are design focused electronics, engineered to combine ultimate performance and aesthetics.

 
WWW.TRNDLABS.COM

PACKAGE CONTENTS




USB Charging Cable

SAGE

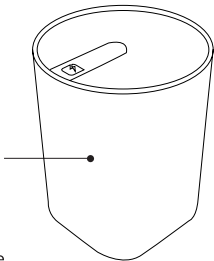

FUNCTIONS

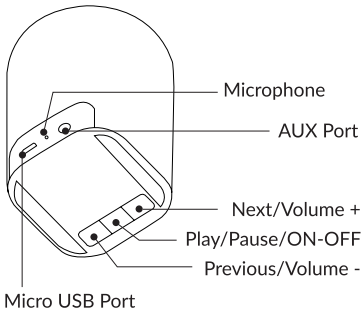 


SPECIFICATIONS

Weight	154 grams (5.43 ounces)
Size	64 mm (w) x 75.5 mm (h) or 2.52 in (w) x 2.97 in (h)
Bluetooth	V2.1 +EDR
Power output	3W
Battery	300 mAH
Frequency	90Hz - 20 KHz
Audio input	Bluetooth, Aux
S/N Ratio	≥ 80 dB
Transmission	distance < 10m
Play time	3 - 6 hours


CHARGING

 Connect the USB Charging Cable to a USB port **1**. Now connect the Micro USB plug of the USB Charging Cable to the Micro USB port of your SAGE Wireless Speaker **2**. The red LED light indicates that SAGE is charging. When the battery is fully charged, the LED light turns off.

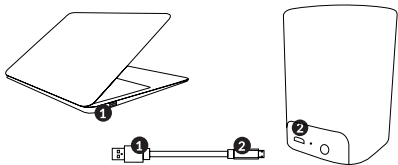

PAIRING

 To pair SAGE Wireless Speaker, make sure it is turned off, then press and hold the power button **1** for 3 seconds. A blue light will start blinking rapidly, indicating pairing mode is active. SAGE will now show up in the Bluetooth device overview in a few seconds. The blue light turns solid when SAGE is successfully paired.



TROUBLESHOOTING



PROBLEM

SAGE is not connecting to a device.



SOLUTION

1. SAGE is not in pairing mode. Refer to chapter 'Pairing' on page 7.
2. There are too many Bluetooth devices turned on, causing interference. Turn off Bluetooth on any excess devices.



PROBLEM

Sound is distorted or volume is too soft.



SOLUTION

1. Check the volume settings of your Bluetooth device.
2. Battery power is insufficient, please charge the battery.



PROBLEM

Music stops playing.



SOLUTION

The maximum Bluetooth transmission range might be exceeded or there might be an obstacle between SAGE and your Bluetooth device.



PROBLEM

The blue light indicating Bluetooth mode is not working.



SOLUTION

1. The battery's power is not sufficient, please charge the battery.
2. Restart SAGE.

SAFETY PRECAUTIONS

- Do not use SAGE in temperatures below -20°C or above 40°C or in a humidity higher than 85%.
- Place SAGE at room temperature when charging.
- Store SAGE in a dry place. Never store it somewhere moist.
- Do not try to alter or disassemble SAGE. If there is a problem with SAGE, contact the retailer for further assistance.
- When not in use, charge SAGE at least once every 3 months, to avoid loss of battery life.
- Keep away from high voltage devices or fire.
- This product is not a toy, please keep away from children.

FCC INFORMATION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



WWW.TRNDLABS.COM

The contents of this document are subject to change.
Download the latest version from
www.trndlabs.com.

If you have any questions about this document, please
contact TRNDlabs by sending a message
to hello@trndlabs.com.

© 2017 TRNDlabs. All rights reserved.



WWW.TRNDLABS.COM