

## ATTENTION

Please read the following information carefully. Failure to follow instructions or improper use could lead to explosive failure causing serious injuries.

After using sprayer with chemicals, it is important to spray with fresh water for 3-5 minutes to ensure residual chemicals in the gun, wand, tank, pump, and hose are cleaned out. This will extend the life of your sprayer. Never leave chemicals or solutions sitting in your sprayer after using.

Do not store your sprayer in extremely high temperatures. Heat can lead to the build-up of pressure within the sprayer, resulting in a possible explosion. If there is pressure in the pump, do not try to remove it with tools. Do not try to make modifications to the sprayer. Always use SprayMate™ branded replacement parts from the manufacturer.

Never spray flammable, caustic, acidic, chlorine, or other corrosive solutions or heat, pressure, or gas producing chemicals. Always read and follow chemical manufacturer's instructions before use with this sprayer as some chemicals may be hazardous when used with this sprayer.

• • • • • • • • •

### WARNING

This product contains chemicals, including lead, known to the state of California to cause birth defects and other reproductive harm.

This product is designed to apply chemicals that may be harmful and could cause serious personal injury if inhaled or brought into contact with the user

### **NOTES:**

- The sprayer may have residual water in it due to quality testing performed on it.
- Some parts may be found inside the tank when first assembling the sprayer. Please make sure to remove the parts before attempting to assemble or use the sprayer for the first time.

After long periods of time without use, the battery may have a low voltage and will require extended charging.

Always wear protective clothing, respirator, gloves, eye protection, etc. when using chemicals.

Never spray chemicals against the wind, towards humans, animals, or food.

Do not operate sprayer in temperatures lower than 32°F.

Never operate with strong acids, strong bases, or flammable liquids.

Never fill the sprayer with hot liquids (max temp. = 176°F) or gasoline.

Do not dispose of lithium-ion battery with household waste; recycle where facilities exist.

The sprayer is susceptible to water damage if left in wet conditions.

Always store it in a cool, dry place.

Always use SprayMate<sup>™</sup> original replacement parts.

Do not leave the sprayer in reach of children or persons not qualified to handle it in a proper fashion.

### **REGISTER YOUR SPRAYER!**

To take advantage of the 1-year Limited Warranty from WESSOL, LLC. Register your sprayer at the website below:

www.buyspraymate.com/register

Please read and follow this manual carefully to ensure that you get the most out of your new sprayer. If you need assistance with the assembly or operation of your sprayer, please don't hesitate to contact WESSOL via the support methods below:

www.buyspraymate.com

support@wessol.com

+1803.339.2500

# TABLE OF CONTENTS

F	BOUT	ge 6-7
1.1	specificationspage	e 6
1.2	what's in the boxpage	≥ 7
S	Pag	e 8-11
2.1	rolling sprayer assemblypag	e 8
2.2	backpack sprayer assemblypago	e 9
2.3	sprayingpage	10
2.4	aftercarepage	11
TRO	UBLESHOOT	12-15
3.1	common solutionspage	12
3.2	replacement partspage	13
3.3	warrantypage	14



# WHAT IS YOUR SPRAYER CAPABLE OF?

A SprayMate<sup>™</sup> is a highly efficient sprayer that is suitable for spraying many kinds of water-soluble chemicals.

This includes fertilizers, pesticides, cleaning products, etc. Powered by a 7.2V lithium-ion battery, this sprayer results in 2-3x more efficiency than a manual sprayer. This sprayer can be operated continuously for up to 2 hours and spray more than 7 gallons per battery charge at a distance of 15 feet.

SprayMate™ Shower MAX Specifications						
Model Number	SMSAAF	PumpType	Gear			
Battery Type	Lithium-ion	Spray Time	up to 2 hours			
Battery Voltage	7.2V	Pressure	45 psi			
Battery Capacity	2.6Ah	Spray Distance	15 feet			
Battery Charging Time	2 hours	Tank Capacity	4 gallons			
Battery Cycle Life	500 cycles	Flow Rate	o.17 gal/min			
Battery Charger	7.2V/1Ah	Pump Life	500 hours			



# WHAT'S IN THE BOX?

7.2V Spray Gun & Short Nozzle 2. Trolley Holster 3. Backpack Holster
 4-Gallon Tank 5. Trolley Handle 6. Battery Charger
 Coiled Hose 8. Screw, Nuts, and Bolts 9. Tank Cap and Hose
 Backpack Straps 11. Intake Filter 12. 18-Inch Extension Wand
 13. Trolley Handle Bar 14. Trolley Base

# ASSEMBLING AS A ROLLING SPRAYER

- Before you begin, open the tank lid and remove any nuts and bolts (8) or screws that may be placed inside the intake filter (11). Set aside.
- Insert the trolley handle bar (13) into the trolley base (14), making sure the end with two holes is going in first. Determine the height you would like for the handle baf and secure the handle bar to the trolley base with a nut and bolt.



Slide the trolley holster down the handle bar until about half way. Tighten the screw into the holster until it is snug against the handle bar. Make sure the screw is tight to prevent the holster from slipping. The screw is not designed to go through the handle bar.



D) Attach the trolley handle (5) on top of the handle bar by threading the remaining nut and bolt (8) through the hole. Tighten the handle to the trolley handle bar by rotating the lower knob attachment.



Place the sprayer tank (4) on top of the trolley base (14). Secure it to the base by screwing the knob on the back of the trolley into the sprayer tank. Tighten.



# ASSEMBLING AS A BACKPACK SPRAYER

- A) Before you begin, open the tank lid and remove any nuts and bolts or screws (8) that may be placed inside the intake filter. Keep in a safe place in case you wish to convert to a rolling sprayer.
- Taking the backpack strap (10), attach the metal clip to the bottom loop on the sprayer tank. Repeat for the other side.



- Slide the top of the strap through the top look of the sprayer tank. Thread the fabric through the buckle. Repeat for the other side. Gently tug on the straps to ensure they're secure.
- Place the backpack holster (3) over the tank outlet hole and screw the cap back on.



# PREPARING TO SPRAY

- A) Fully charge the battery prior to first operation. In a separate container, prepare the solution you want to spray according to the manufacturer's instructions. Open the tank cap and carefully pour the solution through the intake filter. Securely tighten the tank cap.
- Taking the coiled hose (7), attach the end with the ON/OFF switch to the spray gun (1). Clip the other end on to the tank cap (9). It's important to ensure the hose is fastened tightly to the spray gun and tank cap as a loose connection will prevent the the pump from drawing water through the hose.



- Determine which nozzle or attachment is appropriate for your project. Pull back on the brass collar of the quick-connect fitting on the spray gun. Insert the nozzle or attachment and then push the fitting back into its original position.
  - a) **Short nozzle** = adjustable conical nozzle ranging from jet stream to mist
  - b) **18-Inch Extension wand** = adjustable, ranging from jet stream to mist
- Making sure the ON/OFF switch is in the ON position, disengage the handle lock (if necessary) and squeeze the trigger on the spray gun to begin spraying. When first beginning to spray, it is normal for the pump to take a few seconds to build up pressure and draw liquid up from the tank and through the hose.

# AFTER YOU FINISH SPRAYING

- Dispose of extra product based on manufacturer's instructions. Rinse out any residual solution in the spray tank with warm, soapy water. Then spray fresh water through the sprayer for 3 to 5 minutes to completely clear the tank of chemicals.
- Disconnect the coiled hose from the tank cap and squeeze the trigger on the spray gun to completely empty the hose and spray gun of liquid. Allow the hose to hang down towards the ground to drain residual water.

- Dry the sprayer tank and clear the nozzle or wand attachment of any buildup.
- Store the sprayer in a clean, cool, shaded location to protect it from extreme heat or frost.
  - For long-term storage, regular discharging and charging of the battery is required to maximize battery life. We recommend charging the battery every 4 weeks. Never allow the battery to fully discharge.

## **NOTE:**

Proper sprayer maintenance is crucial to ensure the life and performance of your sprayer. Many spray materials can harden if left in the sprayer causing clogs in the nozzle or hose. Gasoline should never be used to clean out your sprayer.

## TROUBLESHOOTING YOUR SPRAYER

To contact Technical Support, message <a href="mailto:support@wessol.com">support@wessol.com</a> or call 1 (803) 339-2500

PROBLEM	POSSIBLE REASON(S)	SOLUTION	
Sprayer is not turning on and there is no sound.	Dead battery	Charge the battery. If the battery will not charge, test the charger or contact Support for replacement part and warranty coverage,	
	Loose hose connection	Make sure the connection to the spray gun and tank cap is sealed. Detach and reattach both ends of the hose.	
Sprayer will not spray even	Defective pump	Contact Support or go to buyspraymate.com to purchase a replacement spray gun.	
when fully charged.	Sprayer needs to prime	Detach the hose from the tank cap. Run the end of the hose under water until the water reaches the spray gun. Activate the trigger on the spray gun until water comes out. Re-attach hose to the tank cap.	
Dead battery.	Defective charger	Test the charger with a multimeter. If the reading is less than 7.2V, a new charger is needed. Visit buyspraymate.com to purchase a replacement.	
	Damaged lithium cells	Purchase a replacement spray gun at buyspraymate.com.	
Leaking from sprayer	Loose hose connection	Detach and re-attach the hose to the spray gun and tank cap.	



**1. FZRACB**Backpack straps



3. FZRADS
Intake Filter



6-Foot Coiled Hose

2. FZRABE



**4. FZRABJ**7.2V/1A Charger



5. FZRABU
Tank Cap & Hose



REPLACEMENT PARTS

Visit **buyspraymate.com** to view and purchase parts.

**8 ACCESSORIES** 

18-Inch Stainless Steel Extension Wand

6. FZRABS



7. SMRACZ 7.2V/2.6A Spray Gun

# WESSOL, LLC LIMITED WARRANTY

### **WARRANTY COVERAGE**

WESSOL, LLC warrants to the original purchaser that the SprayMate<sup>™</sup> product will function as intended under normal use and consistent maintenance, subject to certain limitations and exclusions. At the discretion of WESSOL, LLC, we will repair or replace any parts found to be defective in material or workmanship without charge, apart from shipping and handling costs, during the covered warranty period.

#### **WARRANTY PERIOD**

The warranty period will begin from the date of retail purchase and exist for one (1) year, regardless of when the unit is placed in service. The warranty period is not extended if we opt to repair or replace the product in question.

#### **WARRANTY CLAIMS**

WESSOL, LLC reserves the right to require the return of the defective product, proof of purchase, and established product registration to file a claim under this warranty.

If the product fails to function as intended **DO NOT RETURN ITTO THE STORE**, call our Technical Support hotline at +1 803-339-2500, email warranty@wessol.com or submit a contact form at buyspraymate.com.

### PRODUCT REGISTRATION

All sprayers purchased from FlowZone or an authorized distributor must be registered online to validate the warranty and allow for warranty claim processing. Sprayers can be registered at <a href="https://buspraymate.com/register">buspraymate.com/register</a>.

To file a warranty claim, visit:

www.buyspraymate.com/warranty





#### **EXCLUSIONS AND LIMITATIONS**

WESSOL, LLC only warrants products purchased from authorized distributors. Products purchased from unauthorized resellers or distributors are not subject to warranty services.

The limited warranty does not cover damages, loss, or injury resulting from transportation, storage, accident, improper use, neglect, modifications, normal wear, or operation not in accordance with the instruction manual. WESSOL, LLC reserves the right to change the design or specifications of any product without obligation to modify previously produced units.

ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR CONSUMER USE, ARE LIMITED TO THE DURATION SPECIFIED ABOVE. WESSOL, LLC'S LIABILITY IS LIMITED SOLELY TO THE REPAIR OR REPLACEMENT OF THE NON-FUNCTIONING PRODUCT OR PART. WESSOL, LLC EXCLUDES LIABILITY UNDER THIS WARRANTY FOR ANY AND ALL INCIDENTAL AND CONSEQUENTIAL LOSS OR DAMAGE.

In no event shall WESSOL, LLC be liable for any incidental, special, consequential or punitive damages, or for any costs, attorney fees, expenses, losses or delays alleged to be as a consequence of any damage to, failure of, or defect in any product including, but not limited to, any claims for loss of profits.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

