









Solar Powered Tyre Pressure Monitoring System





WARNING THIS PRODUCT CONTAINS BUTTON/COIN CELL BATTERIES
Button/coin cell batteries are hazardous and must be kept out of reach of children at all times, whether the battery is new or used. These batteries can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. If it is suspected a button/coin cell battery has been swallowed or placed inside any part of the body, seek medical attention immediately or contact the Australian Poisons Information Centre on 131126 for 24/7 fast, expert advice.

Pack Includes

-  LCD Display
-  Sensor X4 or X6
-  Washers x5 or x7 (1 spare)
-  Nuts x5 or x7 (1 spare)
-  Dustproof cover X4 or X6
-  Anti-slip mat X1
-  Sensor tool X1
-  Spanner X1

Ensure that these parts are stored safely.

Product Overview

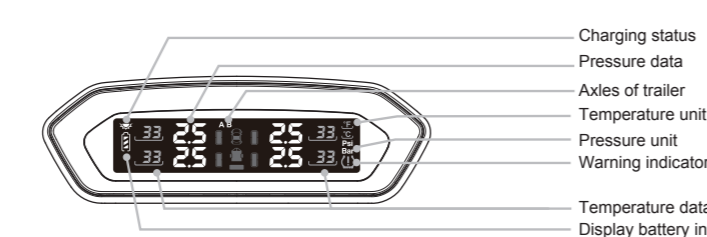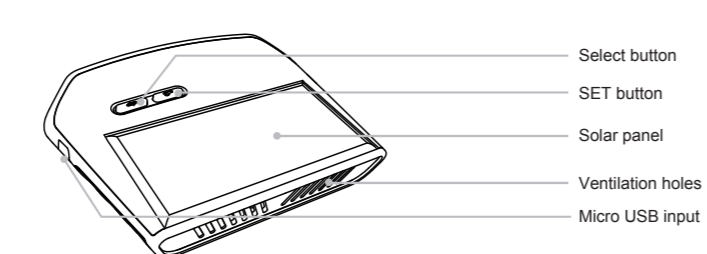


Display ON/OFF


Press any button for 3 seconds to turn on the display.
Press " ← " button for 3 seconds to turn off the display.

Display installation


Installation position

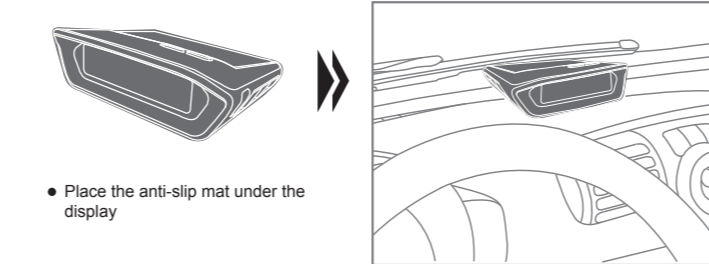

USB charging connection

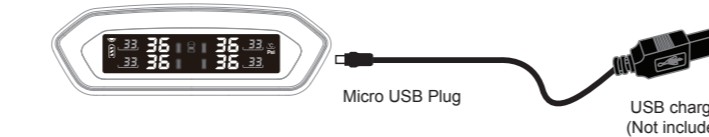

Sensor position

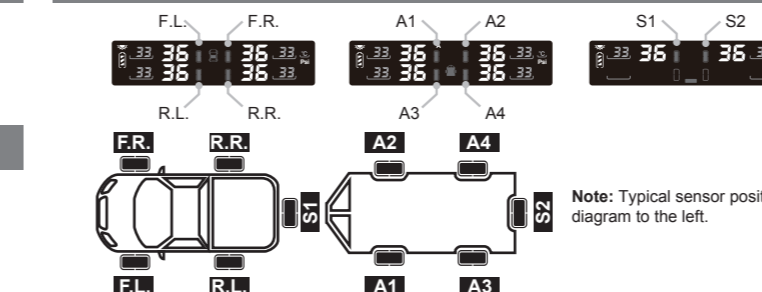

Sensor installation


1. Unscrew the valve cap
2. Insert the dustproof cover into the valve stem
3. Screw in the nut
4. Screw on the sensor

Sensor battery replacement

5. Tighten up the nut to the sensor by using the spanner
6. Check air leakage by spraying soapy water
1. Unscrew the nut
2. Unscrew the sensor
3. Take out the washer
4. Unscrew the sensor cover by using the sensor tool
5. Replace the battery
6. Repeat steps in "Sensor installation"

Functional test after installation

Display will show real time tyre data automatically when the speed is over 25km/h (15.5MPH)

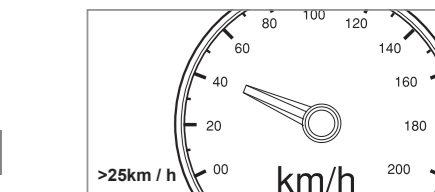

Installation is complete when all tyre data has been received and is showing on the display.

