



## SPECIFICATIONS

Model :	ScentBeat 850
Bottle Capacity:	850 ml
Consumption:	0.20 - 4.00ml/hr
Input Voltage:	DC12V
Power:	9W
Coverage:	800m <sup>2</sup> /200m <sup>2</sup> /84000ft <sup>3</sup>
Material:	Plastic
N.W.:	2.13kgs/G.W.: 2.8kgs
Color:	White / Black



## INCLUDED

- 1x ScentBeat Diffuser
- 1x Manual
- 1x Power Supply
- 1x Key
- 1x Atomized Nozzle Connector
- 1x Wall Mount Bracket
- 1x Wall Mounting Hardware (3 wall anchors & 3 screws)
- 1x Roll of Teflon Tape (HVAC Application)
- 1x Brass Atomized Nozzle push lock connector (HVAC Application)
- 1x Polyurethane Tubing (HVAC Application)

### Sold Separately:

- 1x Bottle of Fragrance Oil
- Cleaning Kit



## CAUTION / WARNING

1. Please keep the machine vertical. Tilting or laying flat may cause the oil to over flow and may affect the efficiency of the machine.
2. Do not modify, disassemble, or repair the machine arbitrarily. If any failure happens to the machine, please contact our technical personnel.
3. Do not get the machine or power cord wet, force into an unmatched socket, or use with an overloaded power source.
4. The atomization display will remain on, even when the machine is set not to diffuse.
5. When the machine is locked, the buttons are invalid, and there will be no display on the screen.
6. If the display freezes or causes another problem, please restart the machine to return to default settings. (Press the ENT button and hold for approximately 5 seconds until hearing a "beep" sound.)



## WALL MOUNTING (OPTIONAL)

1. Line up the mounting bracket accordingly with where you would like to install the device on the wall.
2. Drill holes in the wall, and install the mounting bracket; first inserting the wall anchors, then the screws, and tighten the bracket to the wall.
3. Finally, hang the machine onto the bracket.
4. Connect the power supply. You will hear a "beep" and the screen will display the initial time and current grade settings. The screen will shut off when the power has been disconnected.



## OVERVIEW

1. Use the key to open the door (located on the right side of the unit).
2. Unscrew the atomized nozzle from the machine and remove the atomized head.
3. Insert the straw into the bottle of fragrance and tighten to the atomized head.
4. Reinstall the atomized head with attached fragrance bottle into the machine and screw on the atomized nozzle so that it faces the front of the machine.
5. Plug in the device using the provided power supply.
6. Finish time settings in the app and then lock the machine using the key.



## EQUIPMENT CLEANING

The machine needs to be cleaned when any of the following occur:

1. You're are switching to a different oil.
2. The atomization volume becomes weak.
3. Cleaning steps:
4. Pull out the atomized head and loosen the bottle.
5. Use a large container filled with industrial alcohol to soak the atomized head and bottle in for 5-10 minutes.
6. Air out the atomized head and bottle.

# ScentBridge


## ScentBeat 850

### User Manual




## APP GUIDE


- Ensure Bluetooth is enabled on your smart device.
- Search the Google Play Store (Android) or the App Store (IOS) for "Scent Marketing".
- Once downloaded, open the app and select your device model.

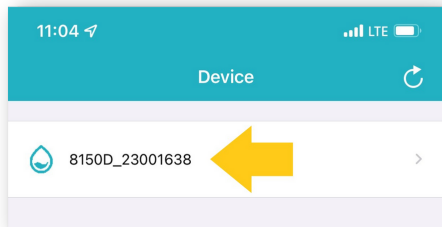


- Enter the default password "8888". (The system will "beep" once connected.)
- To change your password, tap "About".

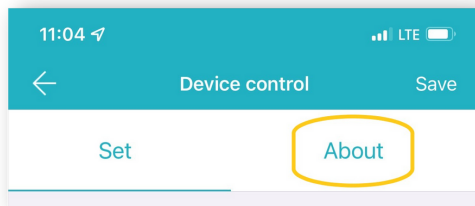

- Tap, "Change password", enter your new 4-digit PIN, then tap "Save".

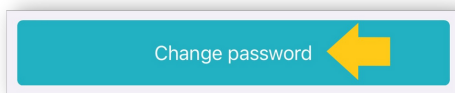



- To edit the name of the system tap the current name.
- To edit the label, tap the empty field under "Label".

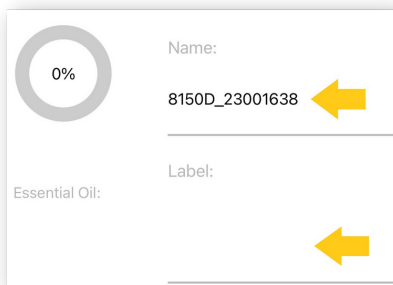


- Ex: Name: "North Property"  
Label: "Sitting Area"

## TIME SETTING

- To add a working time tap the (+)  
(a total of 5 working periods can be added)

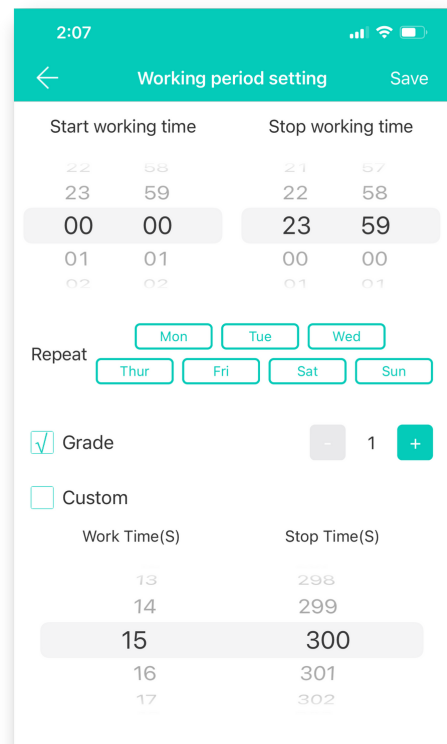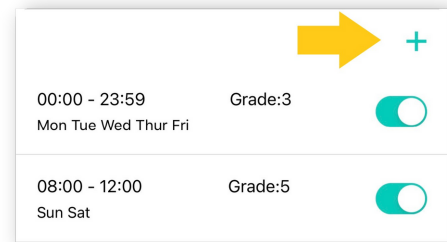

- For example, the schedule below is running Monday through Friday, 24 hours a day, at grade 3. On weekends, it is running from 8AM until Noon, then shuts off for 5 hours, then runs from 5PM until 10PM at grade 5.

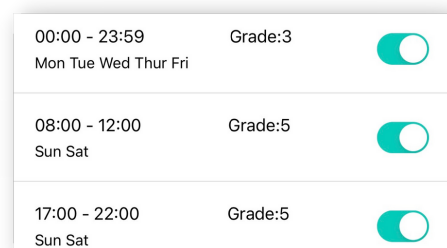



## CONCENTRATION & CONSUMPTION

GRADE	DIFFUSING (S)	INTERVALS (S)	CONSUMPTION
G1	15s	300s	0.2
G2	15s	150s	0.3
G3	20s	120s	0.5
G4	20s	85s	0.6
G5	25s	80s	0.8
G6	30s	75s	0.9
G7	30s	60s	1.0
G8	30s	50s	1.2
G9	30s	40s	1.3
G10	30s	33s	1.5
G11	33s	30s	1.8
G12	40s	30s	2.0
G13	50s	30s	2.3
G14	60s	30s	2.5
G15	75s	30s	2.8
G16	80s	25s	3.0
G17	85s	20s	3.3
G18	120s	20s	3.5
G19	150s	15s	3.8
G20	300s	15s	4.0
Cu	5-500s	5-500s	



## TROUBLESHOOTING

Before reaching out to our technical personnel, please try to diagnose the problem using the following breakdowns and solutions. If you need further assistance, please email us at [service@scentbridge.com](mailto:service@scentbridge.com).

### Weak or No Diffusion:

- Check to ensure you are using the correct mode.
- Check to ensure the machine is not in the "non-working period".
- The air pump may be damaged, replace if still under warranty.
- Check to ensure the tube is not loose.

### Oil Leaking or Spraying:

- Check to ensure the bolt is not loose.
- The gasket in the atomized head is damaged or loose.
- The atomized head is damaged, contact support if still under warranty.
- The machine is tilted or laying down, sit upright.