

MODEL DHE-DL500A

DRUM LIFTER 500A

Instruction Manual





DHE Materials Handling Equipment

Drum Lifter 500A

Instruction Manual

Auslift Equipment
2/2-4 Souffi Pl, Dandenong South .
VIC. 3175
Phone: 03 9702 7977

Website: www.auslift.com.au



Table of Contents

- 1.0: FIGURE AND DIMENSION 3**
 - 1.1 : TECHNICAL SPECIFICATION3

- 2.0: OPERATING PROCEDURE 4**
 - 2.1 : LIFT DRUM.....4
 - 2.2 : TRANSPORT DRUM4
 - 2.3 : PUT DOWN DRUM4

- 3.0: WARNING 5**

The Drum Lifter 500A is an all steel construction drum lifter that works easily with overhead crane or jib attachment.

- Handles open or closed steel drums.
- It keeps drums upright during lift, reducing spills and injuries.
- Quick and gentle loading.

1.1: Technical Specification

Model	DHE-DL500A
Lifting Capacity	500kgs
Drum Size	200 Litre
Unit Weight	5kgs

2.0 : Operating Procedure

2.1 : Lift Drum

Place the Drum Lifter 500A on the hook of the overhead crane or jib attachment vertically.
Lock the hook in position.

2.2 : Transport Drum

Raise the crane or jib attachment as required until the drum is lifted off the ground of platform. Manoeuvre the drum to the required area.
Notice: To minimise hazard risk it is strongly recommended to move the drum whilst the drum's position is as low as possible.

2.3: Put Down Drum

After moving the drum to the destination, slowly lower the crane or jib attachment until the drum is securely in the required area.



3.0 : Warning

- Never overload the Drum Lifter 500A beyond its rated capacity.
- Place the drum on the low position when there is no requirement to lift.
- Raise the drum slightly on the ground when transit drum, do not need to lift it high