

Vantage PRO2™ INSTALLATION DIAGRAM

Anemometer installed in a Sensor Transmitter

This diagram shows a Vantage Pro2 sensor suite with the anemometer installed in a Sensor Transmitter wirelessly connected to a WeatherLink® Console.

