

Vantage PRO2™ INSTALLATION DIAGRAM

Wireless Repeater First In Chain Network

This diagram shows a Wireless Repeater network, comprised of two separate sets of repeaters. On one section of the network, a VantagePro2 sensor suite is transmitting data to a Wireless Repeater, which relays the data to a WeatherLink® console, and/or WeatherLink Live or Weather Envoy. On another section of the network, a Temperature/Humidity Sensor in a Sensor Transmitter simultaneously transmits data to an initial Wireless Repeater, which relays the data to a second repeater, which in turn relays the data to the Vantage Pro2 console, and/or WeatherLink Live or Weather Envoy.

