

Vantage VUE® INSTALLATION DIAGRAM

Vantage Vue System

This diagram shows several ways to set up a Vantage Vue system. The outdoor sensor suite can transmit to any number of indoor receivers including WeatherLink® Console, WeatherLink Live™, or a Weather Envoy™. The transmission distance between a sensor suite and the receiver is up to 1000' (300 m) line-of-sight, or up to 400' (120 m) through walls and other obstructions.

