






Item List

Common Failures &Solutions


Common Failures	Solutions		
Light is out	① Ensure the lamp is well connected.		
J	② Ensure the switch is turned on.		
Flashing	① Ensure the Voltage is stable.		
	② Ensure the dimmer is compatible.		

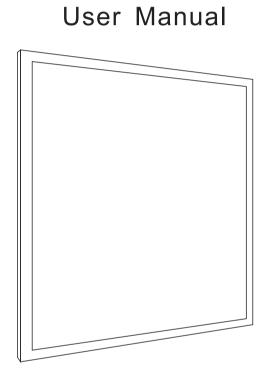

TECTUM BACKLIT LED PANEL

All the pictures are just for reference and we have the final explanation rights

Producer information: Suzhou Kinglight Optoelectronics Co.,Ltd East side of Guotai North Road Yangshe Town,Zhang Jiagang city, Suzhou, China.

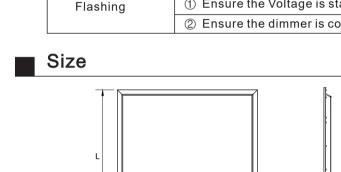


-	-	11 "	
SIZE	LXWXH(mm)	L X W X H (Inch)	
European Size			
600X600	595 X 595 X 30 mm	23.43 X 23.43 X 1.18"	
610X610	602 X 602 X 30mm	23.70 X 23.70 X 1.18"	
620X620	620 X 620 X 30mm	24.41 X 24.41 X 1.18"	
300X1200	295 X 1195 X 30mm	11.61 X 47.05 X 1.18"	
300X1300	298 X 1209 X 30 mm	11.73 X 47.60 X 1.18"	
600X1200	595 X 1195 X 30 mm	23.43 X 47.05 X 1.18"	
600X1300	602 X 1209 X 30 mm	23.70 X 47.60 X 1.18"	


Wiring

***Cut off power before installation.

  European Size Panel connection diagram 220-240V~ 50/60Hz









Installation

***Cut off power before installation.

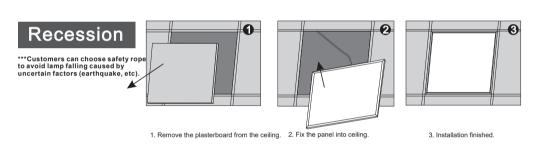

Suspension




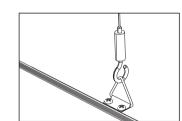




Mounted Frame

  
Surfaced Mounted Frame







Recessed Frame

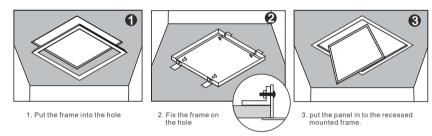

Notes

1.Indoor lighting only.

the luminaireshall be destroyed.

2.Before installation, ensure the LED panel is not damaged.

3.Don't stare at the LED luminous surface for long time.

4.Keep away from children, and ensure working electrical apparatus inaccessible to them. 5.No packages accessible to children, because they might be choked for playing, or eating the small accessories.

6.No covering, be away from fire or high-temperature substance.

7.Manufacutrer reserves the right to offer no replacement or warranty to the led panels dissembled or

repaired by users themselves.

8.Cut off power before cleaning the panels with dry cloth, use no chemical or corrosive substance .

9.Cut off power before installation.

10. The light source of this luminaire is not replaceable; when the light source reaches its endof life the whole luminaire shall be replaced. 11. The external flexible cable or cord of the panel light cannot be replaced; if the cord is damaged,