

FILTER REPLACEMENT DIRECTIONS

TO BEGIN USING YOUR

Inspect the exterior of your Airpura to verify there is no damage from shipping. If any damage is noted, please follow the instructions from the distributor returns policy.

Wipe the unit with a damp cloth to remove any dust from packaging

Plug the unit into a regular grounded 110 volt outlet

Turn on the unit to MAX and allow it to run for a few minutes

Set the variable speed control to the level you wish

The most efficient way to use your Airpura for regular air quality maintenance is to run it at a low speed **24 hours a day 7 days a week.**

Maintain a humidity level of below 40% at all times in your home.



FILTER MAINTENANCE AND REPLACEMENT

Ensure regular maintenance/replacement of filters

The Prefilter

Can be vacuumed from the exterior of the unit once a month or more often. Should be replaced at least after 12 months of use

To vacuum the Prefilter

Use the brush attachment on your vacuum cleaner Vacuum slowly around the mesh surface of the filter chamber


IMPORTANT SAFETY NOTE

Please ensure air purifier is turned OFF when plugging into a power source. Failure to do so may result in motor potentially stalling and/or burning.



Poly Prefilter 600 2-pack 12 months



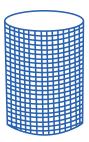

HepaBarrier 600CT Filter (95% efficient @ 1 Microns) 12-16 months

26 lbs impregnated Carbon filter 17% potassium iodide carbon, 83% coconut shell 24 months

Technical specifications

Odors, airborne chemical control 26 lbs activated Carbon 13"H in x 13.25"OD in x 7"ID

Particle removal HepaBarrier

Air Flow 560 cfm More cfm than any other home unit available

Prefilter 570 in² x 1 in

Housing Powder coat steel

Size 23 in x 15 in **Weight** 45 lbs total

Watts 120 on high / 40 on low

Sound Level 28.1 db on low (at 6 feet) 62.3 db on high (560 cfm) (Room Level 25.1)

ETL Certified Conforms to CSA C22.2 no 113 ANSI / UL 507



Air purifiers models and filter configurations

	Prefilter	Carbon
Alternates	Cotton Prefilter TarBarrier Prefilter	

To open the filter chamber



Turn over the Airpura



Remove the 4 retaining screws



the cover

Remove the gasket



Position the Prefilter inside the filter chamber



Place a felt gasket at the bottom of the filter chamber



Unfold the filter slider (Supplied with replacement filters or on request Part#6F 001)

Insert the Carbon canister into

the funnel and hold it

straight



Roll it into a spiral



Insert the tube into the filter chamber inside the Prefilter



Let the spiral open to fill the opening



Open the top of the

spiral to make a

slight funnel

Slide in the Hepa filter



Let the canister

slide down

thefilter slider



Pull the filter slider up out of the cavity using both hands and let the canister slide to the bottom of the cavity



Remove the filter slider and fold it for further use





Replace the gasket



Position the indentation in the cover into the center of the HEPA filter



Replace the 4 screws and tighten



Turn the Airpura back on casters