

G600

OPERATING & FILTER REPLACEMENT DIRECTIONS

TO BEGIN USING YOUR

AIRPURA

Inspect the exterior of your Airpura to verify there is no damage from shipping. If any damage is noted, please follow the instructions from the distributor returns policy.

Wipe the unit with a damp cloth to remove any dust from packaging

Plug the unit into a regular grounded 110 volt outlet

Turn on the unit to MAX and allow it to run for a few minutes

Set the variable speed control to the level you wish

The most efficient way to use your Airpura for regular air quality maintenance is to run it at a low speed **24 hours a day 7 days a week.**

Always maintain a humidity level of 35% or less in your home to ensure the unit is operating at optimal levels. Overly humid conditions can have an adverse effect on the performance of the carbon. When using purifier with a humidifier, please keep humidifier at least 6 feet away.



FILTER MAINTENANCE AND REPLACEMENT

The Prefilter

Can be vacuumed from the exterior of the unit once a month or more often. Should be replaced at least after 12 months of use

 
To vacuum the Prefilter

Use the brush attachment on your vacuum cleaner Vacuum slowly around the mesh surface of the filter chamber

IMPORTANT SAFETY NOTE

Please ensure air purifier is turned OFF when plugging into a power source. Failure to do so may result in motor potentially stalling and/or burning.







HEPA 600RVHU Filter (99.97 % efficient @ 0.3 Microns) 3 to 5 years

Technical specifications

Odor, airborne chemical control

18 lbs German carbon Filter carbon 13"H x 13.25"OD x 9"ID

Carbon bed

570 in² x 2 in deep

Particle removal

40 sq ft true HEPA (Measured 1 side only) 12 pleats per inch Pleats warm rolled with separators

Air flow 560 cfm

More cfm than any other home unit available

Pre-filter

570 in² x 1 in deep

Size

23 in x 15 in

Weight

45 lbs total

Voltage options

110 or 220 volts

Watts

120 on high / 40 on low

Sound level

28.1 db on low (at 6 feet) 62.3 db on high (560 cfm) (Room level 25.1 db)

ETL certified

Conforms to CSA C22.2 no 113 ANSI / UL 507









Air purifiers models and filter configurations

	Prefilter	Particule	Carbon
Alternates	Cotton Prefilter TarBarrier Prefilter		

To open the filter chamber



Turn over the Airpura



 
Remove the 4 retaining screws



Take off the cover



Remove the gasket



Position the Prefilter inside the filter chamber



Place a felt gasket at the bottom of the filter chamber



Unfold the filter slider (Supplied with replacement filters or on request Part#6F 001)



Roll it into a spiral



Insert the tube into the filter chamber inside the Prefilter



Let the spiral open to fill the opening



 
Open the top of the spiral to make a slight funnel



Insert the Carbon canister into the funnel and hold it straight



Let the canister slide down thefilter slider



Pull the filter slider up out of the cavity using both hands and let the canister slide to the bottom of the cavity



Remove the filter slider and fold it for further use



Slide in the Hepa filter

To close the filter chamber



Replace the gasket



Position the indentation in the cover into the center of the HEPA filter



Replace the 4 screws and tighten



Turn the Airpura back on casters