Assembly Instructions For Dining Chair And Garden Bench

<u>Tools Needed:</u> Hammer For Light Tapping Parts List: Seat Assembly (1) Back Assembly (1) Right Arm Assembly (1) Left Arm Assembly (1) Hardware: 1/4" x 4-3/4" Bolts (2) 1/4" x 2-3/4" Bolts (4) 1/4" x 2" Bolts (2) Allen Wrench (1)

- Step 1 Lay out and identify all the parts and pieces.
- Fasten the back assembly to the seat assembly. Align the predrilled holes on the bottom of the back assembly with the threaded inserts on the back of the seat & insert two 4-3/4" bolts. Turn them into the inserts with the Allen wrench. NOTE:

 Do not fully tighten these bolts until Step 3 is completed.
- Step 3 Take an arm assembly and align the predrilled holes in the legs with the threaded inserts in the side of the seat. Insert two 2-3/4" bolts and semi-tighten. Now align the predrilled hole on the back of the arm with the threaded insert on the side of the back assembly. Insert a 2" bolt and tighten with the Allen wrench. (The back assembly can be moved back & forth if the holes don't align properly). Attach the other arm assembly and tighten all bolts.



