



Battery Set up Instructions



WARNING! Battery Installation - failure to follow instructions will invalidate your warranty and may lead to the battery dropping out of it's housing, causing severe damage to the battery or serious injury.

About the battery locking system



Battery Lock

Located on the right hand side of the downtube.



Battery Latch

Located on the left hand side of the downtube.



Battery Cradle

This is where your battery slots int at the bottom of the downtube.

If you have any further questions about the set-up of your Comfort, please contact us at www.myycle.co.uk/contact-us

Step by step battery removal



Turn the bike off at the Analogue/ LCD display. Insert the key into the lock.



On the opposite side of the bike, is your battery latch. Slide this upward toward the bars to the unlock position.



Place your hand under the battery. Go back to your key and turn it counter clockwise to the unlock position. The battery should pop open with this action to indicate it has unlocked.



You can now gently pull the battery down and forward towards the handlebars to release the battery completely.

Step by step battery installation




Place the end of the battery into the lower part of the cradle so the battery connections line up.



Push the top end of the battery up into the upper part of the cradle and listen for a click.




Make sure your battery clicks twice to indicate correct installation

Push in again and you should hear a second click. This second click indicates your battery is now securely locked in place. The key will also turn fully to the lock position by itself.



Lastly, push the battery latch on the opposite side of the downtube downwards toward the pedals. The battery is now secure and you can remove the keys.