



Mycle

Cargo Accessories Assembly Instructions



Front Basket

Attach the basket

On the front of your Cargo is 4 bolt holes that line up with the front basket bolt holes. Simply remove the existing screws and fasten back up around the basket. When fastening, do so in a cross sequence to ensure the fastenings are level.

Naturally, the cabling will centrally part and sit either side of the basket. It is important to check you have full movement steering left and right. If additional cabling is required, you can undo the Velcro ties, readjust the cables to allow you more movement, and put the Velcro ties back on the cables where it makes sense to do so.

Attach the light to the basket

Remove the front light using the appropriate Allen key in your tool kit provided. Place the screw back into the original thread as this keeps the mudguard secured.

Using a screwdriver (not provided) remove the bolt holding the light to the fixing arm, and flip arm upside-down. Do the screw back up. This will give the light plenty of clearance to fit on the front basket.

Using an additional screw, fasten the light to the front of the basket so the arm faces upwards and the light can sit level. There are clips for the light cable to sit in around the base of the basket, or you can use zip ties to secure the light cable so it's flush with the base of the basket.



Caboose

Building the caboose

The Caboose comes with 8 x short screw, 8 x long screws and 8 x extra washers loose. The short screws are used for putting the Caboose together, and the longer screws and extra washers are for fastening the Caboose into the bike.

Using a the appropriate Allen key from your tool box provided, simply screw on the bars as shown in the picture right. With the bars orientated on the outside, it will give you the widest possible opening, but the bars facing inwards will give you a smoother area inside the caboose. You can choose the bar orientation depending on which finish you'd prefer.

Attaching to your Cargo

When the Caboose is fixed, it's time to attach it to the bike. There are 8 threaded holes around the rear cargo rack, filled with rubber bungs. Remove the bungs and keep safe for later if you decided you don't want to ride with the Caboose.

Use a washer against the bike and screw the Caboose into place with al 8 screws until they are secure.



Deck Pads

Your deck pads are easy to add onto the Myycle Cargo rear rack and simply clip into place using the two buckle fastenings. They are equally as comfortable with or without the wooden deck.

For the front passenger, there is a handle on the back of the saddle, while we recommend a rear deckhand for the rear rider to reach around and hold onto during their ride.



Deck Hand

Attach the basket

Simply remove the screws that hold the wooden deck in place and reuse to fasten into the deck hand into position at the rear of the rack.



Cargo Baskets

The Cargo can only use one rear basket at a time securely. To fit the baskets, undo the screws holding the wooden deck into place, and put to one side for use with the baskets. Remove the wooden seat deck and put into storage for when you might want to use it later.

Align the basket with the corresponding holes and secure into the rear rack reusing the screws.

Our Myycle bags slot snugly into the baskets and come with Velcro bar fixings to keep the bag securely in place, even over uneven, bumpy road surface.

