

# Power Assist

**The Power Assist feature is what makes Mycle special. You can switch from fully manual to high speed assistance at the push of a button.**

Power Assist is initiated by the pedals and operated through the On Board control pannel. Simply pedalling the bike will create an additional level of power to increase your riding speed or help you tackle hills.

Switch between the different levels, in combination with the gears, to maintain a steady pace over varying terrain.



*High Power*



*Tackle Hills*

**Level 0** *fully manual*

**Level 1** *for low speeds  
& flat riding*

**Level 2** *for faster speeds  
& uphill*

**Level 3** *for high speeds  
& uphill*



### **Twist Throttle**

- 1** Use throttle for power assisted start without peddelling or crusing at walking pace (6kph)

***Be aware that using the higher power assist levels for prolonged periods will use up the battery more quickly.***

# On Board Controller

Everything you need to know about your bike appears on the On Board Controller.



# Get Started

Hold the Power button for two seconds to switch on and off.

# Use The Lights

Hold down the Level Up button for two seconds to switch on the front and rear light.

# Operate Power Assist

Use Level Up and Level Down to switch between Power Assist modes.