 




WINCENT

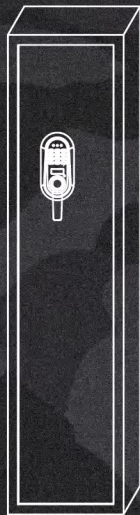

LARGE RIFLE SAFE
INSTRUCTION 



| CONTENT

- Important Safety Precaution 1
- Product Installation 2
- Battery Installation 3
- Operation
 - Change Password 4
 - Opening the Safe 5
- More Functions
 - Alarm Setting 6
 - Low Battery Warning 6
 - To Close and Lock 6
- Safety Precautions
 - Safety Precautions 7
 - Disclaimer 7

I Important Safety Precaution

Important Notice: Always keep the emergence keys out of the safe!



Please read these instructions carefully and keep them for future use. If these products are transferred to third-party users, these user instructions must be included in the products.

When using electronic products, you should always follow basic safety precautions to reduce the risk of fire, electric shock and/or personal injury, including the following:

Battery Warning

- Install the battery correctly according to the polarity (+ and -) on the battery and battery compartment.
- Remove and properly dispose of used batteries.



Please pay attention to these instructions before using for the first time

- Check for transport damages.
- Clean the product before first use.
- **⚠ DANGER** Risk of suffocation! Keep any packaging materials away from children these materials are a potential source of danger, e.g. suffocation.

Opening the Safety Device at the First Time

- Please remove the keyhole cover on the panel, insert the key and turn it counterclockwise, and meanwhile turn the handle to right way to open the door

| Product Instruction

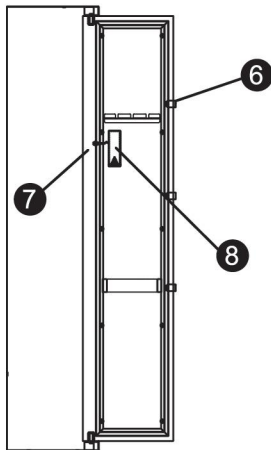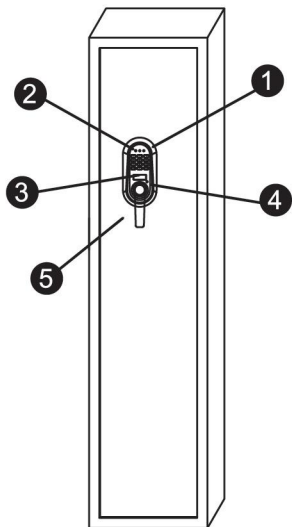

- ① Keypad
- ② Indicator Light
- ③ Emergency Keyhole
- ④ Emergency Power Port
- ⑤ Handle
- ⑥ Bolt
- ⑦ Reset Button
- ⑧ Battery Compartment

| Battery Installation

1



2



A. Remove the battery compartment cap, place 4AA batteries(included) in the compartment.

Please pay attention to the “+” and “-” signs.

B.To install the batteries, locate the battery compartment.

Place the batteries into the compartment.

! WRANING

***Please pay attention to battery usage, maintenance and disposal information
Repeat above steps for battery replacement.***

I Operation

Change Password

When you first time use it you should change the default code as soon as possible to prevent unauthorized access to your safe, so it should be kept confidential.

A. Username password setting:

1. Press the Reset Button followed by two beeps of “DiDi”, the yellow light goes on.
2. Enter your New code with any 1-8 digits and press “**LOCK**” to confirm.
3. The yellow light goes out with two beeps, indicating the password has been set successfully.
4. Now test the code. If you make a mistake and the new code will not work(five beeps with the yellow light goes on if the incorrect entry is made), simply start over with step 1.

B. Manager password setting:

1. Input “0” twice, and then press the Reset Button followed by two beeps of “DiDi”, the yellow light goes on.
2. Enter your New code with any 1-8 digits and press “**LOCK**” to confirm.
3. The yellow light goes out with two beeps, indicating the password has been set successfully.
4. Now test the code. If you make a mistake and the new code will not work(five beeps with the yellow light goes on if the incorrect entry is made), simply start over with step 1.

I Operation

Opening the Safe

1. Input the set username password or manager password.
2. Press the confirming button “**LOCK**” with two beeps of “DiDi” and the green light goes on, indicating the password is correct. Then make the handle to right way and open the door(the opening action must be completed within 5 seconds).
3. If the password is wrong, then five beeps with the yellow light goes on.
4. If the wrong password input three times in a row, the alarm will ring for 60s. Only input the correct password will clear the alarm.

| More Functions

Alarm Setting:

- Press “**LOCK**” to enter the alert state automatically. When the safe is vibrated, the alarm will sound. Input correct password to cancel the alarm. If input the incorrect code, the alarm will stop after 60 seconds.

Low Battery Warning:

- If the red light is on when press the code by electronic way, your battery level is critically low and your safe needs to be replaced the 4 new batteries.

To Close and Lock:

- Turn the handle return to close the door.

| Safety Precautions

Safety Precautions:

- Please read all instructions carefully. Remind all WINCENT users of the safety precautions. Read the following instructions for your own safety
- Do not attempt to disassemble the safe by yourself. It can cause product damage, void warranty and cause injuries.
- Do not use any inappropriate tools that can cause damages or malfunction to your lock.
- Always make sure the door is securely closed and locked when you leave to prevent unwanted entry.
- Always dispose of used batteries according to your local laws. DO NOT BURN.

Disclaimer:

- Neither seller nor manufacturer shall be liable for unauthorized access, any injury, loss or damage to personal property direct or consequential, arising out of the use of , or the inability to use the WINCENT safe.
- The user shall determine the suitability of the WINCENT safe before the intend use and user assumes all risk and liability whatsoever in connection therewith, WINCENT safe are not intended to protect against environmental hazards including fire and water.
- Be sure and follow all local and state firearm laws.
- DO NOT operate a firearm without proper training and experience.



WINCENT

☎ +1 888-8WINCENT

☎ +1 888-894-6236

✉ support@wincentpro.com

🌐 Website: www.wincentpro.com