



Coupling Assembly Instructions

The coupling kits are supplied as a set of parts: the backing plate plus a number of coupling plates (2 plates for a single slot coupling, 3 plates for a dual slot coupling, 4 plates for a triple slot coupling)

To assemble:

1. Insert each coupling plate into the backing plate. The corners of the slots may require filing to achieve this. A vice may be used to help press the plates into position.
2. Plug weld within the recess at the rear of the backing plate
3. Grind the weld flush and paint in your desired colour!

