



PT75

Electric Pole Saw / Pruner

Instruction Manual

Read instruction manual before use!



Equipmart Ltd
Kiam House
Birchill Road
Knowsley Ind. Park North
Merseyside
L33 7TD
United Kingdom



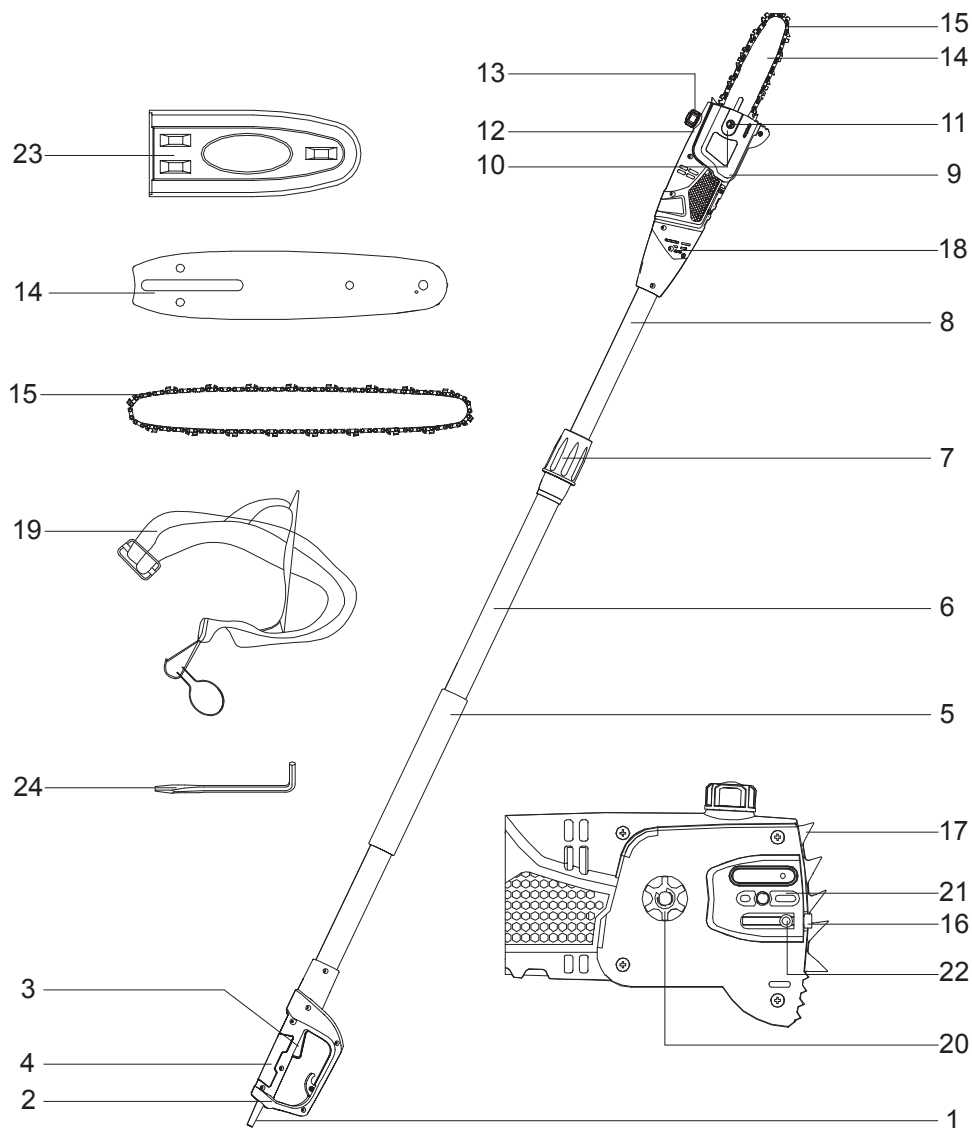 
T: 0044 151 548 5500
F: 0044 151 548 5599

© Equipmart Ltd
www.wolfcreekttools.co.uk

Contents

- 1. Introduction 4
- 2. Safety Instructions 5
 - 2.1 Safety Symbols and Labels 5
 - 2.2 Before using the pole saw 7
 - 2.3 When using the pole saw 7
 - 2.4 After using the pole saw 8
- 3. Instructions for use 9
 - 3.1 Cleaning, storage, transportation and maintenance 9
 - 3.1.1 Cleaning the pole saw 9
 - 3.1.2 Storage and transport of the pole saw 9
 - 3.1.3 Maintenance of the pole saw 9
- 4. Specifications 10
- 5. Troubleshooting 11
- 6. Protection of the environment 12
- 7. After sales service 12
- 8. Warranty 13
- 9. Declaration of conformity 14

Model: PT75



- | | |
|--------------------------------------|--------------------------------|
| 1. Power Cord | 13. Oil Tank Cap |
| 2. Handle | 14. Guide Bar |
| 3. On / Off Switch | 15. Saw Chain |
| 4. Lock-off Button | 16. Tension Screw |
| 5. Cable Catcher | 17. Spike Bumper |
| 6. Pole | 18. Vents |
| 7. Locking Sleeve for Pole Extension | 19. Harness |
| 8. Pole Extension | 20. Sprocket |
| 9. Side Cover | 21. Rail |
| 10. Cover Insert | 22. Tension Pin |
| 11. Hex Screw | 23. Guide Bar Protection Cover |
| 12. Oil Tank | 24. Multi-tool |

1. Introduction

Thank you for the preference you have given to our product and we would like to congratulate you on the purchase of your new Wolf Creek PT75 pole saw.

We believe that, properly maintained, this unit will provide you with years of trouble-free operation and you can fully appreciate its quality, performance and comfort.

The PT75 pole saw has been designed and manufactured with the utmost care in accordance with strict standards of security, reliability and ease of use that all Wolf Creek products.

Please read this manual carefully. Familiarize yourself with all the components of the pole saw before using it for the first time. Please follow all comments, explanations and instructions in this manual for optimal and safe usage of this product.

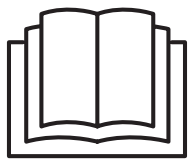
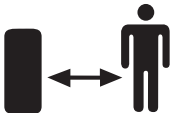
2. Safety Instructions

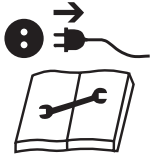
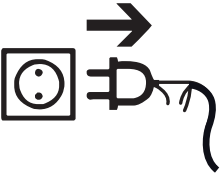
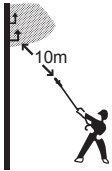
Your pole saw should always be used in accordance with this manual.

2.1 Safety Symbols and Labels

IMPORTANT

Some of the following symbols may be used on your tool, be sure to study them and learn their meaning. Proper interpretation of these symbols will allow you to use the machine more effectively and reduce the risk of accident.

	Danger! Warning! Caution! This symbol indicates a danger, warning or caution. It indicates that the operator security is at stake.
	Read the instruction manual The instruction manual contains information designed to draw attention to the possible problems of safety, the risk of damage to the machine as well as useful tips for startup, operation and maintenance. Please observe all notes, explanations and instructions in this manual extras for optimal and safe use of this product.
	Keep a safe distance The operator is responsible for the safety of others present in the work area of the machine. Never use the pole saw while others, especially children or pets, are nearby.
	Wear protection Wear eye and ear protection when using the pole saw.
	Wear sturdy non-slip shoes

	Wear protective gloves
	Wear protection Wear close-fitting clothing suitable for work gloves, eye and ear protection and non-slip shoes when using the pole saw.
	Maintenance of the machine Remove the plug from the socket before all adjustment operations, cleaning, transport, maintenance or when you leave it unattended.
	Do not expose the unit to rain Never expose the machine to rain or wet conditions. DO NOT use this machine in the rain.
	Damaged power cord Never use an appliance with a damaged or frayed. Remove the plug on the power cord from the electrical outlet immediately.
	Power lines Always beware of the danger from overhead electric-power line, keep a safe distance of at least 10M away from a power line.
	Electrical hazard This device operates with a dangerous voltage.
	Double insulation For your safety, this appliance is equipped with a double electrical insulation.
230V~ 50Hz	Voltage Check that the voltage and frequency indicated on the nameplate affixed to the machine corresponds to those of the electricity supply.
	Recycling This product must not be disposed of with household waste. It should be disposed at a collection site for recycling and recovery of electrical and electronic waste.

2.2 Before Using The Pole Saw

- Study this manual thoroughly.
- Familiarize yourself with the operation of the pole saw and learn to use it properly.
- Never allow others (especially children) who have not read the manual to use the machine.
- If the unit must be given to other people, give them this manual as well.
- Never remove any labels or security elements.
- Check that the voltage and frequency indicated on the nameplate affixed to the pole saw corresponds to the electricity supply.
- Check the chain oil level before each use. Never use the pole saw without any chain oil in the tank or when the amount of chain oil is very low.
- Make sure the guide bar, saw chain, fasteners and safety components are in good condition before each use. Replace excessively worn, damaged or missing parts.
- Do not use the pole saw if the chain side cover is not installed or when the guide bar is damaged or missing.
- To connect the pole saw to the power supply, use only appropriate and compliant equipment in perfect condition.
- Keep the power cord away from the radius of action of the pole saw and make sure it is not subjected to any tension. Move the power cord away from water, heat and sharp edges.
- Do not cut near other electrical equipment. Do not force the power cord.
- Never use the power cord for carrying, pulling or unplugging the machine.
- Do not use the machine if the power on/off switch does not work properly. If necessary, contact your Wolf Creek dealer for any repair.
- Never expose the pole saw to rain or moisture. Never allow water or other liquids to enter the machine.
- Do not operate the pole saw in environments with flammable items such as liquids, gases or dust. The sparks generated by the operation of the machine can cause an explosion.
- Do not start cutting until the work area is clear and clean. Keep the work area clean and tidy to reduce the risk of accidents.
- During the first use, it is recommended that the user be accompanied by an experienced person.

2.3 When Using The Pole Saw

- Operate the pole saw only in daylight or in areas with good lighting.
- The use of power equipment can be regulated. Remember to comply with any legal regulations which may differ from one location to another.
- Do not use the pole saw if you are tired or ill. Also avoid use if you have consumed alcohol or drugs.
- Wear close-fitting and comfortable clothing. Always wear long trousers, sturdy and non-slip shoes and personal protective equipment such as gloves, goggles, a helmet with visor, ear defenders, etc.
- Make sure the trigger switch is turned off before connecting the pole saw plug to the power supply to avoid sudden and unexpected accidents.
- Do not allow anyone to remain in the range of action of the pole saw during use. Keep people, children and animals away from the work area. If working in a group, keep sufficient distance between people.
- Make sure that the handles are clean and dry. When the machine is running, always firmly grip the tube with your left hand and the rear handle with your right hand.
- Always work in a stable and balanced position on firm ground. Do not work on slippery or unstable ground. Choose a safe place to fell plants.
- Hold the pole saw firmly in both hands. Put yourself in a position that allows you to withstand the forces of a backlash. Never let go of the pole saw.

- Do not saw using the tip of the saw guide bar.
- During cutting, some tension from the wood may be released suddenly causing splashes or hazardous releases.
- Never operate a damaged, poorly repaired, poorly fitted or modified machine.
- Do not overload the machine, always use the proper and correct equipment for the job.

WARNING

To reduce the time of exposure to vibration and noise, it is preferable to use the pole saw with frequent breaks and limiting the duration of continuous work.

WARNING

The vibration level during actual use of the tool can differ from the specification depending on how the tool is used. Vibration levels and security measures to protect the operated are based on an estimate of the exposure in actual conditions of use, taking into account all parts of the user such as times when the tool is turned off and when it is running on idle.

2.4 After Using The Pole Saw

- Always unplug the unit from the power supply before performing any service or maintenance.
- Never carry the pole saw until it is unplugged and completely stopped. Hold the machine by the front handle with the guide turned back and the protective sheath inserted.
- Always follow the instructions provided for maintenance. After each use, check the operation of safety devices, setting, tension and condition of parts. Maintain the unit, replacing any worn or damaged parts.
- Always have repairs on the pole saw carried out by a qualified person. For safety reasons, use only original parts or approved parts by Wolf Creek.
- Keep the pole saw clean and always store in a dry area with a protective sleeve inserted. Always store power tools in a place out of reach of children.
- Keep this manual safe and consult it whenever you use the machine.

3. Instructions for use

Unauthorized modification can make the machine dangerous and lead to severe injury during use. Wolf Creek disclaims any liability in case of misuse or failure to comply with the instructions and/or regulations in force.

3.1 Cleaning, Storage, Transportation and Maintenance

IMPORTANT

Before carrying out any work on the pole saw, disconnect the power plug.

3.1.1 Cleaning the pole saw

Regular cleaning after use will ensure the pole saw functions well and reduces the risk of corrosion or stress corrosion.

WARNING

Never submerge the pole saw in water or any other liquid for cleaning.
Never clean the pole saw with a high pressure washer.

After stopping the pole saw and allowing it to cool, remove the cutting debris accumulated under the cover by blowing with compressed air or cleaning with a brush. If necessary, wipe with a soft damp cloth.

3.1.2 Storage and transport of the pole saw

- Store your pole saw in a cool and dry area. Store in a place out of reach of children.
- For long term storage, drain the chain oil tank and lubricate the chain and guide bar before storing away.
- Never carry the pole saw until it is unplugged and completely stopped. Hold the unit by the front handle, the guide bar turned back and the protective sheath inserted.

3.1.3 Maintenance of the pole saw

Lubricate the chain

- This pole saw is equipped with an automatic chain lubrication feature. Regularly check the chain oil level.

Sharpen the chain

- For best results, sharpen the chain regularly at a specialist workshop.

NOTE

Low chain oil level or contact with a dull chain can reduce cutting performance quickly.

4. Specifications

In keeping with our policy of continuous improvement, we reserve the right to change the design and configuration of any product without notice. Thus, the text and images of this manual and packaging are for illustrative purposes only and may not under any circumstances be the basis for a legal claim.

Model	PT75
Rated Voltage	230-240V / ~ 50Hz
Nominal Consumption	750W
No-load Speed	6000 min ⁻¹
Guide Bar Length	200mm
Cutting Length	175mm
Variable Height Adjustment	From 1.90m - 2.72m
Working Height	Up to 4.5m
Chain Speed	11 m/s
Chain Oil Tank Capacity	110ml
Weight (Inc. Bar & Chain)	3.4kg
Chain Type	91PJ033X
Guide Bar Type	080SDEA041
Class of Protection	Double Isolation Class II
Sound Pressure Level EN ISO 11680-1:2008	90 dB(A)
Guaranteed Sound Power	108 dB(A)
Vibration EN ISO 11680-1:2008	2.7 m/s ² K = 1.5 m/s ²

5. Troubleshooting

Problem	Cause	Solution
The machine does not start / work	There is no current	Check the power source. If necessary, change the source.
		Check the condition of both the power cord and plug. If they are damaged, change them.
	The carbon brushes are worn	Please contact your Wolf Creek dealer
	The switch is faulty or defective	Please contact your Wolf Creek dealer
The machine works intermittently	The power cord is damaged	Please contact your Wolf Creek dealer
	The switch is faulty or defective	Please contact your Wolf Creek dealer
The chain is dry	No chain oil in the tank	Fill chain oil tank
	The tank cap vent is clogged with oil	Wipe the top of the chain oil tank
	The oil flow channel is clogged	Drain the chain oil tank and clean the compartment under the lid
Chain derails from the guide bar, generates vibration or won't correctly saw	The chain is too loose	Tension the chain
Difficult to rotate the chain	The chain is too tight	Re-adjust chain tension
Chain heats up enormously	No chain oil in the tank	Fill chain oil tank
	The chain is not getting lubricated sufficiently	Check the flow of oil. If necessary, unclog the oiler.
	The chain is dull or worn	Sharpen the chain or change the chain

6. Protection of the environment

To act for the protection of the environment, we recommend taking into consideration the following:

- Use a biodegradable lubricating chain oil
- Use a funnel to avoid spilling oil when filling
- Take care of your pole saw regularly and replace damaged parts
- When your machine is at the end of its life, dispose of it correctly



WASTE DISPOSAL

According to the European Directive on the disposal of waste electrical and electronic equipment, power tools that are no longer usable must be collected and follow a path of appropriate recycling.

Do not dispose of electric tools together with household waste.

7. After sales service

For more information or for after sales service, contact Wolf Creek using any of the contact details below. Use only original parts approved by Wolf Creek.

Telephone

0151 548 5500

Email

contact@wolfcreekttools.co.uk

Website

www.wolfcreekttools.co.uk

8. Warranty

Wolf Creek ensure the replacement of all defective parts by a fault or a manufacturing defect for a period of 12 months from purchase date. In no event shall the warranty give rise to a refund of the equipment for any direct or indirect misuse of the machine than that of its intended purpose.

Wolf Creek accepts no liability for any damaged caused to persons or property from using this machine.

The warranty does not cover:

- Abnormal or improper use of the pole saw
- Lack of maintenance
- Lack of oil
- Using the pole saw for commercial or rental purposes
- Installation, adjustment and commissioning of the pole saw
- Damage or loss occurred during transportation or movement
- Damage due to shock or fall
- Shipping and packaging material
- Wear and tear items (i.e. guide bar, chain, lubricating oil, etc.)

The warranty will be invalidated if:

- Changes are made to the machine without permission of Wolf Creek
- Pole saw is misused, not in accordance with the instructions and/or regulations
- Use of parts not being original or approved by Wolf Creek

9. Declaration of Conformity

We, the undersigned,

Wolf Creek, Equipmart Ltd, Birchill Road, Knowsley L33 7TD United Kingdom



Declare that

The following products are appropriate and consistent with the basic Health and Safety EC directives (see point 4), based on their design and type as circulated by us.

This declaration relates exclusively to the machinery in the state in which they were placed on the market and excludes added components and/or operations carried out subsequently by the end user.

1. Description: Electric Pole Saw

2. Model: PT75

3. EC Directives: Directive machine 2006/42/EC

2004/108/EC on EMC

2000/14/EC the emission on noise amended by directives 2005/88/EC

4. Harmonized standards: EN55014-1 :2006+A1

EN61000-3-2 :2006+A1+A2

EN61000-3-3 :2008

EN60745-2-13 :2009

EN60745-1/A11 :2010

EN55014-2/A2 :2008

EN ISO 11680-1 :2011

5. Responsible for documentation: Gavin Jiang

A handwritten signature in black ink that reads 'Gavin Jiang'.

Guaranteed sound power: 108 dB(A)

Sound pressure level: 90 dB(A)

Conformity assessment body:

JIANGSU TÜV Product Service Ltd, Shanghai Branch, N°88 Hengtong Road, Shanghai 200070 P.R.China

TÜV SÜD Product Service Gmbh - Zertifizierstelle - Ridlerstrabe 65 - 80339 München - Germany

Date: 2013-07-01