

6. Maintenance


1. Cleaning the Tank

After use or when the tank is full of dust (which is accompanied by a noticeable loss of suction), the tank must be emptied.

- a) Unfasten the locking latch and remove the vacuum head.
- b) Remove the filter and clean out the dust from the tank.
- c) Replace the filter and vacuum head, and fasten the locking latch.

2. Cleaning the Filter

- a) Remove the filter.
- b) Gently wash in clean warm water.
- c) Allow to dry completely before refitting.

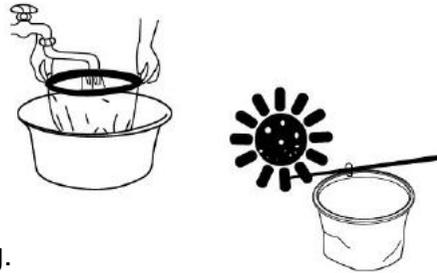

7. Technical

Model	Power	Voltage	Frequency
KV30B	1400W	220v - 240v	50Hz / 60Hz

8. Help


Call Kiam Power Products on 0151 548 5500 for technical assistance or visit our website www.kiamproducts.co.uk



KV30B WET & DRY VACUUM CLEANER WITH BLOWER FUNCTION

Instructions Manual

Read instructions manual before use!

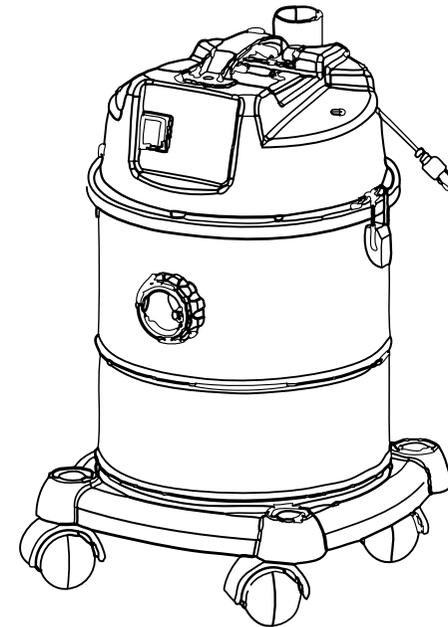


Equipmart Ltd
Kiam House
Birchill Road
Knowsley Ind. Park North
Merseyside
L33 7TD
United Kingdom





1. Product Features

- 1) Vacuum cleaner for wet and dry applications.
- 2) Storage points on the base for easy access to accessories.
- 3) Hose outlet for blowing function.

2. Part Names

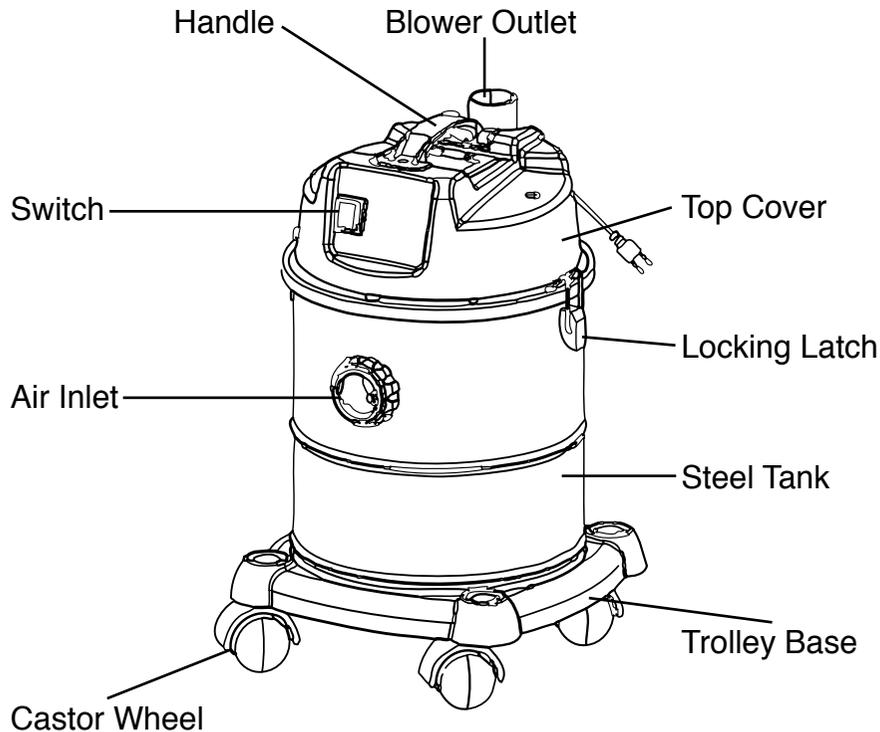

- 1) Insert the plug into the power supply socket (240 volt).
- 2) Press the switch to the on position to start the vacuum motor.
- 3) Adjust the airflow by pushing the sliding block forward / backward.

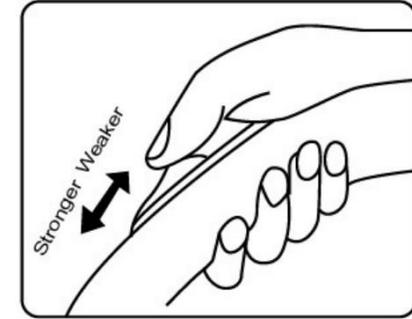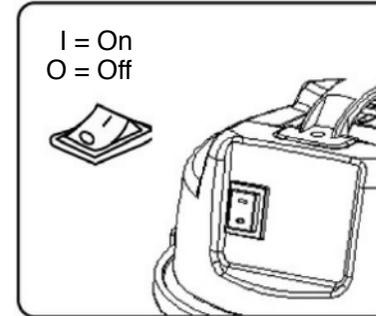

5. Protective Safety Functions


The KV30B is equipped with several protective safety functions.

- 1) When the tank is full, the vacuum will lose suction and emit a noise to indicate the motor is under strain. Turn off and unplug the vacuum cleaner immediately, then empty the tank and reassemble according to instructions.
- 2) Should the vacuum cleaner be turned on its side, immediately turn the machine off. Right the vacuum cleaner, then turn it on again.
- 3) If the vacuum cleaner loses suction or emits sounds, turn it off and empty the tank before continuing to use. Also check for any blockages in the hose and tubes.


4. How To Operate

Connection


To connect the vacuum hose into the machine, insert the hose connector into the air inlet, make sure it is securely fastened.

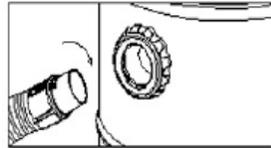


To remove the vacuum hose from the machine, press the release button on the hose connector and pull the connector out.

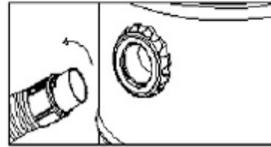




To use the blowing function, insert the hose connector into the blower outlet, make sure it is securely fastened.

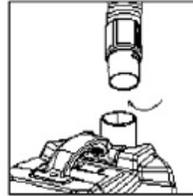

Connect all accessories as pictured below.

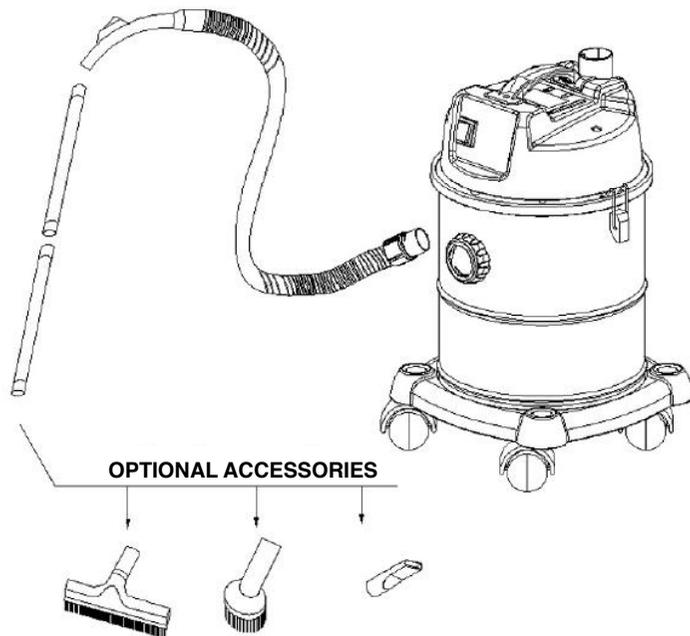

Accessories

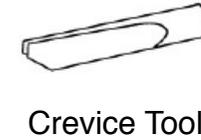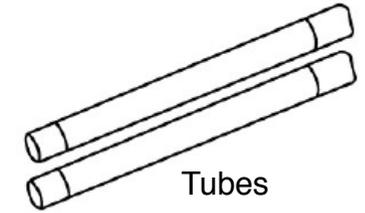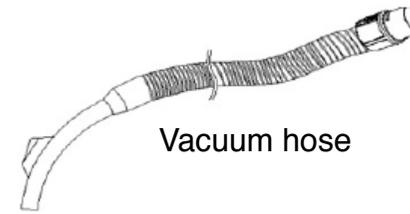

Use the correct accessories according to the job.

Dust brush for bookshelves, windows, tables, etc.




Wide floor brush for hard surface, carpet, etc.



Crevice nozzle for crevices, corners, etc.




Blower outlet for blowing dust away.

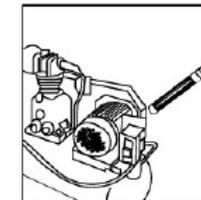


3. For Safe Operation

Check before operation that the local power supply is the same as the specification on the rating label (240v).


Do not use the machine in a combustible and explosive area in case the motor spark creates ignition of fire and/or explosion.

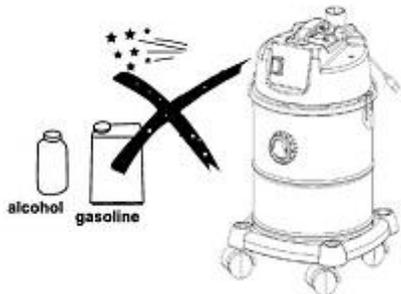

Do not block the air inlet mouth as this will cause the motor temperatures to increase and cause damage to the motor.

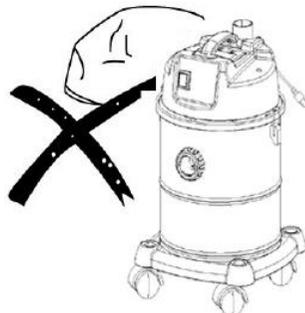


Do not pick up combustible and/or explosive objects such as cigarettes, petrol, etc.

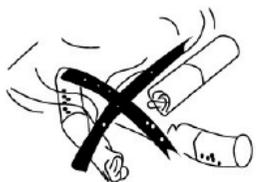


Do not pick up any sharp objects.



Do not pick up objects which easily attach on to the filter such as calcareous powder, fine graphite powder, etc. that will block the ventilation causing damage to the motor.

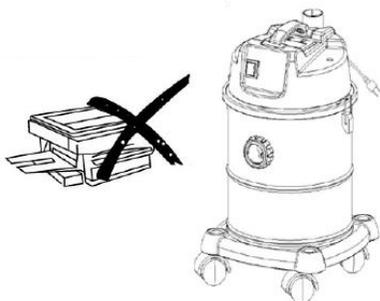


Do not overturn the machine in case water goes into and damages the motor.

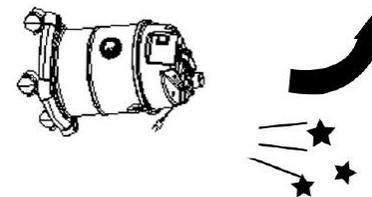

Warning: If water is emitted from the blower outlet, do not overturn the machine when repairing as water may get into and damage the motor.

Turn off the machine and remove the plug each time after using or when carrying out maintenance.

Keep the machine away from strong sunlight and high temperature areas in case of plastic distorting.

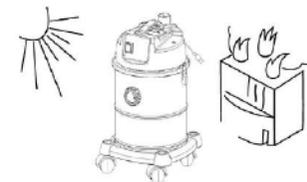

This machine is not to be used by children, persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they are under supervision.

Children must be supervised and kept away from the machine to ensure they do not play with it.

If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid any potential hazards.

The power plug must be removed from the socket outlet before cleaning or maintaining the machine.