



Audio System S7 User Manual



BLUETOOTH 3" WEATHER RATED SPEAKER AND AMPLIFIER SYSTEM

1. Features

Bluetooth Audio
FM radio

2. Package content

Please check whether the accessories are complete after receiving the goods.



Host



Power cord



Antenna



Hex Screw Driver



7/8 in



1 in



1-1/4 in



Nylon tie



UpperBracket



LowerBracket



M8x30 Screw



Non-slip Meson

Host x1. Power cord x1.
M8 Hex Screw Driver x1.
Rubber pad x6. Nylon tie x10.
Antenna x1. M8x30 Screw x2.
Non-slip Meson x2.
UpperBracket x2.
LowerBracket x2.

3. Wiring

First the red end of the power cord is connected to the positive battery of the power supply, while the black end is connected to the negative. Then connect the power cord to the host.



The audio wiring should not be close to the high-voltage package and spark plug.

4. Instructions

1. PWR knob
Power On/Off
Volume adjustment
Pause/Mute



2. MODE knob
Mode conversion
Up and down songs/
up and down stations

PWR knob

- 1.Press the knob for a short time to turn on, and press and hold for about 2 seconds to turn off.
- 2.In the radio mode, press the knob shortly to mute, and then press the knob shortly to release the mute.
- 3.In Bluetooth mode, press the knob shortly to pause, and then press again to release the pause playing.
- 4.Rotate clockwise to turn up the volume, and rotate counterclockwise to turn down the volume. When the volume is turned to the maximum, there will be a prompt tone.

MODE knob

- 1.Press the knob shortly to switch the radio/Bluetooth mode.
- 2.In the radio mode, clockwise rotation is to search for a station to the high end, and counterclockwise rotation is to search for a station to the low end.
- 3.In Bluetooth mode, clockwise rotation is downward music selection, and counterclockwise rotation is upward music selection.
- 4.Turn off or turn on the modal beep

Click the mode button 3 times in a row to turn off the mode prompt sound.

On the premise of turning off the mode prompt sound, click the mode button 3 times in a row to turn on the mode prompt sound.

Bluetooth connection


To pair and connect your bluetooth device to the S7,enter the MOD knob until you hear the voice prompt "Bluetooth mode", which means that it has turned to Bluetooth mode.At this time, you can use your bluetooth device to connect with Bluetooth.After the connection is successful, you will hear the prompt tone of "Ding Dong".

5. Installation Instructions



1

Screw on the bottom M8 screws, plus the appropriate shims.

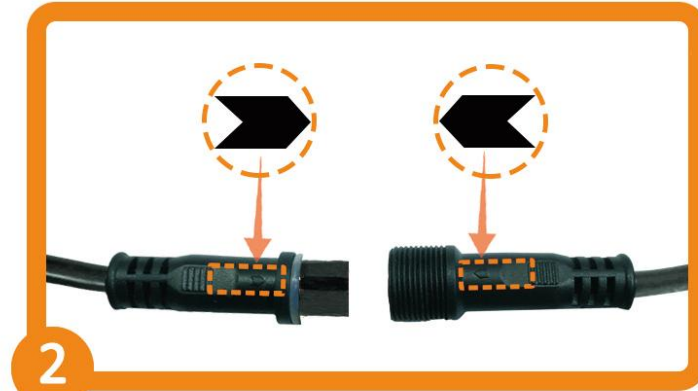

2

Mounting position of calibration bracket.



3

Connecting the antenna.



4

Connecting the power cord.

6. Technical Parameters

Operating voltage-----10.5V-16V

Standby current-----<2mA

THD-----<1%

S/N----->75dB

Frequency response -----70Hz-15KHz

FM radio frequency range-----87.5-108MHz

Bluetooth connection distance----->15m

K SPEAKER AUDIO

www.kspeaker.com