

Alpha Cruncher

Introduction

The Mini Effect Chain series Alpha Cruncher is a compact effects pedal chain that combines a classic amp distortion with two go-to effects. It is a perfect fly gig solution for guitarists.

●Three modules in one

The Alpha Cruncher starts with a wide-range British high gain amp distortion with volume, gain, and tone controls, perfect for classic rock styles. A dreamy chorus is next with extended mod controls. Third in line is an analog voiced delay, with rich echo feedback.

● Easy, flexible controls

Each module is fully adjustable with mini knob control. The knobs are fitted with grip-friendly rubber rings so you can tweak your tone on the fly.

Carefully selected components
 The Alpha Cruncher pedal was designed and manufactured with quality components for exceptional sound and sturdy performance. The aluminum alloy casing and all metal footswitches ensure road

- Convenient compact size
- Three must-have modules in one stompbox chain
- Reliable aluminum alloy casing and all metal footswitches

DISTORTION

VOL Knob: Adjusts the output level.

Footswitch: Turns the effect on/off.

GAIN Knob: Adjusts the amount of distortion.
TONE Knob: Adjusts the effects tone.

Power Requirement: 9V DC center negative Current consumption: 70mA Dimensions: 196x64x452mm Weight: 320g Material: Aluminum alloy

Owner's Manual

HIPHO CIUNCHEI

折痕处

CHORUS

♠ LEVEL Knob: Adjusts the chorus volume.

Reports Footswitch: Turns the effect on/off.

RATE Knob: Adjusts the chorus speed.
 DEPTH Knob: Adjusts the chorus soun depth.

● OUT Jack: 1/4" mono audio jack, for connecting to amplifier

- (a) IN Jack: 1/4" mono audio jack, for connecting instrument.
- 9V DC Jack: Use 9V DC regulated with AC adapter (500mA barre positive, center negative).

Always turn off the power before connecting or disconnecting. Make sure to disconnect all

cables and AC adapter before moving the unit. This will help prevent malfunction and damages.

Power SupplyAlways use a DC 9V center negative AC adapter. Use of an adapter other than that specified could damage the unit or cause malfunction and pose a safety hazard.

Always connect the AC adapter to an AC outlet that supplies the rated voltage required by the

Disconnect the AC adapter from the AC outlet when during lightning storms or not using the

- **Environment Considerations**Avoid using the unit in any of the following conditions that could cause malfunction:
- Under direct sunlight

Electrical Interference

Magnetic fieldsNear heaters and other heat sources

READ CAREFULLY BEFORE PROCEEDING

Sandy or dusty places
 Places that are extremely humid or exposed to splashing water
 Places with lots of vibrations

Devices that are very susceptible to interference or that emits powerful electromagnetic waves (e.g. radios and TVs) should not be placed near this unit, as interference could occur. Electromagnetic interference could cause malfunction and could corrupt or destroy data.

Always operate this unit at a suitable distance from these devices.

HandlingDo not apply excessive force to the switches and other controls, exposing the unit to strong impacts, which could cause it to break. Do not put foreign objects or liquids into the unit.

Never open the case or attempt to modify the product in any way since this can result in

damage to the unit. Clean only with a soft, dry cloth.



技术要求:

DELAY

G Footswitch: Turns the effect on/off.

120g白色书纸, 195*180mm, 四色印刷 (红色虚线为折痕,不做印刷)

LEVEL Knob: Adjusts the delay volume.
 FEEDBACK Knob: Adjusts the amount of feedback (number of repeats).
 DELAY Knob: Adjusts the delay time (Max. 1000ms).

折起朝外