

# PUSH

## Ultra Low Friction Fork Seal Installation Addendum All Forks

Due to the material usage and nature of the dual lip design of your new PUSH ULF seal kit, we recommend that you remove the outer retaining springs to ease installation as outlined in this guide.

Please refer to your fork manufacturers service manual for complete installation instructions of new fork seals, safety guidelines, and warnings regarding your specific product. We have also provided manufacture links to these instructions at:

[www.pushindustries.com/pages/product-instructions](http://www.pushindustries.com/pages/product-instructions)



### **2015 FOX 36 Fork Owners**

Please note that on some 2015 FOX 36 forks that there can sometimes be a small material burr that can cause your PUSH ULF seal to not seat completely into the lower legs. This can easily be removed by using a small piece of 400grit sand paper around the inside upper edge of the fork lowers. No paint removal is necessary.


1520 Taurus Court, Loveland, CO 80537

Ph. (970) 278-1110, [info@pushindustries.com](mailto:info@pushindustries.com)




# PUSH

## Ultra Low Friction Fork Seal Installation Addendum All Forks

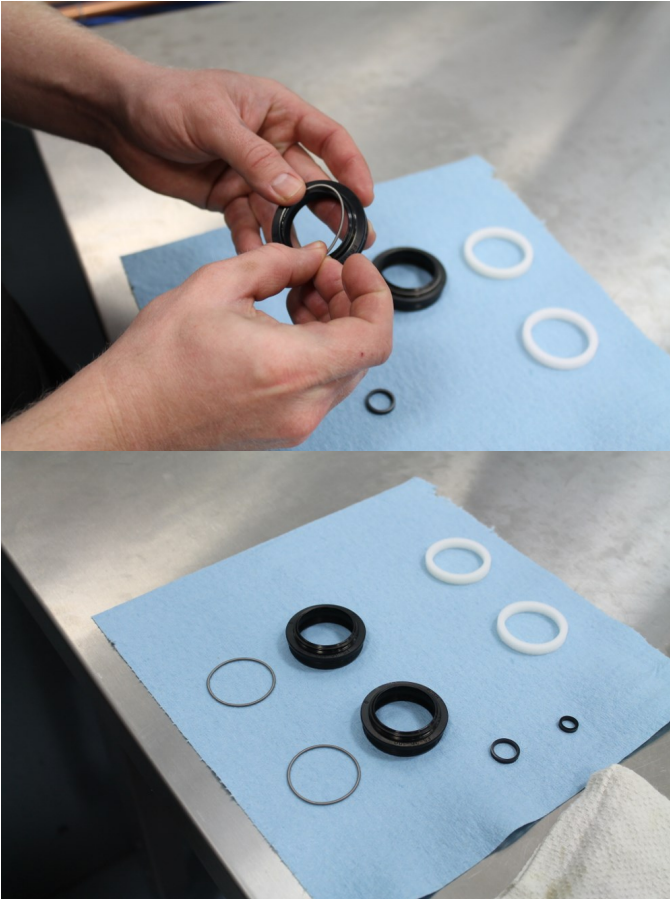

### Step 1.

Gently remove the outer retaining springs from the fork seals. This will keep the springs from being damaged during installation into the lower legs, as well as ease the installation onto the fork tubes.

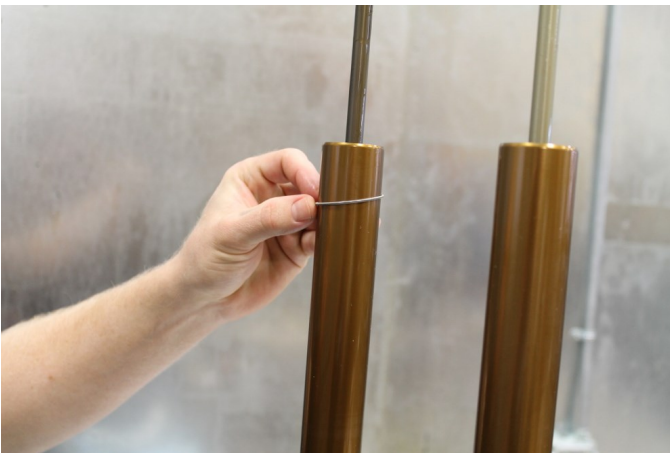

### Step 2.

Slide the fork seal retaining springs onto the inner fork tubes.

1520 Taurus Court, Loveland, CO 80537

Ph. (970) 278-1110, [info@pushindustries.com](mailto:info@pushindustries.com)



# PUSH

## Ultra Low Friction Fork Seal Installation Addendum All Forks



### Step 3.

Using a seal driver, install fork seals into thoroughly cleaned and dry lower legs. It may be necessary to seat the seal completely using a rubber mallet.



### Step 4.

Gently rock the lower legs onto the inner tubes being careful not to allow the seal lip to fold under itself.

1520 Taurus Court, Loveland, CO 80537

Ph. (970) 278-1110, [info@pushindustries.com](mailto:info@pushindustries.com)



# PUSH

## Ultra Low Friction Fork Seal Installation Addendum All Forks



### Step 5.

Gently use your fingers to slide the retaining springs back up into the outer groove of the fork seal. Be sure to check that the spring is seated into groove the full 360 degrees.

1520 Taurus Court, Loveland, CO 80537

Ph. (970) 278-1110, [info@pushindustries.com](mailto:info@pushindustries.com)

