

3SIXT



SOUNDBRICK

Wireless speaker

3S-0951

USER GUIDE

IMPORTANT SAFETY INFORMATION

Read the following recommendations before using the SoundBrick Wireless Speaker:

- Before recharging the SoundBrick through a wall outlet, make sure wall charger outlet voltage is 5V 1A;
- Make sure to use the Micro USB Charge Cable that came with this product, other cables may damage your SoundBrick;
- Do not drop, knock, disassemble or attempt to repair the SoundBrick. Do not immerse or put the SoundBrick in water. Store the SoundBrick in a dry place;
- Do not expose the SoundBrick to excessive heat including direct sunlight and fire;
- Do not use the SoundBrick near explosive gases or flammable materials;
- Do not burn or incinerate the SoundBrick;
- Do not expose the SoundBrick to harsh chemicals;
- Keep the SoundBrick away from young children;
- Putting anything in the SoundBrick's input or output ports other than the supplied Micro USB Charge Cable or your device's charging cable will cause damage or short out the SoundBrick;
- To extend the SoundBrick's charging life, do a complete recharge of the SoundBrick every four months;

PLEASE NOTE: The SoundBrick is only WATER RESISTANT. It has a level 6 water ingress rating that means it can sustain high pressure water jets for 30 minutes. It cannot be fully submerged in water.


Welcome

This User Guide will give you the information on how to enjoy your 3SIXT SoundBrick Wireless Speaker.



For more information and support,
visit www.3sixtgear.com

GETTING TO KNOW YOUR SOUNDBRICK WIRELESS SPEAKER

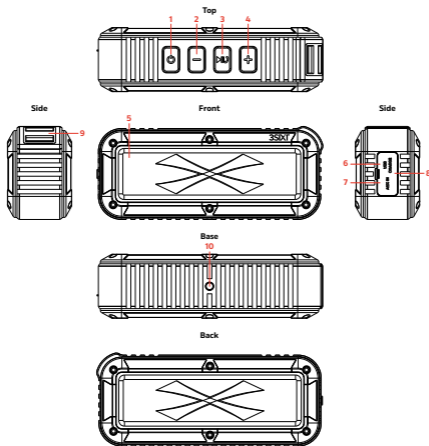

Buttons, Ports & Lights

- | | |
|--------------------------|---------------------|
| 1- Power Button | 6- Micro USB Port |
| 2- Volume/Track (-) | 7- AUX Port |
| 3- Multi Function Button | 8- Dust Cover |
| 4- Volume/Track (+) | 9- Wrist Strap Hook |
| 5- Indicator Light | 10- Mounting Screw |

ACCESSORIES

- 1) SoundBrick Wireless Speaker
- 2) Micro USB Charge Cable
- 3) 3.5mm AUX Cable
- 4) User Guide

HIGHLIGHTS

The 3SIXT SoundBrick Wireless Speaker can be connected to Bluetooth® devices such as smart phones, tablets and computers to playback your favourite music via streaming services or through your own music library. Thanks to the powerful speakers and passive woofer system the SoundBrick delivers crisp full stereo sound. The SoundBrick can sustain up to 8 hours of continuous usage. The SoundBrick is the perfect companion for you to use, in the park, while camping, at the beach...anywhere!

WIRELESS CONNECTION

Turn the SoundBrick on by pressing the power button for several seconds, then the blue LED (5) will illuminate and a tone will be heard.

CONNECT TO MOBILE PHONES/TABLETS/COMPUTERS

Activating Bluetooth® on your device:

- 1) Go to your device Bluetooth® settings and scan for new Bluetooth® devices;
- 2) Search for 3SIXT 3S-0951 and once found, click on it to pair with the SoundBrick;

- 3) If your device asks for a pairing code, please enter '0000' and confirm it.
- 4) After successful pairing, the SoundBrick will make a sound and the LED light (5) stays blue.

Note: Pairing time varies with different devices. The SoundBrick only needs to be paired the first time and it will automatically connect when the device is back in range or is turned back on (the SoundBrick remembers the last 8 paired devices' names).

AUX AUDIO-IN CONNECTOR

The SoundBrick also features 1 x AUX audio-in port (7). Simply connect the SoundBrick with your device via the 3.5mm jack audio cable. The green indicator light (5) will illuminate. Now you are ready to play music via the wired AUX connection.

LOW POWER INDICATOR

The SoundBrick will make a voice prompt to remind you to charge if the battery is low (battery <10%). You will need to charge the SoundBrick regularly to maintain a full charge.

CHARGING AND COMPUTER CONNECTION

Connect the Micro USB Charge Cable to a USB 5V 1A charger to recharge the SoundBrick's internal battery via the Micro USB port (6). Whilst charging, the LED light will illuminate Red. Once Charging is complete the red LED light (5) will turn off. This indicates that the SoundBrick is fully charged and ready for use.

TECHNICAL SPECIFICATIONS

Audio input connector	3.5 mm
Ingress Rating	IPX6 Water Resistant
Battery	Lithium Ion 3.7v/1500mAh
Wireless Protocol	BT v4.1
Distance	Up to 10m
Input	5V 1A
Audio Output	5W Speaker x 2
Unit	40 mm x 2
Playback Time	Up to 8 hours
Recharge Time	5-6 hours
Dimensions	174.5 x 71 x 50mm
Weight	370g
Frequency Range	160Hz-20KHz
DistortionTHD	1%
Working Temperature	Temperature: 0°C - 40°C / Humidity: 0% -85%
Storage Temperature	Temperature: -30°C - 60° C / Humidity: 0% -90%

Please Note: We do our best to reflect accurate specifications, however periodic updates and changes may occur after this manual was printed. We reserve the right to change the parameters without prior notification.

GENERAL OPERATION

Powering On/Off	Long press the Power Key (1) to power on/off.
Answering a call	During an incoming call, short press the MF key (3) to answer the phone, short press again to end the call and return to music.
Ending or refusing a call	Short press 'MF' key (3) to end the call or long press 'MF' (3) to refuse the call.
Play/Pause	Short press 'MF' key (3) to adjust.
Volume - or +	Short press '+/-' (4 & 2) to adjust.
Next/Previous	Long press '+' (4) to go to the next track. Long press '-' (2) to go to the previous track.
Disconnect wireless connection	Long press '+' (4) and '-' (2) to disconnect the current wireless connection. The SoundBrick will then start searching for a new device.

Please note: When in wireless mode if the 3.5mm AUX cable is inserted, the SoundBrick will switch to 'line in' status automatically. Please turn off the SoundBrick when not in use to prevent power drain.

LED STATUS

Wireless Status

Blue light (5) flashes	Pairing mode
Blue light (5) steady	Connected

Line in Mode

Green light (5) illuminates	Line in mode
------------------------------------	--------------

Charging Status

Red light illuminates when connected to a power source

Red light (5) illuminates	Charging
----------------------------------	----------

TROUBLE SHOOTING

1. My device can't find any new Bluetooth® devices

- a) Make sure the SoundBrick has entered pairing mode.
- b) Ensure the SoundBrick is within the effective working range (10m).

2. Bluetooth® devices cannot pair

- a) Make sure your device allows new Bluetooth® connections.
- b) Make sure the pairing password entered is '0000'.
If you are using a Bluetooth® transmitter device, please ensure the responding password of your Bluetooth transmitter supports the '0000' code.

3. My SoundBrick does not play music or answer calls when it is connected to a Bluetooth® device

- a) Make sure your Bluetooth® device supports A2DP and HSP profile.
- b) Ensure your Bluetooth® enabled device is within the effective working range.

4. When paired with my computer, Windows asks for a new driver. Can you supply?

Sorry, we do not supply drivers. Please visit your PC manufacturer's website for the latest driver updates.

5. Is the SoundBrick waterproof?

No, the SoundBrick is only water resistant.

It has a level 6 water ingress rating that means it can sustain high pressure water jets for 30 minutes. It cannot be fully submerged in water.

AUSTRALIA & NEW ZEALAND TWO YEAR WARRANTY

3SIXT will replace the faulty product at no cost to the consumer. The warranty does not extend to any consequential damages or costs that may be incurred and is valid for TWO YEARS from date of purchase. The consumer must return the faulty product to the retail store it was purchased from together with proof of purchase. The benefits to the consumer under this warranty are in addition to other rights and remedies of the consumer under Australian and New Zealand laws in relation to the goods to which the warranty relates. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The warranty is provided by:

Australia: Cellnet Group Limited

59-61 Qantas Dr, Eagle Farm, QLD 4009

Phone: 1300 CELLNET (1300 235 563)

Email: info@cellnet.com.au

New Zealand: Cellnet Limited

10a Orbit Dr, Rosedale, Auckland 0632

Phone: 0800 CELLNET (0800 235 563)

Email: info@cellnet.co.nz

EN

3SIXT PRODUCT SUPPORT

For more information, visit www.3sixtgear.com/support

DE

3SIXT PRODUKT-SUPPORT

Bitte besuchen Sie www.3sixtgear.com/support

FR

ASSISTANCE PRODUIT 3SIXT

Veuillez consulter www.3sixtgear.com/support

ES

ASISTENCIA TÉCNICA DEL PRODUCTO 3SIXT

Visite www.3sixtgear.com/support

IT

ASSISTENZA TECNICA 3SIXT

Si prega di visitare www.3sixtgear.com/support

3SIXT

Copyright © 2017.

3SIXT and its logo are trademarks of Cellnet Group Limited
in Australia & New Zealand. All Rights Reserved.

The Bluetooth® word mark is a registered trademark owned by Bluetooth SIG, Inc.

CELLNET GROUP LIMITED

59-61 Qantas Drive, Eagle Farm, QLD 4009 Australia.

MADE IN CHINA.

3SIXTgear.com

3S-0951



For more information, visit

www.3sixtgear.com

or visit www.3sixtgear.com/support



3SIXTgear