

Operating Instructions

EN | 3S-1510 | 3SIXT JetPak PowerMix PD 10,000mAh

INCLUSIONS:

3SIXT JetPak PowerMix PD Power Bank
Charging Cable
Operating Instructions
Fabric Storage Bag

WARNINGS

- Read all instructions and warnings before using this product. Improper use of this product may result in product damage, excessive heat, toxic fumes, fire or explosion, for which damages you ("Purchaser") and not 3SIXT ("Manufacturer") are responsible.
- Do not store the accessory in a high-temperature environment, including heat caused by intense sunlight or other forms of heat (heaters etc.).
- Do not place the device in fire or other extremely hot environments.
- Do not disassemble or modify this accessory in any manner.
- Do not attempt to power this device using any other method than as instructed explicitly in this user guide.
- Be sure to unplug cables from the battery when finished departing your vehicle. Failure not to follow this warning is the sole responsibility of the purchaser, who agrees to indemnify the Manufacturer ("3SIXT").
- This accessory is intended for adults and not minors. Failure not to follow these warnings is the sole responsibility of the purchaser, who agrees to indemnify the Manufacturer ("3SIXT") for any unintended use/misuse by a minor.
- All products must pass through a thorough quality inspection at the time of manufacture. However, if you find that your device is excessively hot, is found to be deformed outside its regular appearance or is emitting smoke, immediately stop using the device and contact 3SIXT.




www.3sixtgear.com
or visit www.3sixtgear.com/support



3SIXTgear

NAME PARTS

- 1. LCD Power Level Percentage
- 2. QC3.0 USB-A Output
- 3. Type-C PD Input / Output
- 4. Micro USB Input
- 5. Power On/Off
- 6. 15W Qi Charging Pad

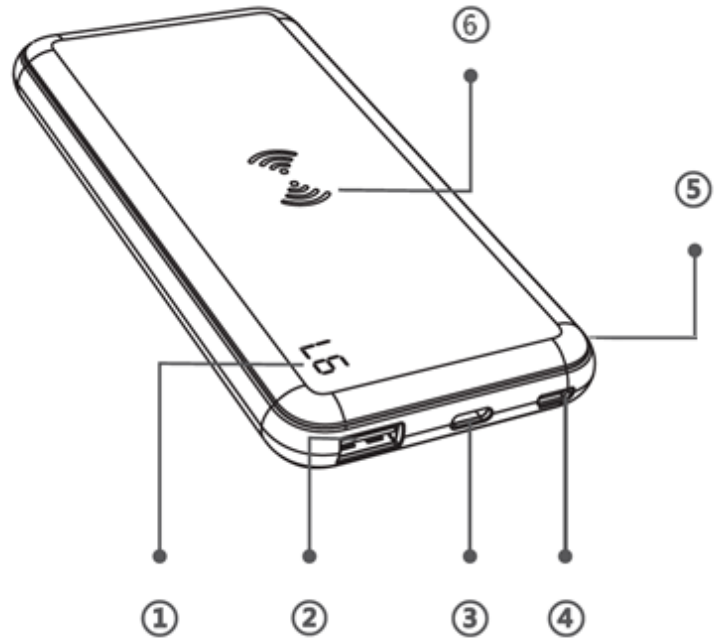

OPERATION

Charging your Device with a Cable

- 1. Locate the desired output port (2 or 3) on the JetPak PowerMix Power Bank.
- 2. Make sure that the selected output is clear of obstruction (dirt/dust etc).
- 3. Locate the desired charging cable you want to charge your device with (Type-C/Micro USB/Lightning/30 Pin etc).
- 4. Plug the cable of choice into the desired output port (2 or 3) making sure to lightly push it in (do not push with excessive force).
- 5. Plug the cable connector (Type-C/Micro USB/Lightning/30 Pin etc) into your device and push it in making sure it is connected (do not push with excessive force).
- 6. Push the Power on/off button (5). The device will then commence charging. A visual/audible notification will be made via your device if off silent mode.
- 7. To stop charging simply remove the cable from device or the 3SIXT JetPak PowerMix Power Bank from the cable and charging will discontinue.

Charging your Device Wirelessly

- 1. Locate the Qi charge pad on your 3SIXT JetPak PowerMix Power Bank (6).
- 2. Press the power on/off button (5) once.
- 3. Check that the LCD power level percentage turns on (1).
- 4. Lay 3SIXT JetPak PowerMix Power Bank on a flat/stable surface and place your Qi wireless compatible device charging side down on top of the Qi charging pad (6). The device will then commence charging. A visual/audible notification will be made via your device.
- 5. To stop charging simply remove the device from the Qi Wireless Charging Pad (6).



www.3sixtgear.com
or visit www.3sixtgear.com/support



Charging Up JetPak PowerMix Power Bank

1. Locate either the Micro USB or Type-C inputs (3 or 4) making sure they are clear of dirt/dust.
2. Locate your included USB-A to Type-C charge cable.
3. Connect the USB-A connector end into your wall charger.
4. Connect the Type-C cable end into the Type-C input (3) on the 3SIXT JetPak PowerMix Power Bank. If charging with a BYO Micro USB cable, please connect the Micro USB cable end into the Micro USB input (4).
5. Switch wall charger power source on and you will see the LCD percentage readout flashing (1).

SPECIFICATIONS

Item/Model Number:	3S-1510
Capacity:	10,000mAh
Battery Type:	Lithium Polymer
Input 1 (Type-C PD 18W):	5V/3A 9V/2A 12V/1.5A
Input 2 (Micro USB):	5V/2A 9V/2A
Output 1 (USB-A):	5V/3A 9V/2A 12V/1.5A
Output 2 (Type-C PD 18W):	5V/3A 9V/2A 12V/1.5A
Output 3 (Wireless):	5W/7.5W/10W/15W
Total Output:	3A
Wireless Launch Distance	4~8mm
Efficiency	≥82
Recharge Time*:	2.5 ~ 5 Hours
Smartphone Charges**:	Approx 2 Full Charges
Tablet Charges***:	Up to 1 Full Charge
Operating Temperature:	-10°C ~ +40°C
Product Dimensions (H*W*D):	143mm x 71mm x 15mm
Product Weight:	220g

* Depending on the charging source technology (2A/PD/QC3.0 etc)

** Based on iPhone 11 battery capacity

*** Based on iPad Pro 11" battery capacity



www.3sixtgear.com
or visit www.3sixtgear.com/support



3SIXTgear