

Operating Instructions

EN | 3S-1667 – 3SIXT Infinity Bluetooth Speaker

INCLUSIONS:

Infinity Speaker
Power Pack + Wall Charger
Aux Cable
3SIXT Global Warranty Document

WARNINGS

- Read all instructions and warnings before using this product. Improper use of this product may result in product damage, excessive heat, toxic fumes, fire or explosion, for which damages you ("Purchaser") and not 3SIXT ("Manufacturer") are responsible.
- Do not store the accessory in a high-temperature environment, including heat caused by intense sunlight or other forms of heat (heaters etc.).
- Do not place the device in fire or other extremely hot environments.
- Do not disassemble or modify this accessory in any manner.
- Do not attempt to power this device using any other method than as instructed explicitly in this user guide.
- Be sure to unplug cables from the battery when finished departing your vehicle. Failure not to follow this warning is the sole responsibility of the purchaser, who agrees to indemnify the Manufacturer ("3SIXT").
- This accessory is intended for adults and not minors. Failure not to follow these warnings is the sole responsibility of the purchaser, who agrees to indemnify the Manufacturer ("3SIXT") for any unintended use/misuse by a minor.
- All products must pass through a thorough quality inspection at the time of manufacture. However, if you find that your device is excessively hot, is found to be deformed outside its regular appearance or is emitting smoke, immediately stop using the device and contact 3SIXT.

© 2020 3SIXT. All rights reserved.

This product may be covered by one or more patents or pending patent applications. 23/136 Keys Road, Cheltenham VIC 3192 Australia.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

MADE IN CHINA




www.3sixtgear.com
or visit www.3sixtgear.com/support



3SIXTgear

NAME PARTS

1. Touch Control Volume Adjustment Bar
2. Built-In Mic
3. Working Status LED
4. BT/Call/Pause Button
5. Power On/Off
6. Aux input
7. Charging Input

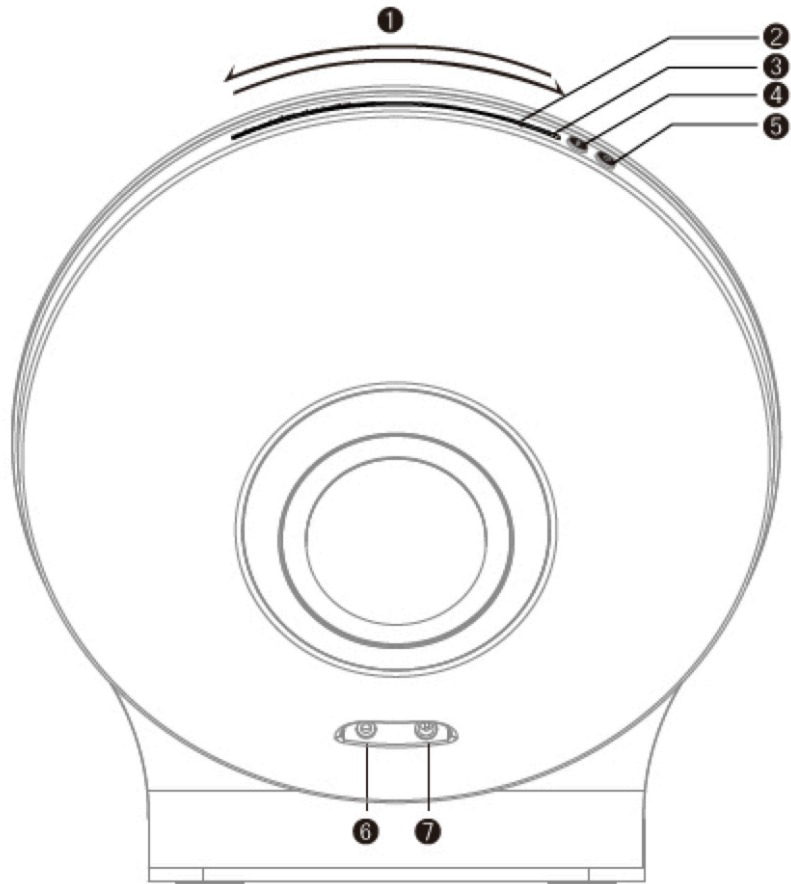

OPERATION

Charging up your Speaker

1. Connect the provided power pack & power cable together.
2. Locate the charging input (7) on the Infinity speaker.
3. Make sure that the Charging Input (7) is clear of any obstruction (dirt/dust etc).
4. Plug the Power pack connector end into Infinity Speaker's Charging Input (7), making sure to lightly push it in (do not push with excessive force).
5. Connect the AU plug end of the Power pack into the wall outlet, making sure to lightly push it in (do not push with excessive force).
6. Turn power on at the wall socket. A small LED will illuminate on the next to the Touch control bar indicating that it is charging up successfully. The small LED will extinguish when the Infinity speaker is fully charged and is ready to be used.
7. To stop charging simply switch off from the wall socket or remove your charging cable from the Infinity Speaker Charging input (7).
8. If the Infinity speaker sits idle charging, not paired or connected & not playing music, it will automatically turn itself off to conserve power after 10 minutes.

Powering On

1. Locate the Power On/Off button on the top of the Infinity speaker (5).
2. Press the Power On/Off button (5) to turn on.
3. The Infinity speaker will make an audible sound and immediately activate pairing mode. The working Status LED (3) will breathe in two second intervals.

Powering Off

1. Locate the Power On/Off button on the top of the Infinity speaker (5).
2. Press the Power On/Off button (5) once to turn on.
3. The Infinity speaker will make an audible sound and shut down. If still charging the working LED will remain on (3).

Pairing (first time)

1. Follow 'Powering On' directions from step 1 to 3.
2. Locate your Bluetooth settings menu on your device and make sure it is on. Search for your specific '3SIXT infinity' speaker.
3. Once located select the Infinity Speaker and auto pairing should occur. If prompted for a password, input "0000".
4. If successfully paired the Infinity speaker will make an audible sound and the working status LED (3) will remain solid.

Unpairing

1. Locate your Bluetooth settings menu on your device and search for '3SIXT infinity'.
2. Locate the settings or information setting within your paired device and select "unpair or forget this device".
4. The Infinity Speaker will make an audible sound to indicate it has unpaired and will resume pairing mode with the working status LED (3) breathing in two second intervals.



Volume Up

1. Locate working status LED adjustment bar (3) on the top of the Infinity Speaker.
2. Press your finger down on '-' icon and slide it across the opposite side towards the '+' icon to increase the volume manually to the setting you desire. Alternatively, you can control the volume up via your device.

Volume Down

1. Locate working status LED adjustment bar (3) on the top of the Infinity Speaker.
2. Press your finger down on '+' icon and slide it across the opposite side towards the '-' icon to decrease the volume manually to the setting you desire. Alternatively, you can control the volume up via your device.

Taking an Incoming Call

1. Locate the BT/Call/Pause Button (4) on the top of the Infinity Speaker.
2. Press the BT/Call/Pause Button (4) once to pick up the call.

Rejecting an Incoming Call

1. Locate the BT/Call/Pause Button (4) on the top of the Infinity Speaker.
2. Long press the BT/Call/Pause Button (4) to reject the incoming call.

Call Last Number

1. Locate the BT/Call/Pause Button (4) on the top of the Infinity Speaker.
2. Double press the BT/Call/Pause Button (4) to call the last dialed number on the connected device.

SPECIFICATIONS

Item/Model Number:	3S-1667
Input:	19V / 3A
Output:	60W
BT Version:	CSR 4.0
BT Range:	>10m
Ingress Rating:	IPX4
Freq Response:	40HZ-19KHZ
Impedance:	4Ω
SNR:	>85dB
Distortion:	<2%
Battery Capacity:	2,200mAh
Recharge Time:	<2HRS
Play Time:	Approx. 6Hrs
Operating Temperature:	0 °C - +40 °C
Materials:	Aluminium/Fabric/PC
Product Dimensions (H*W*D):	282*293*167mm
Product Weight:	2903g

