

Operating Instructions

EN | 3S-1648 3SIXT Bluetooth Sports Earbuds

INCLUSIONS:

Bluetooth Sports Earbuds
USB-A to Micro USB Cable
3SIXT Global Warranty Document

WARNINGS

- Read all instructions and warnings before using this product. Improper use of this product may result in product damage, excessive heat, toxic fumes, fire or explosion, for which damages you ("Purchaser") and not 3SIXT ("Manufacturer") are responsible.
- Do not store the accessory in a high-temperature environment, including heat caused by intense sunlight or other forms of heat (heaters etc.).
- Do not place the device in fire or other extremely hot environments.
- Do not disassemble or modify this accessory in any manner.
- Do not attempt to power this device using any other method than as instructed explicitly in this user guide.
- This accessory is intended for adults and not minors. Failure not to follow these warnings is the sole responsibility of the purchaser, who agrees to indemnify the Manufacturer ("3SIXT") for any unintended use/misuse by a minor.
- All products must pass through a thorough quality inspection at the time of manufacture. However, if you find that your device is excessively hot, is found to be deformed outside its regular appearance or is emitting smoke, immediately stop using the device and contact 3SIXT.

© 2020 3SIXT. All rights reserved.

This product may be covered by one or more patents or pending patent applications. Designed in Australia by 3SIXT. 23/136 Keys Road, Cheltenham VIC 3192 Australia.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

MADE IN CHINA



www.3sixtgear.com
or visit www.3sixtgear.com/support



3SIXTgear

NAME PARTS

- 1. MF (Multi-Function) Button
- 2. Microphone
- 3. Volume Up/Skip Forward
- 4. Volume Down/Skip Backwards
- 5. Charging Port Cover
- 6. Silicone Gel Pads
- 7. Indicator Lights



www.3sixtgear.com
or visit www.3sixtgear.com/support



3SIXTgear

OPERATION

Charging up your Bluetooth Sports Earbuds

1. Locate the provided USB-A to Micro USB Cable.
2. Locate the Micro USB input (5) on the Bluetooth Sports Earbuds.
3. Make sure that the Micro USB input (5) is clear of obstruction (dirt/dust etc).
4. Plug the USB-A end of the cable into your BYO wall or car charger making sure to lightly push it in (do not push with excessive force).
5. Plug the Micro USB end into the Bluetooth Sports Earbuds USB input (5) and push home making sure it is connected (do not push with excessive force).
6. Turn power on at the power source. A small red LED will illuminate next to the Micro USB port indicating that it is charging successfully. When fully charged, the LED will change to blue.
7. To stop charging simply remove your charging cable from the Bluetooth Sports Earbuds Micro USB port (5) or turn off at the wall charger. Make sure to replace the charging port cover (5) to keep the unit sealed from water ingress.

Powering On

1. Press and hold the MF button (1) for 2 seconds to turn on.
2. The Bluetooth Sports Earbuds will make an audible sound and immediately activate pairing mode.

Powering Off

1. Press and hold the MF button (1) for 3 seconds to turn off.
2. The Bluetooth Sports Earbuds will make an audible sound and shut down.

Pairing (first time)

1. Follow 'Powering On' directions from step 1 to 2.
2. Locate your Bluetooth settings menu on your device and make sure it is on. Search for your specific '3SIXT Sport Earbuds'.
3. Once located select the Bluetooth Sports Earbuds and auto pairing should occur. If prompted for a password, input "0000".
4. If successfully paired the Bluetooth Sports Earbuds will make an audible sound.

Unpairing

1. Locate your Bluetooth settings menu on your device and search for '3SIXT Sport Earbuds'.
2. Locate the settings or information setting within your paired device and select "unpair or forget this device".
3. The Bluetooth Sports Earbuds will make an audible sound to indicate it has unpaired and will resume pairing mode with the LED next to the Power On/Off button flashing 1 second On/Off

Volume Up & Down

1. Locate Volume Up/Skip Forward or Volume Down/Skip Back button (3 or 4)
2. Long press the volume Up or Volume Down button to adjust the volume to the setting you desire.

Skip Forward & Back

1. Locate Volume Up/Skip Forward or Volume Down/Skip Back button (3 or 4)
2. Short press your preferred button to either skip forward or back to the next tune.



www.3sixtgear.com
or visit www.3sixtgear.com/support



3SIXTgear

Taking an Incoming Call

1. Press the MF button (1) once

Rejecting an Incoming Call

1. Long press the MF button (1) until the call is dismissed on your paired device.

Calling Back Last Outgoing Caller

1. Double Press the MF button (1) on the Bluetooth Sports Earbuds and your device will initiate a call to the most recent outgoing call made from the device

Factory Reset

1. Unpair the Bluetooth Sports Earbuds from all devices using the Unpairing instructions
2. Place the Bluetooth Sports Earbuds on charge
2. Long press the MF (1) button for 10 seconds
3. A solid red light and a blue flashing light will appear (7) to indicate completion of the factory reset

SPECIFICATIONS

Item/Model Number:	3S-1648
Input:	5V/1A
BT Version:	5.0
BT Range:	10m
Ingress Rating:	IPX4
Battery Capacity:	55mAh
Recharge Time:	1hr
Play Time:	4hrs
Operating Temperature:	-10°C ~ +40°C



www.3sixtgear.com
or visit www.3sixtgear.com/support



3SIXTgear